

# Installation, Start-Up and Service Instructions

## CONTENTS

	Page
<b>SAFETY CONSIDERATIONS</b> .....	1
<b>INSTALLATION</b> .....	1-36
<b>Step 1 — Provide Unit Support</b> .....	1
• ROOF CURB	
• SLAB MOUNT	
• ALTERNATE UNIT SUPPORT	
<b>Step 2 — Field Fabricate Ductwork</b> .....	2
<b>Step 3 — Install External Trap for Condensate Drain</b> .....	4
<b>Step 4 — Rig and Place Unit</b> .....	4
• POSITIONING	
<b>Step 5 — Install Flue Hood</b> .....	5
<b>Step 6 — Install Gas Piping</b> .....	5
<b>Step 7 — Make Electrical Connections</b> .....	5
• FIELD POWER SUPPLY	
• FIELD CONTROL WIRING	
• HEAT ANTICIPATOR SETTINGS	
<b>Step 8 — Adjust Factory-Installed Options</b> .....	13
• COBRA™ ENERGY RECOVERY UNITS	
• HUMIDI-MIZER™ ADAPTIVE DEHUMIDIFICATION SYSTEM	
• MANUAL OUTDOOR-AIR DAMPER	
• CONVENIENCE OUTLET	
• NOVAR CONTROLS	
• PREMIERLINK™ CONTROL	
• OPTIONAL ECONOMISER IV AND ECONOMISER2	
• ECONOMISER IV STANDARD SENSORS	
• ECONOMISER IV CONTROL MODES	
<b>Step 9 — Adjust Evaporator-Fan Speed</b> .....	25
<b>PRE-START-UP</b> .....	37
<b>START-UP</b> .....	37-42
<b>SERVICE</b> .....	42-48
<b>TROUBLESHOOTING</b> .....	49-53
<b>INDEX</b> .....	54
<b>START-UP CHECKLIST</b> .....	CL-1

## SAFETY CONSIDERATIONS

Installation and servicing of air-conditioning equipment can be hazardous due to system pressure and electrical components. Only trained and qualified service personnel should install, repair, or service air-conditioning equipment.

Untrained personnel can perform basic maintenance functions of cleaning coils and filters and replacing filters. All other operations should be performed by trained service personnel. When working on air-conditioning equipment, observe precautions in the literature, tags and labels attached to the unit, and other safety precautions that may apply.

Follow all safety codes. Wear safety glasses and work gloves. Use quenching cloth for unbrazing operations. Have fire extinguishers available for all brazing operations.

## ⚠ WARNING

Before performing service or maintenance operations on unit, turn off main power switch to unit and install lockout tag. Ensure electrical service to rooftop unit agrees with voltage and amperage listed on the unit rating plate. Electrical shock could cause personal injury.

## ⚠ WARNING



Disconnect gas piping from unit when leak testing at pressure greater than 1/2 psig. Pressures greater than 1/2 psig will cause gas valve damage resulting in hazardous condition. If gas valve is subjected to pressure greater than 1/2 psig, it *must* be replaced before use. When pressure testing field-supplied gas piping at pressures of 1/2 psig or less, a unit connected to such piping must be isolated by manually closing the gas valve(s).

## INSTALLATION

Unit is shipped in the vertical discharge configuration. To convert to horizontal discharge application, remove duct opening covers. Using the same screws, install covers on duct openings in basepan of unit with insulation-side down. Seals around openings must be tight. See Fig. 1.

### Step 1 — Provide Unit Support

**ROOF CURB** — Assemble and install accessory roof curb in accordance with instructions shipped with curb. See Fig. 2. Install insulation, cant strips, roofing felt, and counter flashing as shown. *Ductwork must be attached to curb, not to the unit.* If electric control power or gas service is to be routed through the basepan, attach the accessory thru-the-bottom service connections to the basepan in accordance with the accessory installation instructions. Connections must be installed before unit is set on roof curb.

**IMPORTANT:** The gasketing of the unit to the roof curb is critical for a watertight seal. Install gasket supplied with the roof curb as shown in Fig. 2. Improperly applied gasket can result in air leaks and poor unit performance.

Curb should be level. Unit leveling tolerances are shown in Fig. 3. This is necessary for unit drain to function properly. Refer to Accessory Roof Curb Installation Instructions for additional information as required.

**SLAB MOUNT (Horizontal Units Only)** — Provide a level concrete slab that extends a minimum of 6 in. beyond unit cabinet. Install a gravel apron in front of condenser-coil air inlet to prevent grass and foliage from obstructing airflow.

**NOTE:** Horizontal units may be installed on a roof curb if required.

**ALTERNATE UNIT SUPPORT** — When the curb or adapter cannot be used, support unit with sleeper rails using unit curb or adapter support area. If sleeper rails cannot be used, support the long sides of the unit with a minimum of 3 equally spaced 4-in. x 4-in. pads on each side.

**Step 2 — Field Fabricate Ductwork** — Secure all ducts to roof curb and building structure on vertical discharge units. *Do not connect ductwork to unit.* For horizontal applications, field-supplied isolation flanges should be attached to horizontal discharge openings and all ductwork should be secured to the flanges. Insulate and weatherproof all external ductwork, joints, and roof openings with counter flashing and mastic in accordance with applicable codes.


Ducts passing through an unconditioned space must be insulated and covered with a vapor barrier.

If a plenum return is used on a vertical unit, the return should be ducted through the roof deck to comply with applicable fire codes.

A minimum clearance is not required around ductwork. Cabinet return-air static pressure (a negative condition) shall not exceed 0.35 in. wg with economizer or 0.45 in. wg without economizer.

These units are designed for a minimum continuous return-air temperature in heating of 50 F (dry bulb), or an intermittent operation down to 45 F (dry bulb), such as when used with a night setback thermostat.

To operate at lower return-air temperatures, a field-supplied outdoor air temperature control must be used to initiate both stages of heat when the temperature is below 45 F. Indoor comfort may be compromised when these lower air temperatures are used with insufficient heating temperature rise.

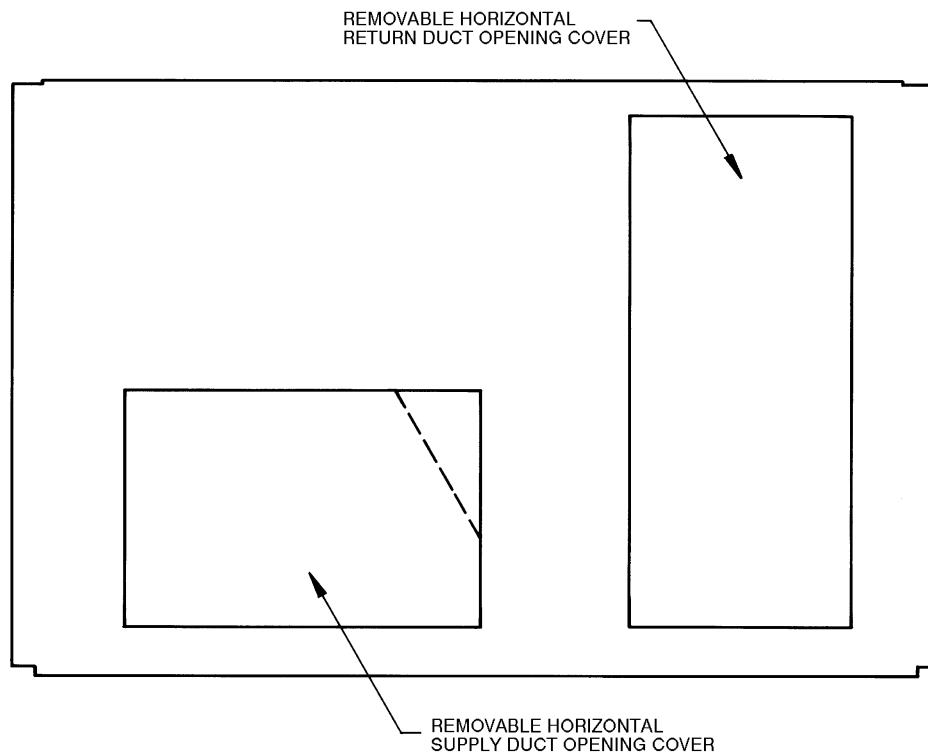


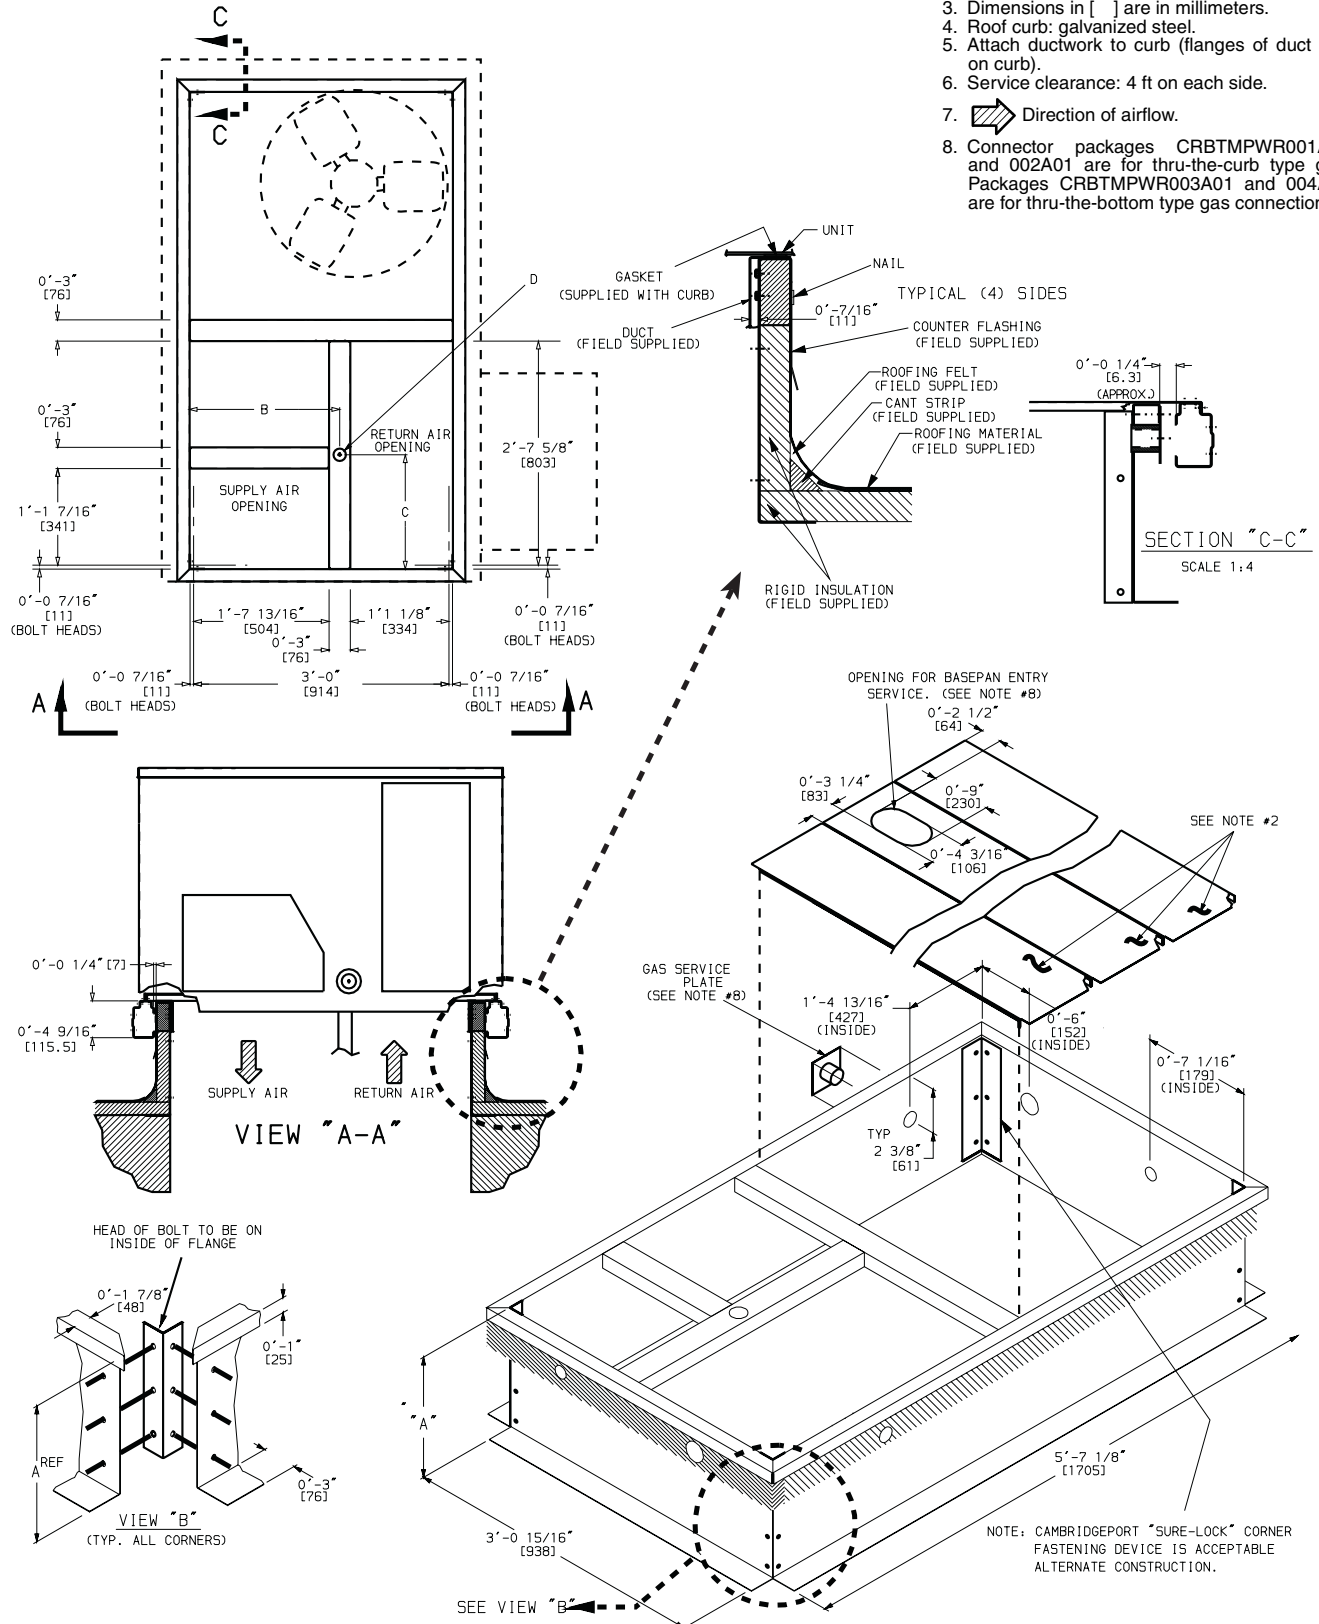
**Fig. 1 — Horizontal Conversion Panels**


CONNECTOR PKG. ACCY.	B	C	D ALT DRAIN HOLE	GAS	POWER	CONTROL	ACCESSORY POWER
CRBTMPWR001A01				3/4" [19] NPT	3/4" [19] NPT		
CRBTMPWR002A01				1 1/4" [31.7]	1 1/4" [31.7]		
CRBTMPWR003A01	1'-9 11/16" [551]	1'-4" [406]	1 3/4" [44.5]	1/2" [12.7] NPT	3/4" [19] NPT	1/2" [12.7]	1/2" [12.7]
CRBTMPWR004A01				3/4" [19] NPT	1 1/4" [31.7]		

ROOF CURB ACCESSORY	A	UNIT SIZE
CRRFCURB001A01	1'-2" [356]	48HJ
CRRFCURB002A01	2'-0" [610]	004-007

**NOTES:**

1. Roof curb accessory is shipped disassembled.
2. Insulated panels.
3. Dimensions in [ ] are in millimeters.
4. Roof curb: galvanized steel.
5. Attach ductwork to curb (flanges of duct rest on curb).
6. Service clearance: 4 ft on each side.
7.  Direction of airflow.
8. Connector packages CRBTMPWR001A01 and 002A01 are for thru-the-curb type gas. Packages CRBTMPWR003A01 and 004A01 are for thru-the-bottom type gas connections.



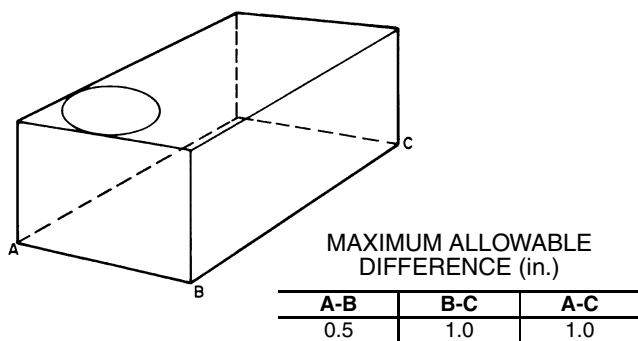

**Fig. 3 — Unit Leveling Tolerances**

### Step 3 — Install External Trap for Condensate Drain

The unit's  $\frac{3}{4}$ -in. condensate drain connections are located on the bottom and side of the unit. Unit discharge connections do not determine the use of drain connections; either drain connection can be used with vertical or horizontal applications.


When using the standard side drain connection, ensure the plug (Red) in the alternate bottom connection is tight before installing the unit.

To use the bottom drain connection for a roof curb installation, relocate the factory-installed plug (Red) from the bottom connection to the side connection. The center drain plug looks like a star connection, however it can be removed with a  $\frac{1}{2}$ -in. socket drive extension. See Fig. 4. The piping for the condensate drain and external trap can be completed after the unit is in place.

All units must have an external trap for condensate drainage. Install a trap 4-in. deep and protect against freeze-up. If drain line is installed downstream from the external trap, pitch the line away from the unit at 1 in. per 10 ft of run. Do not use a pipe size smaller than the unit connection ( $\frac{3}{4}$  in.). See Fig. 5.

**Step 4 — Rig and Place Unit** — Inspect unit for transportation damage, and file any claim with transportation agency. Keep unit upright and do not drop. Spreader bars are not required if top crating is left on unit, and rollers may be used to move unit across a roof. Level by using unit frame as a reference. See Table 1 and Fig. 6 for additional information. Operating weight is shown in Table 1 and Fig. 6.

Lifting holes are provided in base rails as shown in Fig. 7. Refer to rigging instructions on unit.

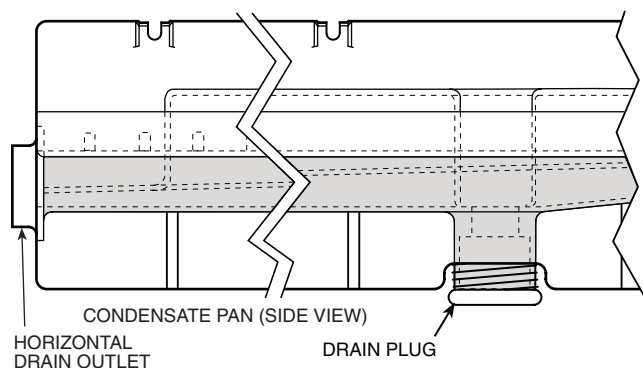

NOTE: Drain plug is shown in factory-installed position.

**Fig. 4 — Condensate Drain Pan**

**⚠ CAUTION**

All panels must be in place when rigging and lifting.

**POSITIONING** — Maintain clearance around and above unit to provide minimum distance from combustible materials, proper airflow, and service access. See Fig. 7.

Position unit on roof curb so that the following clearances are maintained:  $\frac{1}{4}$  in. clearance between the roof curb and the base rail inside the front and rear, 0.0 in. clearance between the roof curb and the base rail inside on the duct end of the unit. This will result in the distance between the roof curb and the base rail inside on the condenser end of the unit being approximately equal to Fig. 2, section C-C.

Do not install unit in an indoor location. Do not locate unit air inlets near exhaust vents or other sources of contaminated air.

Be sure that unit is installed such that snow will not block the combustion intake or flue outlet.

Unit may be installed directly on wood flooring or on Class A, B, or C roof-covering material when roof curb is used.

Although unit is weatherproof, guard against water from higher level runoff and overhangs.

Locate mechanical draft system flue assembly at least 48 in. from an adjacent building or combustible material. When unit is located adjacent to public walkways, flue assembly must be at least 7 ft above grade.


NOTE: When unit is equipped with an accessory flue discharge deflector, allowable clearance is 18 inches.

Flue gas can deteriorate building materials. Orient unit such that flue gas will not affect building materials.

Adequate combustion-air space must be provided for proper operation of this equipment. Be sure that installation complies with all local codes and Section 5.3, Air for Combustion and Ventilation, NFGC (National Fuel Gas Code), ANSI (American National Standards Institute) Z223.1-1984 and addendum Z223.1a-1987. In Canada, installation must be in accordance with the CAN1.B149.1 and CAN1.B149.2 installation codes for gas burning appliances.


Flue vent discharge must have a minimum horizontal clearance of 4 ft from electric and gas meters, gas regulators, and gas relief equipment.

After unit is in position, remove shipping materials and rigging skids.

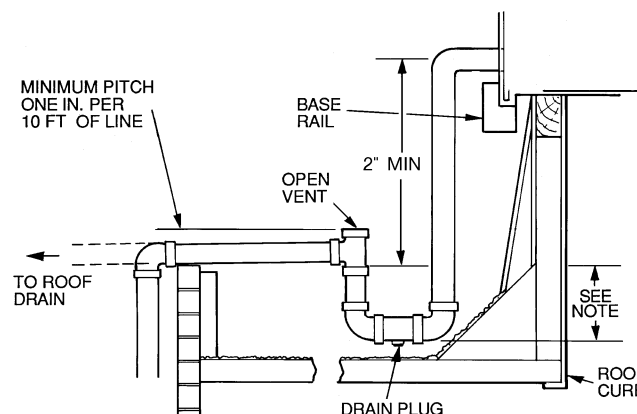

NOTE: Trap should be deep enough to offset maximum unit static difference. A 4-in. trap is recommended.

**Fig. 5 — Condensate Drain Piping Details**

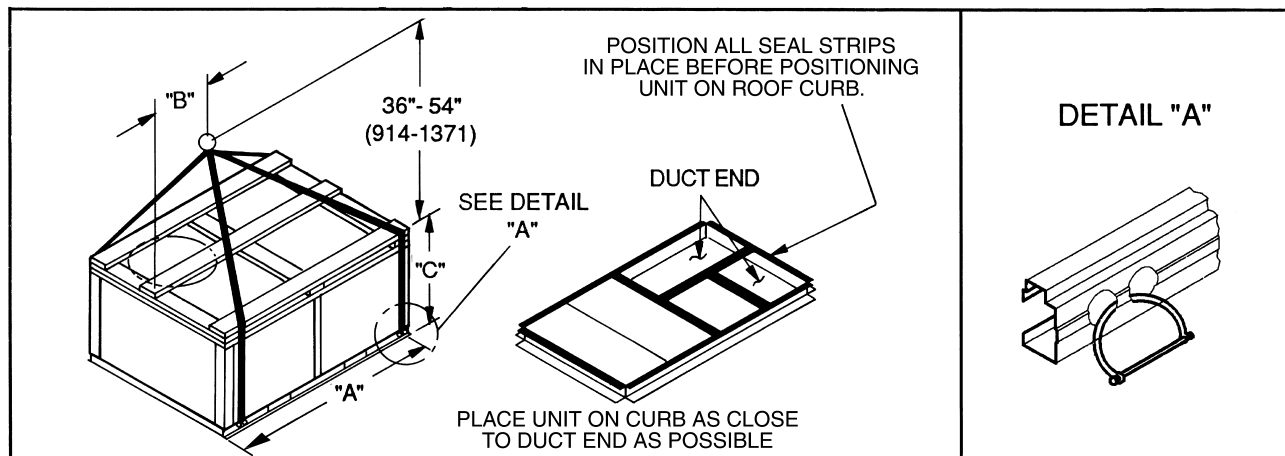

#### NOTES:

1. Place unit on curb as close as possible to the duct end.
2. Dimension in ( ) is in millimeters.
3. Hook rigging shackles through holes in base rail as shown in detail "A." Holes in base rails are centered around the unit center of gravity. Use wooden top skid when rigging to prevent rigging straps from damaging unit.
4. Weights include base unit without economizer. See Table 1 for unit operating weights with accessory economizer.
5. Weights include base unit without the Humidi-MiZer™ adaptive dehumidification system. See Table 1 for unit operating weights with the Humidi-MiZer system.

⚠ CAUTION								
All panels must be in place when rigging.								
UNIT 48HJ	OPERATING WEIGHT		"A"		"B"		"C"	
	lb	kg	in.	mm	in.	mm	in.	mm
004	530	240	73.69	1872	35.50	902	33.31	847
005	540	245	73.69	1872	35.50	902	33.31	847
006	560	254	73.69	1872	35.50	902	33.31	847
007	635	288	73.69	1872	35.50	902	33.31	847

**Fig. 6 — Rigging Details**

**Step 5 — Install Flue Hood** — Flue hood is shipped screwed to the burner compartment access panel. Remove from shipping location and, using screws provided, install flue hood in location shown in Fig. 7 and 8.

For units being installed in California Air Quality Management Districts which require NOx emissions of 40 nanograms/joule or less, a low NOx unit must be installed.

NOTE: Low NOx units are available for 3 to 5 ton units.

**Step 6 — Install Gas Piping** — Unit is equipped for use with type of gas shown on nameplate. Refer to local building codes, or in the absence of local codes, to ANSI Z223.1-1984 and addendum Z223.1A-1987 entitled National Fuel Gas Code. In Canada, installation must be in accordance with the CAN1.B149.1 and CAN1.B149.2 installation codes for gas burning appliances.

For natural gas applications, gas pressure at unit gas connection must not be less than 4 in. wg or greater than 13 in. wg while the unit is operating. On 48HJ005-007 high-heat units, the gas pressure at unit gas connection must not be less than 5 in. wg or greater than 13 in. wg while the unit is operating. For propane applications, the gas pressure must not be less than 5 in. wg or greater than 13 in. wg at the unit connection.

Size gas supply piping for 0.5 in. wg maximum pressure drop. Do not use supply pipe smaller than unit gas connection.

Support gas piping as shown in the table in Fig. 9. For example, a 3/4-in. gas pipe must have one field-fabricated support beam every 8 ft. Therefore, an 18-ft long gas pipe would have a minimum of 3 support beams, and a 48-ft long pipe would have a minimum of 6 support beams.

See Fig. 9 for typical pipe guide and locations of external manual gas shutoff valve.

NOTE: If accessory thru-the-bottom connections and roof curb are used, refer to the Thru-the-Bottom Accessory Installation Instructions for information on power wiring and gas connection piping. The power wiring, control wiring and gas

piping can be routed through field-drilled holes in the basepan. The basepan is specially designed and dimpled for drilling the access connection holes.

⚠ CAUTION	
When connecting the gas line to the unit gas valve, the installer <b>MUST</b> use a backup wrench to prevent damage to the valve.	

#### Step 7 — Make Electrical Connections

⚠ WARNING	
Unit cabinet must have an uninterrupted, unbroken electrical ground to minimize the possibility of personal injury if an electrical fault should occur. This ground may consist of electrical wire connected to unit ground lug in control compartment, or conduit approved for electrical ground when installed in accordance with NEC (National Electrical Code), ANSI/NFPA (National Fire Protection Association), latest edition, and local electrical codes. <i>Do not use gas piping as an electrical ground.</i> Failure to follow this warning could result in the installer being liable for personal injury of others.	

**FIELD POWER SUPPLY** — All units except 208/230-v units are factory wired for the voltage shown on the nameplate. If the 208/230-v unit is to be connected to a 208-v power supply, the transformer *must* be rewired by moving the black wire from the 230-v terminal on the transformer and connecting it to the 200-v terminal from the transformer.

Refer to unit label diagram for additional information. Pigtailed are provided for field service. Use factory-supplied splices or UL (Underwriters' Laboratories) approved copper connector.

UNIT	STD. UNIT WEIGHT LB KG	ECONOMIZER W/P.E. WEIGHT LB KG	VERT. ECONOMIZER WGT. LB KG	(A) CORNER WEIGHT LB KG	(B) CORNER WEIGHT LB KG	(C) CORNER WEIGHT LB KG	(D) CORNER WEIGHT LB KG	FT - IN.	MM							
48HJ004	530	240	50	22.7	90	40.9	127	57.6	122	55.3	138	62.6	143	64.9	2'-9 5/16"	846.5
48HJ005	540	245					129	58.5	124	56.2	141	64.0	146	66.2		
48HJ006	560	254					134	60.8	129	58.5	146	66.2	151	68.5		
48HJ007	635	288					152	68.9	147	66.7	165	74.8	171	77.5	3'-5 5/16"	1050

NOTES:

1. DIMENSIONS IN [ ] ARE IN MILLIMETERS.

2. ⦿ CENTER OF GRAVITY.

3. ➡ DIRECTION OF AIR FLOW.

4. ON VERTICAL DISCHARGE UNITS, DUCTWORK TO BE ATTACHED TO ACCESSORY ROOF CURB ONLY. FOR HORIZONTAL DISCHARGE UNITS FIELD SUPPLIED FLANGES SHOULD BE ATTACHED TO HORIZONTAL DISCHARGE OPENINGS, AND ALL DUCTWORK SHOULD BE ATTACHED TO THE FLANGES.

5. MINIMUM CLEARANCE (LOCAL CODES OR JURISDICTION MAY PREVAIL):

a. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

b. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

c. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

d. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

e. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

f. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

g. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

h. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

i. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

j. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

k. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

l. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

m. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

n. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

o. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

p. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

q. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

r. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

s. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

t. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

u. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

v. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

w. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

x. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

y. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

z. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

aa. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

ab. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

ac. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

ad. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

ae. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

af. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

ag. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

ah. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

ai. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

aj. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

ak. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

al. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

am. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

an. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

ao. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

ap. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

aq. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

ar. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

as. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

at. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

au. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

av. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

aw. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

ax. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

ay. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

az. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

ba. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

bb. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

bc. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

bd. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.


be. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.

bf. BETWEEN UNIT, FLUE SIDE AND COMBUSTIBLE SURFACES, 12 INCHES.


CONNECTION SIZES
A 1 3/8" DIA. [35] FIELD POWER SUPPLY HOLE
B 2" DIA. [51] POWER SUPPLY KNOCK-OUT
C 1 3/4" DIA. [44] CHARGING PORT HOLE
D 7/8" DIA. [23] FIELD CONTROL WIRING HOLE
E 3/4" -14 NPT CONDENSATE DRAIN
F 1/2" -14 NPT GAS CONNECTION
G 2 1/2" DIA. [64] POWER SUPPLY KNOCK-OUT

BOTTOM POWER CHART: THESE UNITS ARE DESIGNED FOR USE WITH ACCESSORY PACKAGES 4A01 CRBTPAR001, 2A01, 3A01, 4A01			
CONDUIT SIZE	WIDE USE	ACC. USE	REAR'D HOLE
1/2"	7/8" [22.2]	1" [25.4]	1 1/8" [31.8]
3/4"	1 1/8" [31.8]	1 1/4" [38.1]	1 3/4" [44.4]
1 1/4"	1 3/4" [44.4]	2" [50.8]	2 1/4" [60.3]
2"	2 1/4" [60.3]	2 3/4" [66.7]	3" [76.2]
2 1/2"	3" [76.2]	3 1/4" [82.5]	3 3/4" [88.9]
3"	3 3/4" [88.9]	4" [101.6]	4 1/4" [111.8]
3 1/2"	4 1/4" [111.8]	4 3/4" [119.4]	5" [127]
4"	5" [127]	5 1/4" [136.5]	5 3/4" [144.8]
4 1/2"	5 3/4" [144.8]	6" [152.4]	6 1/4" [162.7]
5"	6" [152.4]	6 3/4" [167.6]	7" [177.8]
5 1/2"	6 3/4" [167.6]	7 1/4" [188]	7 3/4" [195.5]
6"	7 1/4" [188]	8" [203.2]	8 1/4" [213.3]
6 1/2"	8" [203.2]	8 3/4" [218.4]	9" [228.6]
7"	8 3/4" [218.4]	9 1/4" [238]	9 3/4" [248.3]
7 1/2"	9 1/4" [238]	10" [254]	10 1/4" [264.1]
8"	10" [254]	10 3/4" [271.5]	11" [279.4]
8 1/2"	10 3/4" [271.5]	11 1/4" [289.9]	11 3/4" [299.7]
9"	11 1/4" [289.9]	12" [304.8]	12 1/4" [314.6]
9 1/2"	12" [304.8]	12 3/4" [320]	13" [330.2]
10"	12 3/4" [320]	13 1/4" [341.3]	13 3/4" [351.5]
10 1/2"	13 1/4" [341.3]	14" [354.1]	14 1/4" [364.1]
11"	14" [354.1]	14 3/4" [371.5]	15" [381.1]
11 1/2"	14 3/4" [371.5]	15 1/4" [388]	15 3/4" [398.3]
12"	15 1/4" [388]	16" [406.4]	16 1/4" [416.5]
12 1/2"	16" [406.4]	16 3/4" [421.9]	17" [431.8]
13"	16 3/4" [421.9]	17 1/4" [441.3]	17 3/4" [451.5]
13 1/2"	17 1/4" [441.3]	18" [457.2]	18 1/4" [467.4]
14"	18" [457.2]	18 3/4" [472.6]	19" [487.9]
14 1/2"	18 3/4" [472.6]	19 1/4" [492.7]	19 3/4" [502.9]
15"	19 1/4" [492.7]	20" [508]	20 1/4" [518.1]
15 1/2"	20" [508]	20 3/4" [523.2]	21" [533.4]
16"	20 3/4" [523.2]	21 1/4" [543.3]	21 3/4" [553.5]
16 1/2"	21 1/4" [543.3]	22" [568.4]	22 1/4" [578.6]
17"	22" [568.4]	22 3/4" [583.6]	23" [593.9]
17 1/2"	22 3/4" [583.6]	23 1/4" [593.9]	23 3/4" [604.1]
18"	23 1/4" [593.9]	24" [609.6]	24 1/4" [619.7]
18 1/2"	24" [609.6]	24 3/4" [625]	25" [640.2]
19"	24 3/4" [625]	25 1/4" [640.2]	25 3/4" [650.4]
19 1/2"	25 1/4" [640.2]	26" [660.4]	26 1/4" [670.6]
20"	26" [660.4]	26 3/4" [675.6]	27" [691.1]
20 1/2"	26 3/4" [675.6]	27 1/4" [696.7]	27 3/4" [706.9]
21"	27 1/4" [696.7]	28" [717.2]	28 1/4" [727.4]
21 1/2"	28" [717.2]	28 3/4" [732.6]	29" [742.9]
22"	28 3/4" [732.6]	29 1/4" [747.7]	29 3/4" [757.9]
22 1/2"	29 1/4" [747.7]	30" [768.2]	30 1/4" [778.3]
23"	30" [768.2]	30 3/4" [783.4]	31" [803.6]
23 1/2"	30 3/4" [783.4]	31 1/4" [798.6]	31 3/4" [808.8]
24"	31 1/4" [798.6]	32" [819.2]	32 1/4" [829.4]
24 1/2"	32" [819.2]	32 3/4" [834.4]	33" [854.7]
25"	32 3/4" [834.4]	33 1/4" [849.6]	33 3/4" [859.9]
25 1/2"	33 1/4" [849.6]	34" [870.1]	34 1/4" [880.3]
26"	34" [870.1]	34 3/4" [885.4]	35" [905.6]
26 1/2"	34 3/4" [885.4]	35 1/4" [900.6]	35 3/4" [910.8]
27"	35 1/4" [900.6]	36" [921.2]	36 1/4" [931.4]
27 1/2"	36" [921.2]	36 3/4" [936.4]	37" [951.9]
28"	36 3/4" [936.4]	37 1/4" [951.9]	37 3/4" [962.1]
28 1/2"	37 1/4" [951.9]	38" [972.4]	38 1/4" [982.6]
29"	38" [972.4]	38 3/4" [987.6]	39" [1003]
29 1/2"	38 3/4" [987.6]	39 1/4" [1002.7]	39 3/4" [1012.9]
30"	39 1/4" [1002.7]	40" [1023.2]	40 1/4" [1033.4]
30 1/2"	40" [1023.2]	40 3/4" [1038.4]	41" [1053.6]
31"	40 3/4" [1038.4]	41 1/4" [1053.5]	41 3/4" [1063.7]
31 1/2"	41 1/4" [1053.5]	42" [1074.1]	42 1/4" [1079.3]
32"	42" [1074.1]	42 3/4" [1089.4]	43" [1104.6]
32 1/2"	42 3/4" [1089.4]	43 1/4" [1104.6]	43 3/4" [1114.8]
33"	43 1/4" [1104.6]	44" [1125]	44 1/4" [1135.1]
33 1/2"	44" [1125]	44 3/4" [1140.2]	45" [1155.4]
34"	44 3/4" [1140.2]	45 1/4" [1155.4]	45 3/4" [1165.6]
34 1/2"	45 1/4" [1155.4]	46" [1176]	46 1/4" [1186]
35"	46" [1176]	46 3/4" [1191.2]	47" [1206.4]
35 1/2"	46 3/4" [1191.2]	47 1/4" [1206.4]	47 3/4" [1216.6]
36"	47 1/4" [1206.4]	48" [1226.8]	48 1/4" [1237]
36 1/2"	48" [1226.8]	48 3/4" [1242]	49" [1257.4]
37"	48 3/4" [1242]	49 1/4" [1257.4]	49 3/4" [1267.6]
37 1/2"	49 1/4" [1257.4]	50" [1277.8]	50 1/4" [1288]
38"	50" [1277.8]	50 3/4" [1293]	51" [1308.3]
38 1/2"	50 3/4" [1293]	51 1/4" [1308.3]	51 3/4" [1318.5]
39"	51 1/4" [1308.3]	52" [1328.6]	52 1/4" [1338.8]
39 1/2"	52" [1328.6]	52 3/4" [1343.8]	53" [1359.1]
40"	52 3/4" [1343.8]	53 1/4" [1359.1]	53 3/4" [1369.3]
40 1/2"	53 1/4" [1359.1]	54" [1379.4]	54 1/4" [1389.6]
41"	54" [1379.4]	54 3/4" [1394.6]	55" [1409.9]
41 1/2"	54 3/4" [1394.6]	55 1/4" [1409.6]	55 3/4" [1419.8]
42"	55 1/4" [1409.6]	56" [1430]	56 1/4" [1440.2]
42 1/2"	56" [1430]	56 3/4" [1445.2]	57" [1460.5]
43"	56 3/4" [1445.2]	57 1/4" [1460.2]	57 3/4" [1470.4]
43 1/2"	57 1/4" [1460.2]	58" [1480.6]	58 1/4" [1490.8]
44"	58" [1480.6]	58 3/4" [1495.7]	59" [1511.1]
44 1/2"	58 3/4" [1495.7]	59 1/4" [1511.1]	59 3/4" [1521.3]
45"	59 1/4" [1511.1]	60" [1531.4]	60 1/4" [1541.6]
45 1/2"	60" [1531.4]	60 3/4" [1546.6]	61" [1561.9]
46"	60 3/4" [1546.6]	61 1/4" [1561.6]	61 3/4" [1571.8]
46 1/2"	61 1/4" [1561.6]	62" [1582]	62 1/4" [1592.1]
47"	62" [1582]	62 3/4" [1597.2]	63" [1612.4]
47 1/2"	62 3/4" [1597.2]	63 1/4" [1612.4]	63 3/4" [1622.6]
48"	63 1/4" [1612.4]	64" [1632.8]	64 1/4" [1643]
48 1/2"	64" [1632.8]	64 3/4" [1647.9]	65" [1663.3]
49"	64 3/4" [1647.9]	65 1/4" [1662.7]	65 3/4" [1672.9]
49 1/2"	65 1/4" [1662.7]	66" [1683.2]	66 1/4" [1693.4]
50"	66" [1683.2]	66 3/4" [1698.4]	67" [1713.7]
50 1/2"	66 3/4" [1698.4]	67 1/4" [1703.2]	67 3/4" [1713.3]
51"	67 1/4" [1703.2]	68" [1723.6]	68 1/4" [1733.8]
51 1/2"	68" [1723.6]	68 3/4" [1738.8]	69" [1754.1]
52"	68 3/4" [1738.8]	69 1/4" [1753.5]	69 3/4" [1763.7]
52 1/2"	69 1/4" [1753.5]	70" [1774]	70 1/4" [1784.1]
53"	70" [1774]	70 3/4" [1789.2]	71" [1804.6]
53 1/2"	70 3/4" [1789.2]	71 1/4" [1804.1]	71 3/4" [1814.3]
54"	71 1/4" [1804.1]	72" [1824.6]	72 1/4" [1834.8]
54 1/2"	72" [1824.6]	72 3/4" [1839.8]	73" [1855.1]
55"	72 3/4" [1839.8]	73 1/4" [1854.3]	73 3/4" [1864.8]
55 1/2"	73 1/4" [1854.3]	74" [1874.8]	74 1/4" [1885.1]
56"	74" [1874.8]	74 3/4" [1890]	75" [1905.4]
56 1/2"	74 3/4" [1890]	75 1/4" [1904.6]	75 3/4" [1914.8]
57"	75 1/4" [1904.6]	76" [1925]	76 1/4" [1935.4]
57 1/2"	76" [1925]	76 3/4" [1940.2]	77" [1955.7]



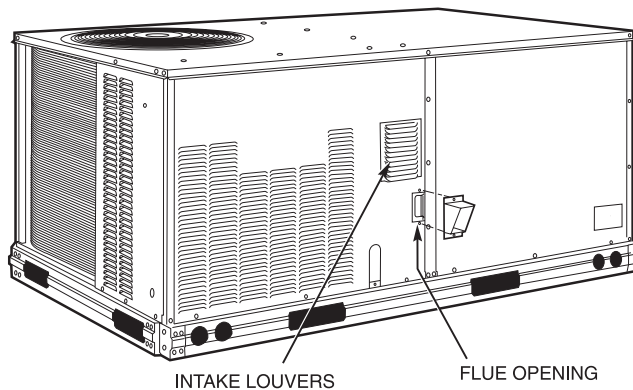

**Fig. 8 — Flue Hood Details**

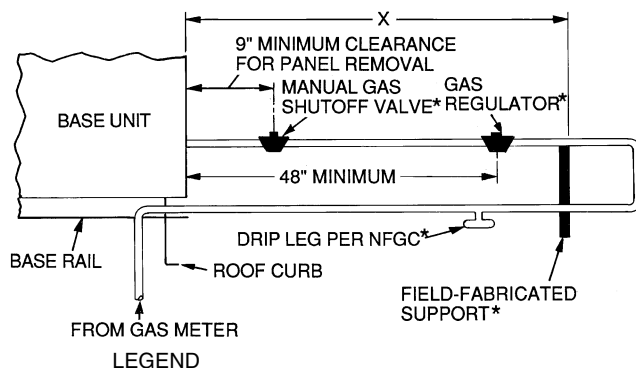

**NFGC** — National Fuel Gas Code

\*Field supplied.

NOTE: Follow all local codes.

SPACING OF SUPPORTS

STEEL PIPE NOMINAL DIAMETER (in.)	SPACING OF SUPPORTS X DIMENSION (ft)
1/2	6
3/4 or 1	8
1 1/4 or larger	10

**Fig. 9 — Gas Piping Guide (With Accessory Thru-the-Curb Service Connections)**

When installing units, provide a disconnect per NEC.

All field wiring must comply with NEC and local requirements.

Install conduit through side panel openings indicated in Fig. 7. Route power lines through connector to terminal connections as shown in Fig. 10.

Voltage to compressor terminals during operation must be within voltage range indicated on unit nameplate (also see Tables 2A-2D). On 3-phase units, voltages between phases must be balanced within 2% and the current within 10%. Use the formula shown in Tables 2A-2D, Note 3 to determine the percent voltage imbalance. Operation on improper line voltage or excessive phase imbalance constitutes abuse and may cause damage to electrical components. Such operation would invalidate any applicable Carrier warranty.

NOTE: If accessory thru-the-bottom connections and roof curb are used, refer to the Thru-the-Bottom Accessory Installation Instructions for information on power wiring and gas connection piping. The power wiring, control wiring and gas piping can be routed through field-drilled holes in the basepan. The basepan is specially designed and dimpled for drilling the access connection holes. See Fig. 2.

**FIELD CONTROL WIRING** — Install a Carrier-approved accessory thermostat assembly according to installation instructions included with the accessory. Locate thermostat assembly on a solid wall in the conditioned space to sense average temperature in accordance with thermostat installation instructions.

Route thermostat cable or equivalent single leads of colored wire from subbase terminals through connector on unit to low-voltage connections (shown in Fig. 11A and 11B).

Connect thermostat wires to matching screw terminals of low-voltage connection board. See Fig. 11A and 11B.

NOTE: For wire runs up to 50 ft, use no. 18 AWG (American Wire Gage) insulated wire (35 C minimum). For 50 to 75 ft, use no. 16 AWG insulated wire (35 C minimum). For over 75 ft, use no. 14 AWG insulated wire (35 C minimum). All wire larger than no. 18 AWG cannot be directly connected to the thermostat and will require a junction box and splice at the thermostat.

Pass the control wires through the hole provided in the corner post; then feed wires through the raceway built into the corner post to the 24-v barrier located on the left side of the control box. See Fig. 12. The raceway provides the UL required clearance between high and low-voltage wiring.

**HEAT ANTICIPATOR SETTINGS** — Set heat anticipator settings at 0.14 amp for first stage and 0.14 for second stage heating, when available.

**Table 1 — Physical Data**

BASE UNIT 48	HJE/F/H/K/M/N004	HJD/E/F/G/H/K/L/M/N005	HJD/E/F/G/H/K/L/M/N006	HJD/E/F007
NOMINAL CAPACITY	3	4	5	6
OPERATING WEIGHT (lb)				
Unit	530	540	560	635
Humidi-MiZer™ Adaptive Dehumidification System	15	23	25	29
EconoMiSer IV	50	50	50	50
Roof Curb	115	115	115	115
COMPRESSOR		Scroll		
Quantity	1	1	1	1
Oil (oz)	42	53	50	60
REFRIGERANT TYPE		R-22		
Expansion Device		Acutrol™ Metering Device		
Operating Charge (lb-oz)				
Standard Unit	5-8	10-2	10-0	12- 8
Unit With Humidi-Mizer Adaptive Dehumidification System	12-5	18-8	20-5	23-14
CONDENSER FAN		Propeller		
Quantity...Diameter (in.)	1...22	1...22	1...22	1...22
Nominal Cfm	3500	3500	4100	4100
Motor Hp...Rpm	1/4...825	1/4...825	1/4...1100	1/4...1100
Watts Input (Total)	180	180	320	320
CONDENSER COIL		Enhanced Copper Tubes, Aluminum Lanced Fins		
Rows...Fins/in.	1...17	2...17	2...17	2...17
Total Face Area (sq ft)	14.6	16.5	16.5	21.3
EVAPORATOR COIL		Enhanced Copper Tubes, Aluminum Double-Wavy Fins		
Standard Unit				
Rows...Fins/in.	2...15	2...15	4...15	4...15
Total Face Area (sq ft)	5.5	5.5	5.5	7.3
Unit with Humidi-Mizer Adaptive Dehumidification System				
Rows...Fins/in.	1...17	2...17	2...17	2...17
Total Face Area (sq ft)	3.9	3.9	3.9	5.2
EVAPORATOR FAN		Centrifugal Type, Belt Drive		
Quantity...Size (in.)	1...10 x 10	1...10 x 10	1...10 x 10	1...10 x 10
Nominal Cfm	1200	1600	2000	2400
Maximum Continuous Bhp	Std 1.20	1.20	1.30/2.40*	2.40
	Hi-Static 2.40	2.40	2.90	2.90
Motor Frame Size	Std 48	48	48/56*	56
	Hi-Static 56	56	56	56
Fan Rpm Range	Std 680-1044	770-1185	1035-1460	1119-1585
	Hi-Static 1075-1455	1075-1455	1300-1685	1300-1685
Motor Bearing Type	Ball	Ball	Ball	Ball
Maximum Fan Rpm	2100	2100	2100	2100
Motor Pulley Pitch Diameter A/B (in.)	Std 1.9/2.9	1.9/2.0	2.4/3.4	2.4/3.4
	Hi-Static 2.8/3.8	2.8/3.8	3.4/4.4	3.4/3.4
Nominal Motor Shaft Diameter (in.)	Std 1/2	1/2	5/8	5/8
	Hi-Static 5/8	5/8	5/8	7/8
Fan Pulley Pitch Diameter (in.)	Std 4.5	4.0	4.0	4.0
	Hi-Static 4.5	4.0	4.5	4.5
Belt — Type...Length (in.)	Std 1...A...36	1...A...36	1...A...40	1...A...38
	Hi-Static 1...A...39	1...A...39	1...A...40	1...A...40
Pulley Center Line Distance (in.)	10.0-12.4	10.0-12.4	14.7-15.5	14.7-15.5
Speed Change per Full Turn of	Std 65	70	75	95
Movable Pulley Flange (rpm)	Hi-Static 65	65	60	60
Movable Pulley Maximum Full	Std 5	5	6	5
Turns from Closed Position	Hi-Static 6	6	5	5
Factory Setting — Full Turns Open	Std 3	3	3	3
	Hi-Static 3 1/2	3 1/2	3 1/2	3 1/2
Factory Speed Setting (rpm)	Std 826	936	1248	1305
	Hi-Static 1233	1233	1396	1396
Fan Shaft Diameter at Pulley (in.)	5/8	5/8	5/8	5/8

**LEGEND**

**Bhp** — Brake Horsepower

\*Single phase/three phase.

†Indicates automatic reset.

\*\*60,000 and 72,000 Btuh heat input units have 2 burners. 90,000 and 120,000 Btuh heat input units have 3 burners. 115,000 Btuh heat input units and 150,000 Btuh Heat input units have 3 burners.

††An LP kit is available as an accessory. Kit may be used at elevations as high as 2000 ft. If an LP kit is used with Low NOx units, the Low NOx baffle must be removed and the units will no longer be classified as Low NOx units.

‡Three-phase standard models have heating inputs as shown. Single-phase standard models have one-stage heating with heating input values as follows:

HJD005-006,HJE004 — 72,000 Btuh

HJE005-006,HJF004 — 115,000 Btuh

HJF005-006 — 150,000 Btuh

\*\*\*California compliant three-phase models.

†††California SCAQMD compliant low NOx models have combustion products that are controlled to 40 nanograms per joule or less.



**Table 1 — Physical Data (cont)**

BASE UNIT 48	HJE/F/H/K/M/N004	HJD/E/F/G/H/K/L/M/N005	HJD/E/F/G/H/K/L/M/N006	HJD/E/F007
<b>FURNACE SECTION</b>				
Rollout Switch Cutout Temp (F)†	195	195	195	195
Burner Orifice Diameter (in. ...drill size)**				
Natural Gas — Std	HJE .113...33 HJF .113...33 —	HJD .113...33 HJE .113...33 HJF .129...30	HJD .113...33 HJE .113...33 HJF .129...30	HJD .113...33 HJE .113...33 HJF .129...30
	HJH .113...33 HJK .113...33 —	HJG .113...33 HJH .113...33 HJK .129...30	HJG .113...33 HJH .113...33 HJK .129...30	— — —
	HJM .102...38 HJN .102...38 —	HJL .102...38 HJM .102...38 HJN .116...32	HJL .102...38 HJM .102...38 HJN .116...32	— — —
Liquid Propane — Alt††	HJE .089...43 HJF .089...43 —	HJD .089...43 HJE .089...43 HJF .104...37	HJD .089...43 HJE .089...43 HJF .104...37	HJD .089...43 HJE .089...43 HJF .104...37
	HJH .089...43 HJK .089...43 —	HJG .089...45 HJH .089...45 HJK .102...38	HJG .089...43 HJH .089...43 HJK .104...37	— — —
	HJM .082...45 HJN .082...45 —	HJL .082...45 HJM .082...45 HJN .094...42	HJL .082...45 HJM .082...45 HJN .094...42	— — —
Thermostat Heat Anticipator Setting (amps)				
208/230/460/575 v				
First Stage	.14	.14	.14	.14
Second Stage	.14	.14	.14	.14
Gas Input (Btuh)				
First Stage/Second Stage	HJE   50,000/ 72,000 HJF   82,000/115,000 —	HJD   50,000/ 72,000 HJE   82,000/115,000 HJF   120,000/150,000	HJD   50,000/ 72,000 HJE   82,000/115,000 HJF   120,000/150,000	HJD 50,000/ 72,000 HJE 82,000/115,000 HJF 120,000/150,000
	HJH*** —/ 72,000 HJK*** —/115,000 —	HJG*** —/ 72,000 HJH*** —/115,000 HJK*** —/150,000	HJG*** —/ 72,000 HJH*** —/115,000 HJK*** —/150,000	— — —
	HJM††† —/ 60,000 HJN††† —/ 90,000 —	HJL††† —/ 60,000 HJM††† —/ 90,000 HJN††† —/120,000	HJL††† —/ 60,000 HJM††† —/ 90,000 HJN††† —/120,000	— — —
Efficiency (Steady State) (%)	HJE 82.8 HJF 80 —	HJD 82.8 HJE 81 HJF 80.4	HJD 82.8 HJE 81 HJF 80.4	HJD 82 HJE 81 HJF 80
	HJH 82 HJK 80 —	HJG 82 HJH 81 HJK 80	HJG 82 HJH 81 HJK 80	— — —
	HJM 80.2 HJN 81 —	HJL 80.2 HJM 81 HJN 80.7	HJL 80.2 HJM 81 HJN 80.7	— — —
Temperature Rise Range	HJE 25-55 HJF 55-85 —	HJD 25-25 HJE 35-65 HJF 50-80	HJD 25-55 HJE 35-65 HJF 50-80	HJD 25-55 HJE 35-65 HJF 50-80
	HJH 25-55 HJK 55-85 —	HJG 25-55 HJH 35-65 HJK 50-80	HJG 25-55 HJH 35-65 HJK 50-80	— — —
	HJM 20-50 HJN 30-60 —	HJL 20-50 HJM 30-60 HJN 40-70	HJL 20-50 HJM 30-60 HJN 40-70	— — —
Manifold Pressure (in. wg)				
Natural Gas — Std	3.5	3.5	3.5	3.5
Liquid Propane — Alt††	3.5	3.5	3.5	3.5
Maximum Static Pressure (in. wg)	1.0	1.0	1.0	1.0
Field Gas Connection Size (in.)	1/2	1/2	1/2	1/2
<b>HIGH-PRESSURE SWITCH (psig)</b>	450 ± 50			
Standard Compressor Internal Relief	428			
Cutout	320			
Reset (Auto.)				
<b>LOSS-OF-CHARGE SWITCH/LOW-PRESSURE SWITCH (Liquid Line) (psig)</b>	7 ± 3			
Cutout	22 ± 5			
Reset (Auto.)				
<b>FREEZE PROTECTION THERMOSTAT</b>	30 ± 5			
Opens (F)	45 ± 5			
Closes (F)				
<b>OUTDOOR-AIR INLET SCREENS</b>	Cleanable. Screen quantity and size varies with option selected.			
<b>RETURN-AIR FILTERS</b>	Throwaway			
Quantity...Size (in.)	2...16 x 25 x 2		4...16 x 16 x 2	

**LEGEND**

**Bhp** — Brake Horsepower

\*Single phase/three phase.

†Indicates automatic reset.

\*\*60,000 and 72,000 Btuh heat input units have 2 burners. 90,000 and 120,000 Btuh heat input units have 3 burners. 115,000 Btuh heat input units and 150,000 Btuh Heat input units have 3 burners.

††An LP kit is available as an accessory. Kit may be used at elevations as high as 2000 ft. If an LP kit is used with Low NO<sub>x</sub> units, the Low NO<sub>x</sub> baffle must be removed and the units will no longer be classified as Low NO<sub>x</sub> units.

||Three-phase standard models have heating inputs as shown. Single-phase standard models have one-stage heating with heating input values as follows:


HJD005-006,HJE004 — 72,000 Btuh

HJE005-006,HJF004 — 115,000 Btuh


HJF005-006 — 150,000 Btuh

\*\*\*California compliant three-phase models.


†††California SCAQMD compliant low NO<sub>x</sub> models have combustion products that are controlled to 40 nanograms per joule or less.

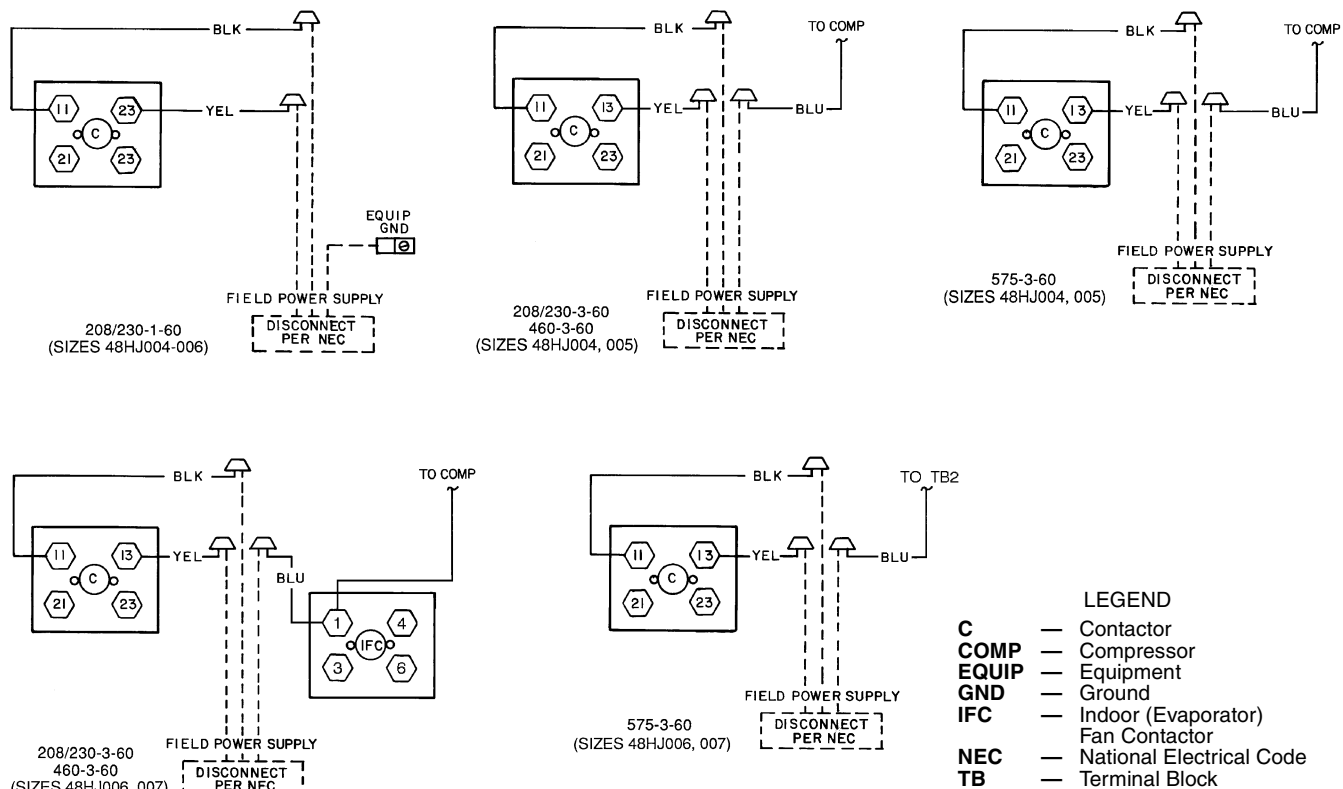


**Fig. 10 — Power Wiring Connections**

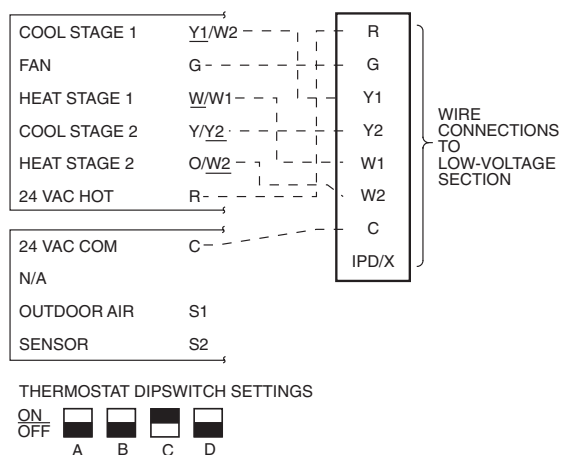

**Fig. 11A — Low-Voltage Connections With or Without Economizer or Two-Position Damper**

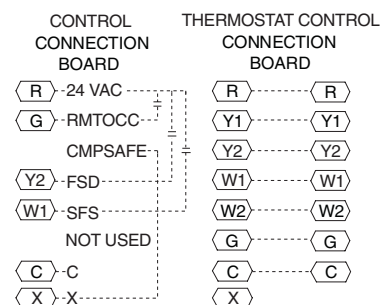

**Fig. 11B — Low Voltage Connections (Units with PremierLink™ Controls)**

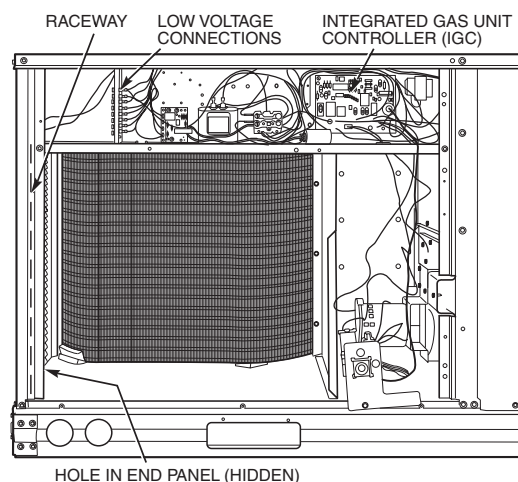

**Fig. 12 — Field Control Wiring Raceway**

**Table 2A — Electrical Data — Standard Motor Units Without Electrical Convenience Outlet**

UNIT 48HJ	NOMINAL VOLTAGE (V-Ph-Hz)	VOLTAGE RANGE		Qty	COMPRESSOR (each)		OFM (each)	IFM	COMBUSTION FAN MOTOR	POWER SUPPLY*		MINIMUM UNIT DISCONNECT SIZE†	
		Min	Max		RLA	LRA	FLA	FLA	FLA	MCA	MOCP**	FLA	LRA
<b>004</b> (3 Tons)	208/230-1-60	187	254	1	16.0	88.0	0.7	4.9	.60	25.6/25.6	30/30	25/25	101/101
	208/230-3-60	187	254		10.3	77.0	0.7	4.9	.60	18.5/18.5	25/25	18/18	90/90
	460-3-60	414	508		5.1	39.0	0.4	2.2	.30	9.0	20	9	46
	575-3-60	518	632		4.2	31.0	0.4	2.2	.30	7.3	20	7	37
<b>005</b> (4 Tons)	208/230-1-60	187	254	1	23.7	126.0	0.7	4.9	.60	35.2/35.2	45/45	34/34	139/139
	208/230-3-60	187	254		13.5	93.0	0.7	4.9	.60	22.5/22.5	30/30	22/22	106/106
	460-3-60	414	508		6.4	46.5	0.4	2.2	.30	10.6	20	10	54
	575-3-60	518	632		6.4	40.0	0.4	2.2	.30	10.1	20	10	46
<b>006</b> (5 Tons)	208/230-1-60	187	254	1	28.8	169.0	1.5	8.8	.60	46.3/46.3	60/60	45/45	216/216
	208/230-3-60	187	254		17.3	123.0	1.5	5.8	.60	28.9/28.9	35/35	28/28	168/168
	460-3-60	414	508		9.0	62.0	0.8	2.6	.30	14.7	20	14	84
	575-3-60	518	632		7.1	50.0	0.8	2.6	.30	11.6	20	12	68
<b>007</b> (6 Tons)	208/230-3-60	187	254	1	20.5	156.0	1.4	5.8	.60	32.8/32.8	40/40	32/32	200/200
	460-3-60	414	508		9.6	75.0	0.6	2.6	.30	15.2	20	15	97
	575-3-60	518	632		7.7	56.0	0.6	2.6	.30	12.2	20	12	74

**Table 2B — Electrical Data — Standard Motor Units With Electrical Convenience Outlet**

UNIT 48HJ	NOMINAL VOLTAGE (V-Ph-Hz)	VOLTAGE RANGE		Qty	COMPRESSOR (each)		OFM (each)	IFM	COMBUSTION FAN MOTOR	POWER SUPPLY WITH OUTLET*		MINIMUM UNIT DISCONNECT SIZE†	
		Min	Max		RLA	LRA	FLA	FLA	FLA	MCA	MOCP**	FLA	LRA
<b>004</b> (3 Tons)	208/230-1-60	187	254	1	16.0	88.0	0.7	4.9	.60	31.6/31.6	35/35	30/30	106/106
	208/230-3-60	187	254		10.3	77.0	0.7	4.9	.60	24.5/24.5	30/30	24/24	95/95
	460-3-60	414	508		5.1	39.0	0.4	2.2	.30	11.7	20	11	48
	575-3-60	518	632		4.2	31.0	0.4	2.2	.30	9.5	20	9	38
<b>005</b> (4 Tons)	208/230-1-60	187	254	1	23.7	126.0	0.7	4.9	.60	41.2/41.2	50/50	39/39	144/144
	208/230-3-60	187	254		13.5	93.0	0.7	4.9	.60	28.5/28.5	35/35	27/27	111/111
	460-3-60	414	508		6.4	46.5	0.4	2.2	.30	13.3	20	13	56
	575-3-60	518	632		6.4	40.0	0.4	2.2	.30	12.2	20	12	47
<b>006</b> (5 Tons)	208/230-1-60	187	254	1	28.8	169.0	1.5	8.8	.60	52.3/52.3	60/60	50/50	221/221
	208/230-3-60	187	254		17.3	123.0	1.5	5.8	.60	34.9/34.9	40/40	34/34	173/173
	460-3-60	414	508		9.0	62.0	0.8	2.6	.30	17.4	20	17	87
	575-3-60	518	632		7.1	50.0	0.8	2.6	.30	13.8	20	13	70
<b>007</b> (6 Tons)	208/230-3-60	187	254	1	20.5	156.0	1.4	5.8	.60	38.8/38.8	45/45	37/37	205/205
	460-3-60	414	508		9.6	75.0	0.6	2.6	.30	17.9	20	17	99
	575-3-60	518	632		7.7	56.0	0.6	2.6	.30	14.3	20	14	75

**LEGEND**

**FLA** — Full Load Amps  
**HACR** — Heating, Air Conditioning and Refrigeration  
**IFM** — Indoor (Evaporator) Fan Motor  
**LRA** — Locked Rotor Amps  
**MCA** — Minimum Circuit Amps  
**MOCP** — Maximum Overcurrent Protection  
**NEC** — National Electrical Code  
**OFM** — Outdoor (Condenser) Fan Motor  
**RLA** — Rated Load Amps  
**UL** — Underwriters' Laboratories



\*The values listed in this table do not include power exhaust. See table at right for power exhaust requirements.

†Used to determine minimum disconnect per NEC.

\*\*Fuse or HACR circuit breaker.


**NOTES:**

- In compliance with NEC requirements for multimotor and combination load equipment (refer to NEC Articles 430 and 440), the overcurrent protective device for the unit shall be fuse or HACR breaker. The UL, Canada units may be fuse or circuit breaker.
- Electrical data based on 95 F ambient outdoor-air temperature  $\pm$  10% voltage.
- Unbalanced 3-Phase Supply Voltage**  
*Never operate a motor where phase imbalance in supply voltage is greater than 2%. Use the following formula to determine the percent voltage imbalance.*

% Voltage Imbalance

$$= 100 \times \frac{\text{max voltage deviation from average voltage}}{\text{average voltage}}$$

Example: Supply voltage is 460-3-60.



AB = 452 v  
 BC = 464 v  
 AC = 455 v

$$\text{Average Voltage} = \frac{452 + 464 + 455}{3}$$

$$= \frac{1371}{3}$$

$$= 457$$

Determine maximum deviation from average voltage.

(AB) 457 – 452 = 5 v

(BC) 464 – 457 = 7 v

(AC) 457 – 455 = 2 v

Maximum deviation is 7 v.

Determine percent of voltage imbalance.

$$\% \text{ Voltage Imbalance} = 100 \times \frac{7}{457}$$

$$= 1.53\%$$

This amount of phase imbalance is satisfactory as it is below the maximum allowable 2%.

**IMPORTANT:** If the supply voltage phase imbalance is more than 2%, contact your local electric utility company immediately.

**POWER EXHAUST ELECTRICAL DATA**

POWER EXHAUST PART NO.	MCA (230 v)	MCA (460 v)	MCA (575 v)	MOCP (for separate power source)
<b>CRPWREXH021A01</b>	N/A	0.9	N/A	15
<b>CRPWREXH022A01</b>	3.3	N/A	1.32	15
<b>CRPWREXH023A01</b>	N/A	1.8	N/A	15
<b>CRPWREXH028A01</b>	1.7	N/A	0.68	15
<b>CRPWREXH029A01</b>	N/A	1.0	N/A	15
<b>CRPWREXH030A01</b>	1.6	N/A	0.64	15

**N/A** — Not available

**NOTE:** If a single power source is to be used, size wire to include power exhaust MCA and MOCP.

Check MCA and MOCP when power exhaust is powered through the unit. Determine the new MCA including the power exhaust using the following formula:

MCA New = MCA unit only + MCA of Power Exhaust

For example, using a 48HJD006---5 unit with MCA = 28.9 and MOCP = 35, with CRPWREXH030A01 power exhaust.

MCA New = 28.9 amps + 1.6 amps = 30.5 amps

If the new MCA does not exceed the published MOCP, then MOCP would not change. The MOCP in this example is 35 amps and the MCA New is below 35; therefore the MOCP is acceptable. If "MCA New" is larger than the published MOCP, raise the MOCP to the next larger size. For separate power, the MOCP for the power exhaust will be 15 amps per NEC.

**Table 2C — Electrical Data — High-Static Motor Units Without Electrical Convenience Outlet**

UNIT 48HJ	NOMINAL VOLTAGE (V-Ph-Hz)	VOLTAGE RANGE		COMPRESSOR (each)			OFM (each)	IFM	COMBUSTION FAN MOTOR	POWER SUPPLY*		MINIMUM UNIT DISCONNECT SIZE†	
		Min	Max	Qty	RLA	LRA	FLA	FLA	RLA	MCA	MOCP**	FLA	LRA
004	208/230-3-60	187	254	1	10.3	77.0	0.7	5.8	0.6	19.4	25	19	120
	460-3-60	414	508		5.1	39.0	0.4	2.6	0.3	9.4	20	9	60
	575-3-60	518	632		4.2	31.0	0.4	2.6	0.3	7.7	20	8	48
005	208/230-3-60	187	254	1	13.5	93.0	0.7	5.8	0.6	23.4	30	23	136
	460-3-60	414	508		6.4	46.5	0.4	2.6	0.3	11.0	20	11	68
	575-3-60	518	632		6.4	40.0	0.4	2.6	0.3	10.4	20	10	57
006	208/230-3-60	187	254	1	17.3	123.0	1.5	7.5	0.6	30.6	35	30	187
	460-3-60	414	508		9.0	62.0	0.8	3.4	0.3	15.5	20	15	94
	575-3-60	518	632		7.1	50.0	0.8	3.4	0.3	12.2	20	12	76
007	208/230-3-60	187	254	1	20.5	156.0	1.4	7.5	0.6	34.5	40	34	219
	460-3-60	414	508		9.6	75.0	0.6	3.4	0.3	16	20	16	107
	575-3-60	518	632		7.7	56.0	0.6	3.4	0.3	12.8	20	13	81

**Table 2D — Electrical Data — High-Static Motor Units With Electrical Convenience Outlet**

UNIT 48HJ	NOMINAL VOLTAGE (V-Ph-Hz)	VOLTAGE RANGE		COMPRESSOR (each)			OFM (each)	IFM	COMBUSTION FAN MOTOR	POWER SUPPLY*		MINIMUM UNIT DISCONNECT SIZE†	
		Min	Max	Qty	RLA	LRA	FLA	FLA	RLA	MCA	MOCP**	FLA	LRA
004	208/230-3-60	187	254	1	10.3	77.0	0.7	5.8	0.6	25.4	30	25	124
	460-3-60	414	508		5.1	39.0	0.4	2.6	0.3	12.1	20	12	63
	575-3-60	518	632		4.2	31.0	0.4	2.6	0.3	9.8	20	10	50
005	208/230-3-60	187	254	1	13.5	93.0	0.7	5.8	0.6	29.4	35	29	140
	460-3-60	414	508		6.4	46.5	0.4	2.6	0.3	13.7	20	13	70
	575-3-60	518	632		6.4	40.0	0.4	2.6	0.3	12.6	20	12	59
006	208/230-3-60	187	254	1	17.3	123.0	1.5	7.5	0.6	36.6	40	36	192
	460-3-60	414	508		9.0	62.0	0.8	3.4	0.3	18.2	20	18	96
	575-3-60	518	632		7.1	50.0	0.8	3.4	0.3	14.4	20	14	77
007	208/230-3-60	187	254	1	20.5	156.0	1.4	7.5	0.6	40.5	45	39	224
	460-3-60	414	508		9.6	75.0	0.6	3.4	0.3	18.7	25	18	109
	575-3-60	518	632		7.7	56.0	0.6	3.4	0.3	15.0	20	15	83

**LEGEND**

**FLA** — Full Load Amps  
**HACR** — Heating, Air Conditioning and Refrigeration  
**IFM** — Indoor (Evaporator) Fan Motor  
**LRA** — Locked Rotor Amps  
**MCA** — Minimum Circuit Amps  
**MOCP** — Maximum Overcurrent Protection  
**NEC** — National Electrical Code  
**OFM** — Outdoor (Condenser) Fan Motor  
**RLA** — Rated Load Amps  
**UL** — Underwriters' Laboratories



\*The values listed in this table do not include power exhaust. See table at right for power exhaust requirements.

†Used to determine minimum disconnect per NEC.

\*\*Fuse or HACR circuit breaker.


**NOTES:**

- In compliance with NEC requirements for multimotor and combination load equipment (refer to NEC Articles 430 and 440), the overcurrent protective device for the unit shall be fuse or HACR breaker. The UL, Canada units may be fuse or circuit breaker.
- Electrical data based on 95 F ambient outdoor-air temperature  $\pm$  10% voltage.
- Unbalanced 3-Phase Supply Voltage**  
*Never operate a motor where phase imbalance in supply voltage is greater than 2%. Use the following formula to determine the percent voltage imbalance.*

% Voltage Imbalance

$$= 100 \times \frac{\text{max voltage deviation from average voltage}}{\text{average voltage}}$$

Example: Supply voltage is 460-3-60.



AB = 452 v  
 BC = 464 v  
 AC = 455 v

$$\text{Average Voltage} = \frac{452 + 464 + 455}{3}$$

$$= \frac{1371}{3}$$

$$= 457$$

Determine maximum deviation from average voltage.

(AB) 457 – 452 = 5 v  
 (BC) 464 – 457 = 7 v  
 (AC) 457 – 455 = 2 v

Maximum deviation is 7 v.

Determine percent of voltage imbalance.

$$\% \text{ Voltage Imbalance} = 100 \times \frac{7}{457} = 1.53\%$$

This amount of phase imbalance is satisfactory as it is below the maximum allowable 2%.

**IMPORTANT:** If the supply voltage phase imbalance is more than 2%, contact your local electric utility company immediately.

**POWER EXHAUST ELECTRICAL DATA**

POWER EXHAUST PART NO.	MCA (230 v)	MCA (460 v)	MCA (575 v)	MOCP (for separate power source)
CRPWREXH021A01	N/A	0.9	N/A	15
CRPWREXH022A01	3.3	N/A	1.32	15
CRPWREXH023A01	N/A	1.8	N/A	15
CRPWREXH028A01	1.7	N/A	0.68	15
CRPWREXH029A01	N/A	1.0	N/A	15
CRPWREXH030A01	1.6	N/A	0.64	15

N/A — Not available

NOTE: If a single power source is to be used, size wire to include power exhaust MCA and MOCP.

Check MCA and MOCP when power exhaust is powered through the unit. Determine the new MCA including the power exhaust using the following formula:

MCA New = MCA unit only + MCA of Power Exhaust

For example, using a 48HJD006---5 unit with MCA = 28.9 and MOCP = 35, with CRPWREXH030A01 power exhaust.

MCA New = 28.9 amps + 1.6 amps = 30.5 amps

If the new MCA does not exceed the published MOCP, then MOCP would not change. The MOCP in this example is 35 amps and the MCA New is below 35; therefore the MOCP is acceptable. If "MCA New" is larger than the published MOCP, raise the MOCP to the next larger size. For separate power, the MOCP for the power exhaust will be 15 amps per NEC.

## Step 8 — Adjust Factory-Installed Options

**COBRA™ ENERGY RECOVERY UNITS** — Please refer to the supplement provided for information on installing and operating the factory optional COBRA Energy Recovery Units. These units are equipped with a factory-installed energy recovery unit and have different installation and operation procedures than the standard unit.

**HUMIDI-MIZER™ ADAPTIVE DEHUMIDIFICATION SYSTEM** — Humidi-MiZer system operation can be controlled by field installation of a Carrier-approved humidistat (Fig. 13).

**NOTE:** A light commercial Thermidstat™ device (Fig. 14) can be used instead of the humidistat if desired. The Thermidstat device includes a thermostat and a humidistat. The humidistat is normally used in applications where a temperature sensor is already provided (units with PremierLink™ control).

To install the humidistat:

1. Route humidistat cable through hole provided in unit corner post.
2. Feed wires through the raceway built into the corner post to the 24-v barrier located on the left side of the control box. See Fig. 12. The raceway provides the UL-required clearance between high-voltage and low-voltage wiring.
3. Use a wire nut to connect humidistat cable into low-voltage wiring as shown in Fig. 15.


To install Thermidstat device:

1. Route Thermidstat cable through hole provided in unit corner post.
2. Feed the wires through the raceway built into the corner post to the 24-v barrier located on the left side of the control box. See Fig. 12. The raceway provides the UL-required clearance between high and low voltage wiring.
3. A field-supplied relay must be installed between the thermidstat and the Humidi-Mizer circuit (recommended relay: HN612KK324). See Fig. 16. The relay coil is connected between the DEHUM output and C (common) of the unit. The relay controls the Humidi-MiZer solenoid valve and must be wired between the Humidi-MiZer fuse and the low-pressure switch. Refer to the installation instructions included with the Carrier Light Commercial Thermidstat device for more information.


**MANUAL OUTDOOR-AIR DAMPER** — The outdoor-air hood and screen are attached to the basepan at the bottom of the unit for shipping.

### Assembly:

1. Determine quantity of ventilation required for building. Record amount for use in Step 8.
2. Remove and save outdoor air opening panel and screws. See Fig. 17.

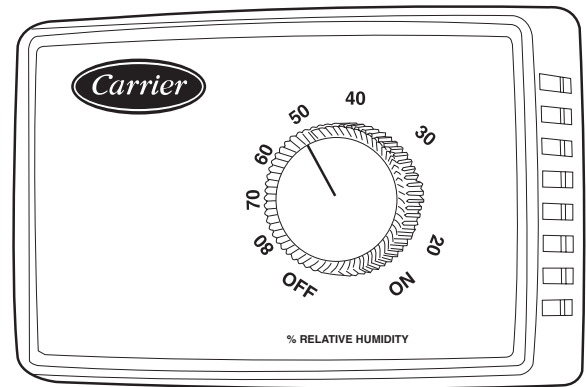


**Fig. 13 — Accessory Field-Installed Humidistat**

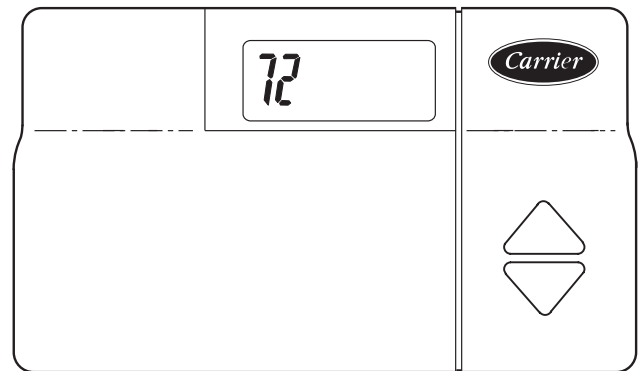


**Fig. 14 — Light Commercial Thermidstat Device**


3. Remove evaporator coil access panel. Separate hood and screen from basepan by removing the 4 screws securing them. Save all screws.
4. Replace evaporator coil access panel.
5. Place hood on front of outdoor air opening panel. See Fig. 18 for hood details. Secure top of hood with the 4 screws removed in Step 3. See Fig. 19.
6. Remove and save 6 screws (3 on each side) from sides of the manual outdoor-air damper.
7. Align screw holes on hood with screw holes on side of manual outdoor-air damper. See Fig. 18 and 19. Secure hood with 6 screws from Step 6.
8. Adjust minimum position setting of the damper blade by adjusting the manual outdoor-air adjustment screws on the front of the damper blade. See Fig. 17. Slide blade vertically until it is in the appropriate position determined by Fig. 20. Tighten screws.
9. Remove and save screws currently on sides of hood. Insert screen. Secure screen to hood using the screws. See Fig. 19.

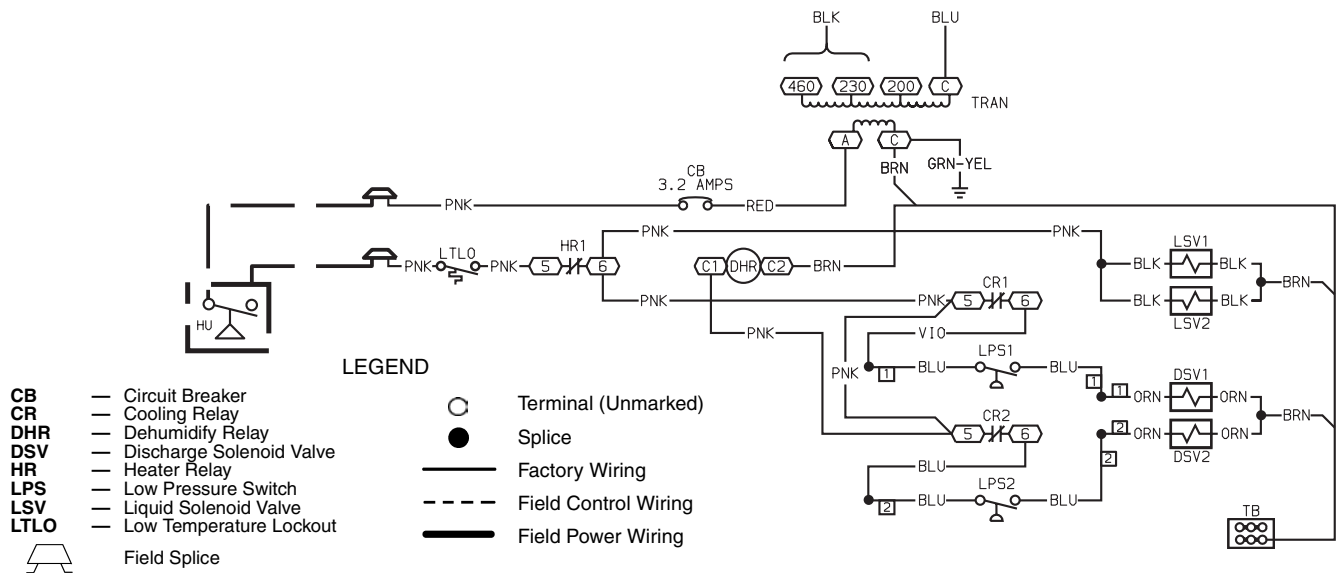


**Fig. 15 — Typical Humidi-MiZer™ Adaptive Dehumidification System Humidistat Wiring (208/230-V Unit Shown)**

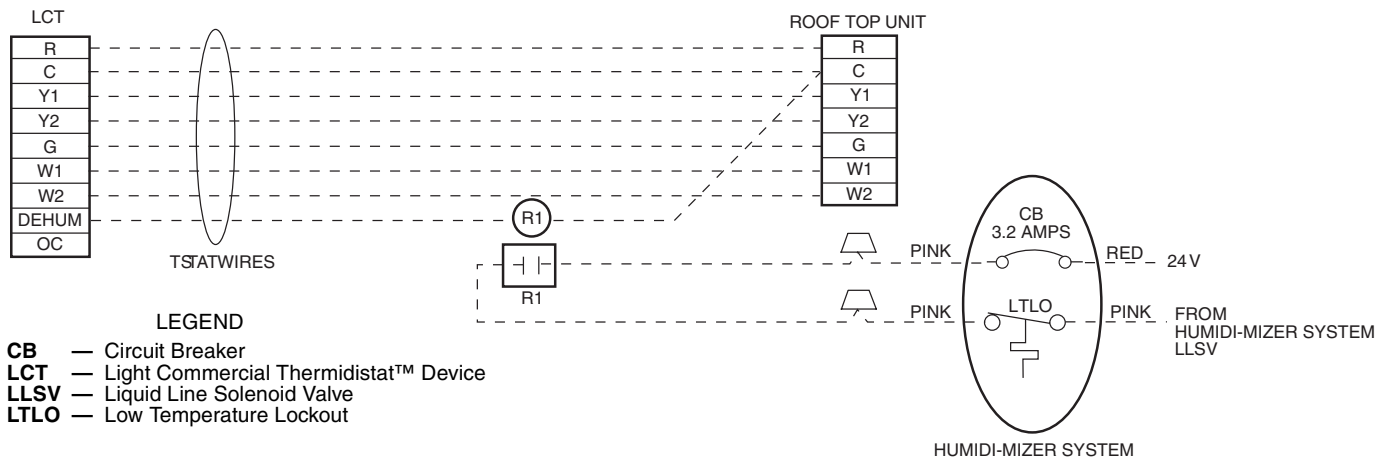

**Fig. 16 — Typical Rooftop Unit with Humidi-Mizer Adaptive Dehumidification System with Thermidistat Device**

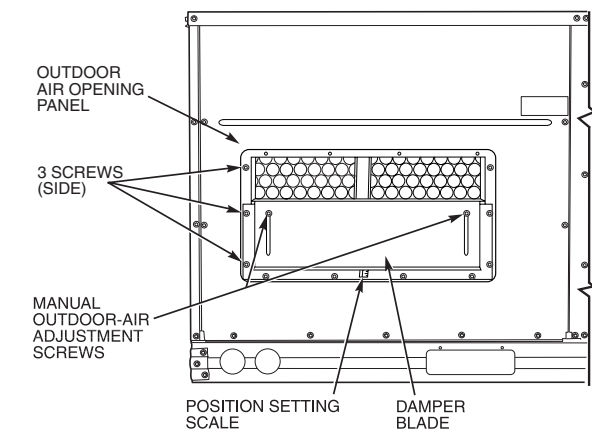


**Fig. 17 — Damper Panel with Manual Outdoor-Air Damper Installed**

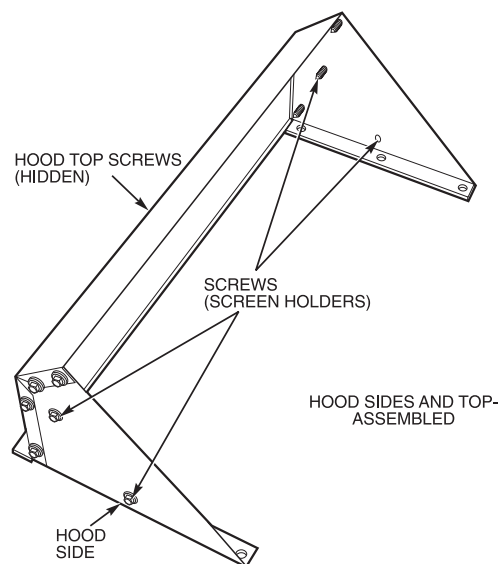


**Fig. 18 — Outdoor-Air Hood Details**



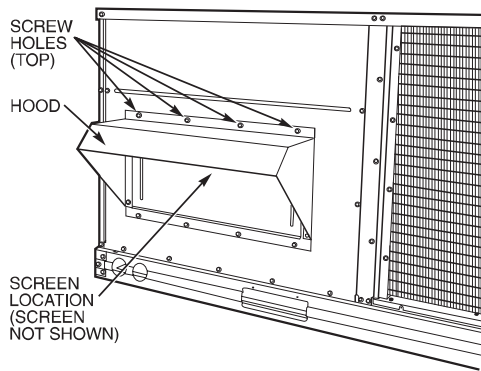

**Fig. 19 — Outdoor-Air Damper with Hood Attached**

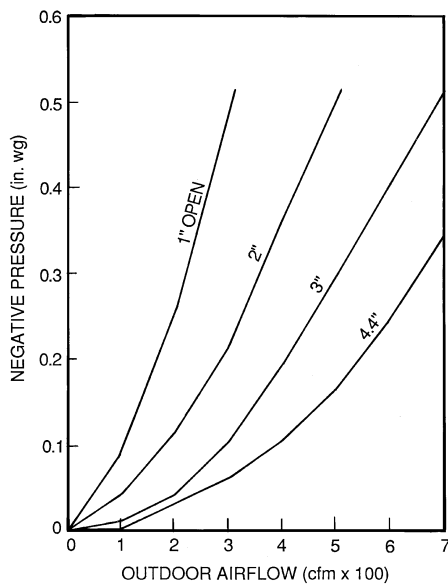

**Fig. 20 — Outdoor-Air Damper Position Setting**

**CONVENIENCE OUTLET** — An optional convenience outlet provides power for rooftop use. For maintenance personnel safety, the convenience outlet power is off when the unit disconnect is off. Adjacent unit outlets may be used for service tools.

**NOVAR CONTROLS** — Optional Novar controls (ETM 3051) are available for replacement or new construction jobs.

**PREMIERLINK™ CONTROL** — The PremierLink controller is compatible with Carrier Comfort Network® (CCN) devices. This control is designed to allow users the access and ability to change factory-defined settings, thus expanding the function of the standard unit control board. Carrier's diagnostic standard tier display tools such as Navigator™ or Scrolling Marquee can be used with the PremierLink controller.

The PremierLink controller (see Fig. 21A and 21B) requires the use of a Carrier electronic thermostat or a CCN connection for time broadcast to initiate its internal timeclock. This is necessary for broadcast of time of day functions (occupied/

unoccupied). No sensors are supplied with the field-mounted PremierLink control. The factory-installed PremierLink control includes only the supply-air temperature (SAT) sensor and the outdoor air temperature (OAT) sensor as standard. An indoor air quality (CO<sub>2</sub>) sensor can be added as an option. Refer to Table 3 for sensor usage. Refer to Fig. 22 for PremierLink controller wiring. The PremierLink control may be mounted in the control panel or an area below the control panel.

**NOTE:** PremierLink controller versions 1.3 and later are shipped in Sensor mode. If used with a thermostat, the PremierLink controller must be configured to Thermostat mode.

**Install the Supply Air Temperature (SAT) Sensor** — When the unit is supplied with a factory-mounted PremierLink control, the supply-air temperature (SAT) sensor (33ZCSENSAT) is factory-supplied and wired. The wiring is routed from the PremierLink control over the control box, through a grommet, into the fan section, down along the back side of the fan, and along the fan deck over to the supply-air opening.

The SAT probe is wire-tied to the supply-air opening (on the horizontal opening end) in its shipping position. Remove the sensor for installation. Re-position the sensor in the flange of the supply-air opening or in the supply air duct (as required by local codes). Drill or punch a 1/2-in. hole in the flange or duct. Use two field-supplied, self-drilling screws to secure the sensor probe in a horizontal orientation.

**NOTE:** The sensor must be mounted in the discharge airstream downstream of the cooling coil and any heating devices. Be sure the probe tip does not come in contact with any of the unit or heat surfaces.

**Outdoor Air Temperature (OAT) Sensor** — When the unit is supplied with a factory-mounted PremierLink control, the outdoor-air temperature (OAT) sensor is factory-supplied and wired.

**Install the Indoor Air Quality (CO<sub>2</sub>) Sensor** — Mount the optional indoor air quality (CO<sub>2</sub>) sensor according to manufacturer specifications.

A separate field-supplied transformer must be used to power the CO<sub>2</sub> sensor.

Wire the CO<sub>2</sub> sensor to the COM and IAQI terminals of J5 on the PremierLink controller. Refer to the PremierLink Installation, Start-up, and Configuration Instructions for detailed wiring and configuration information.

**Enthalpy Sensors and Control** — The enthalpy control (HH57AC077) is supplied as a field-installed accessory to be used with the EconoMiSer2 damper control option. The outdoor air enthalpy sensor is part of the enthalpy control. The separate field-installed accessory return air enthalpy sensor (HH57AC078) is required for differential enthalpy control.

**NOTE:** The enthalpy control must be set to the "D" setting for differential enthalpy control to work properly.

The enthalpy control receives the indoor and return enthalpy from the outdoor and return air enthalpy sensors and provides a dry contact switch input to the PremierLink controller. Locate the controller in place of an existing economizer controller or near the actuator. The mounting plate may not be needed if existing bracket is used.

A closed contact indicates that outside air is preferred to the return air. An open contact indicates that the economizer should remain at minimum position.


**Table 3 — PremierLink™ Sensor Usage**

APPLICATION	OUTDOOR AIR TEMPERATURE SENSOR	RETURN AIR TEMPERATURE SENSOR	OUTDOOR AIR ENTHALPY SENSOR	RETURN AIR ENTHALPY SENSOR
Differential Dry Bulb Temperature with PremierLink* (PremierLink requires 4-20 mA Actuator)	Included — CRTEMPSN001A00	Required — 33ZCT55SPT or Equivalent	—	—
Single Enthalpy with PremierLink* (PremierLink requires 4-20 mA Actuator)	Included — Not Used	—	Required — HH57AC077 or Equivalent	—
Differential Enthalpy with PremierLink* (PremierLink requires 4-20 mA Actuator)	Included — Not Used	—	Required — HH57AC077 or Equivalent	Required — HH57AC078 or Equivalent


\*PremierLink control requires Supply Air Temperature sensor 33ZCSENSAT and Outdoor Air Temperature sensor CRTEMPSN001A00 — Included with factory-installed PremierLink control; field-supplied and field-installed with field-installed PremierLink control.

**NOTES:**


- CO<sub>2</sub> Sensors (Optional):  
 33ZCSENSCO2 — Room sensor (adjustable). Aspirator box is required for duct mounting of the sensor.  
 33ZCASPACO2 — Aspirator box used for duct-mounted CO<sub>2</sub> room sensor.  
 33ZCT55CO2 — Space temperature and CO<sub>2</sub> room sensor with override.  
 33ZCT56CO2 — Space temperature and CO<sub>2</sub> room sensor with override and set point.
- All units include the following Standard Sensors:  
 Outdoor-Air Sensor — 50HJ540569 — Opens at 67 F, closes at 52 F, not adjustable.  
 Mixed-Air Sensor — HH97AZ001 — (PremierLink control requires Supply Air Temperature sensor 33ZCSENSAT and Outdoor Air Temperature Sensor CRTEMPSN001A00)  
 Compressor Lockout Sensor — 50HJ540570 — Opens at 35 F, closes at 50 F.

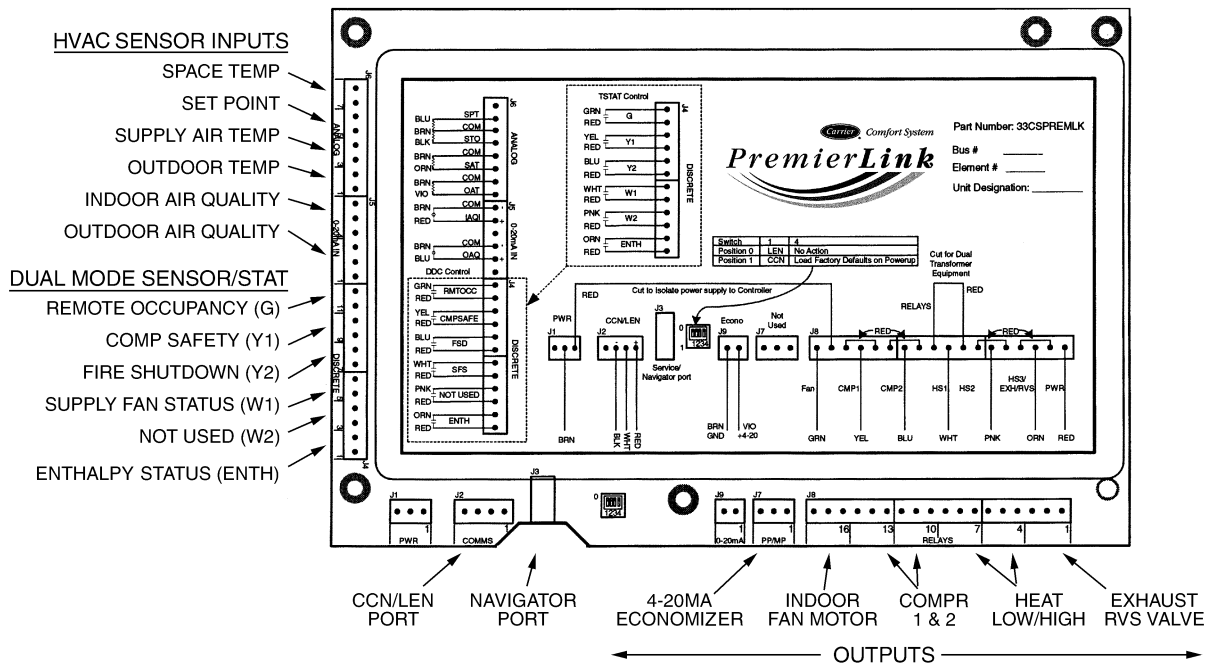

**Fig. 21A — PremierLink Controller**

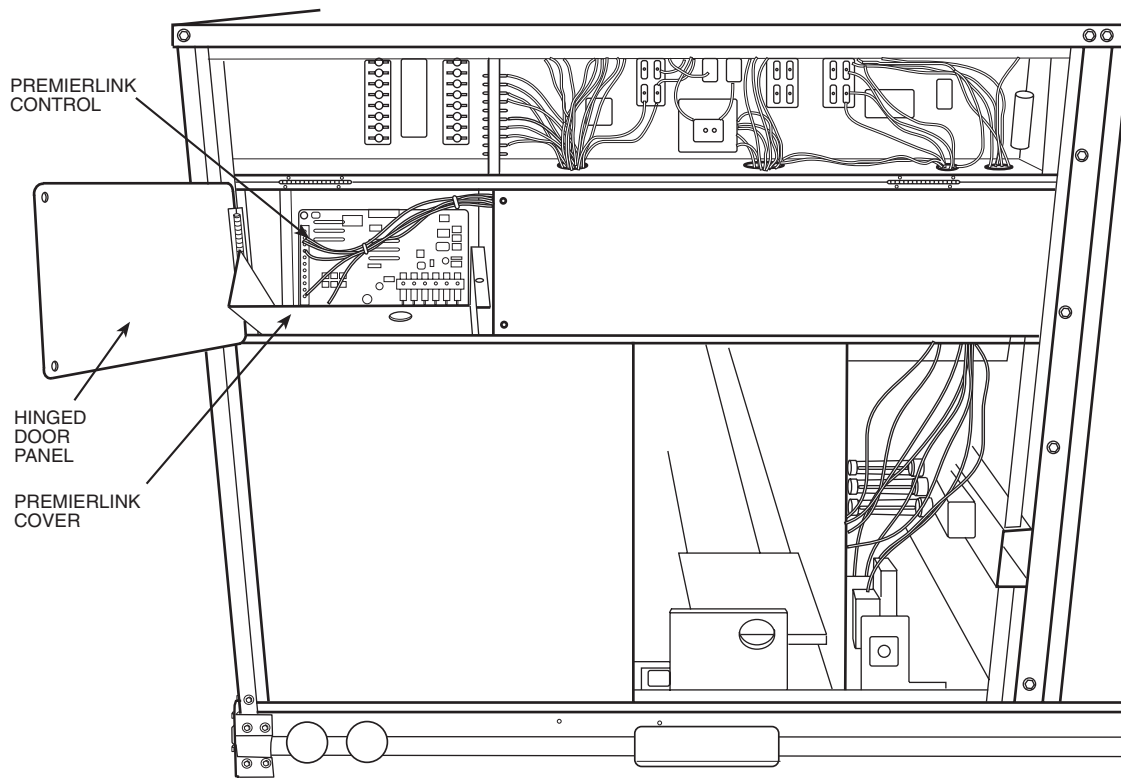

**Fig. 21B — PremierLink™ Controller (Installed)**

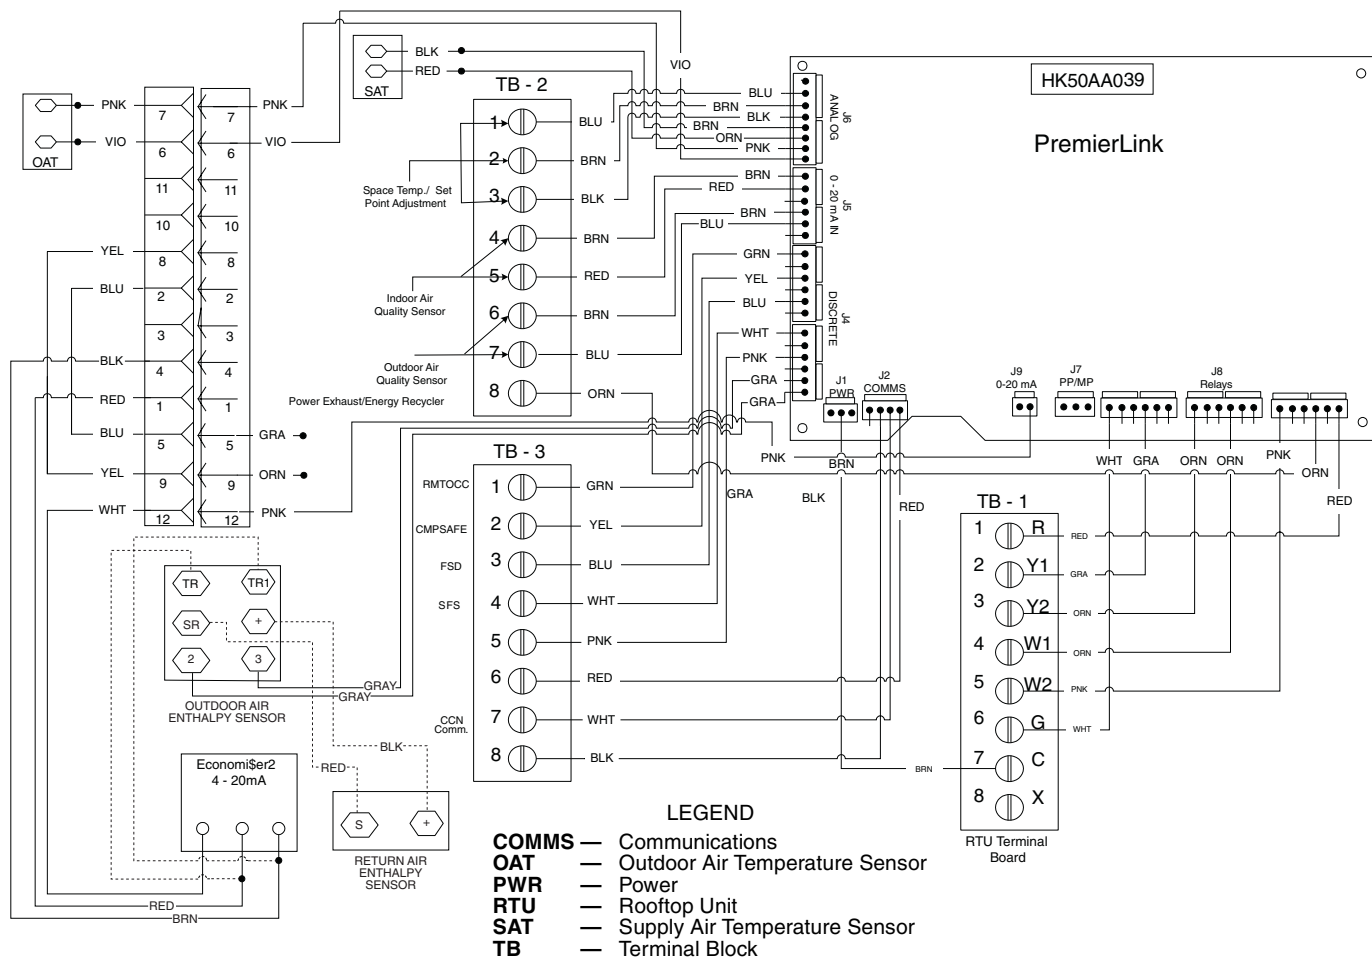

**Fig. 22 — Typical PremierLink Controls Wiring**

**Outdoor Air Enthalpy Sensor/Enthalpy Controller (HH57AC077)** — To wire the outdoor air enthalpy sensor, perform the following (see Fig. 23 and 24):

NOTE: The outdoor air sensor can be removed from the back of the enthalpy controller and mounted remotely.

1. Use a 4-conductor, 18 or 20 AWG cable to connect the enthalpy control to the PremierLink controller and power transformer.
2. Connect the following 4 wires from the wire harness located in rooftop unit to the enthalpy controller:
  - a. Connect the BRN wire to the 24 vac terminal (TR1) on enthalpy control and to pin 1 on 12-pin harness.
  - b. Connect the RED wire to the 24 vac GND terminal (TR) on enthalpy sensor and to pin 4 on 12-pin harness.
  - c. Connect the GRAY/ORN wire to J4-2 on Premier-Link controller and to terminal (3) on enthalpy sensor.
  - d. Connect the GRAY/RED wire to J4-1 on Premier-Link controller and to terminal (2) on enthalpy sensor.

NOTE: If installing in a Carrier rooftop, use the two gray wires provided from the control section to the economizer to connect PremierLink controller to terminals 2 and 3 on enthalpy sensor.

**Return Air Enthalpy Sensor** — Mount the return-air enthalpy sensor (HH57AC078) in the return-air duct. The return air sensor is wired to the enthalpy controller (HH57AC077). The outdoor enthalpy changeover set point is set at the controller.


To wire the return air enthalpy sensor, perform the following (see Fig. 23):

1. Use a 2-conductor, 18 or 20 AWG, twisted pair cable to connect the return air enthalpy sensor to the enthalpy controller.
2. At the enthalpy control remove the factory-installed resistor from the (SR) and (+) terminals.
3. Connect the field-supplied RED wire to (+) spade connector on the return air enthalpy sensor and the (SR+) terminal on the enthalpy controller. Connect the BLK wire to (S) spade connector on the return air enthalpy sensor and the (SR) terminal on the enthalpy controller.

**OPTIONAL ECONOMISER IV AND ECONOMISER2** — See Fig. 25 for EconoMi\$er IV component locations. See Fig. 26 for EconoMi\$er2 component locations.

NOTE: These instructions are for installing the optional EconoMi\$er IV and EconoMi\$er2 only. Refer to the accessory EconoMi\$er IV or EconoMi\$er2 installation instructions when field installing an EconoMi\$er IV or EconoMi\$er2 accessory.

1. To remove the existing unit filter access panel, raise the panel and swing the bottom outward. The panel is now disengaged from the track and can be removed. See Fig. 27.

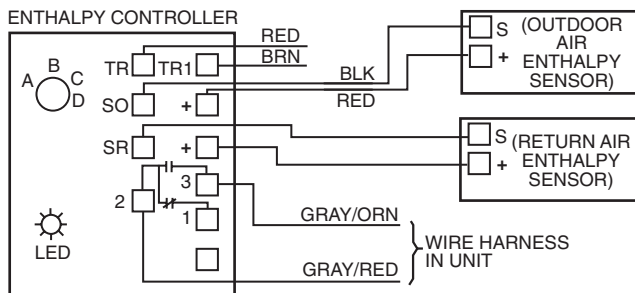


**NOTES:**


1. Remove factory-installed jumper across SR and + before connecting wires from return air sensor.
2. Switches shown in high outdoor air enthalpy state. Terminals 2 and 3 close on low outdoor air enthalpy relative to indoor air enthalpy.
3. Remove sensor mounted on back of control and locate in outdoor airstream.

**Fig. 23 — Outdoor and Return Air Sensor Wiring Connections for Differential Enthalpy Control**


2. The box with the economizer hood components is shipped in the compartment behind the economizer. The EconoMi\$er IV controller is mounted on top of the EconoMi\$er IV in the position shown in Fig. 25. The optional EconoMi\$er2 with 4 to 20 mA actuator signal control does not include the EconoMi\$er IV controller. To remove the component box from its shipping position, remove the screw holding the hood box bracket to the top of the economizer. Slide the hood box out of the unit. See Fig. 28.

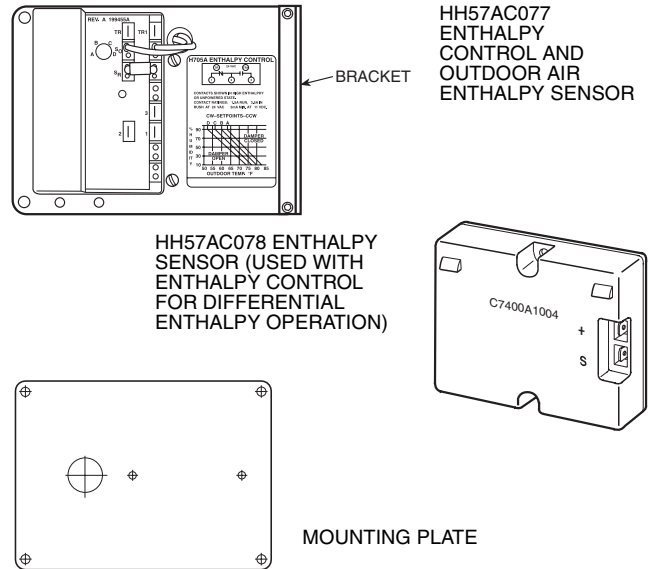


**Fig. 24 — Differential Enthalpy Control, Sensor and Mounting Plate (33AMKITENT006)**

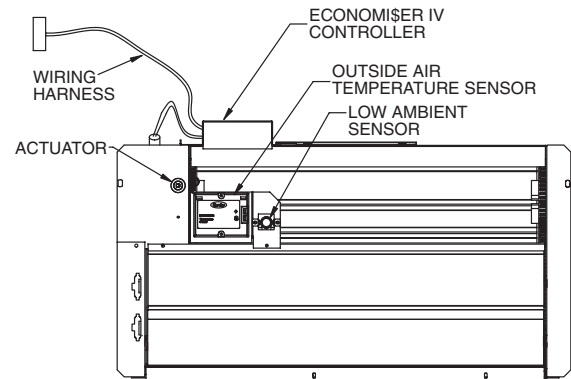


**Fig. 25 — EconoMi\$er IV Component Locations**

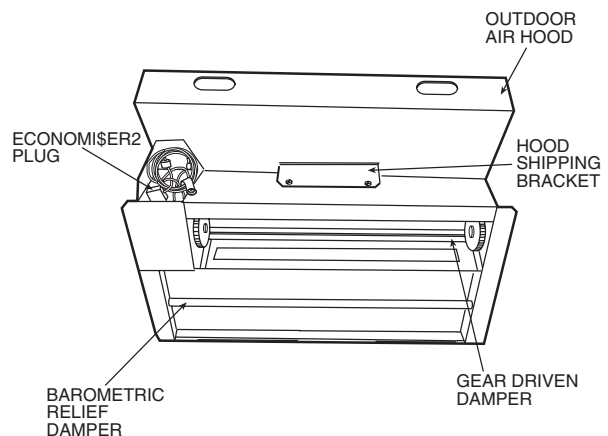

**Fig. 26 — EconoMi\$er2 Component Locations**

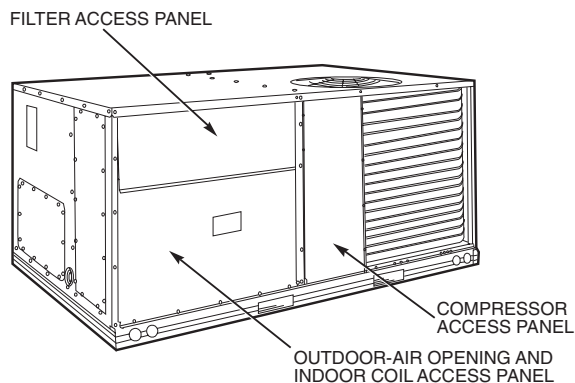

**Fig. 27 — Typical Access Panel Locations**

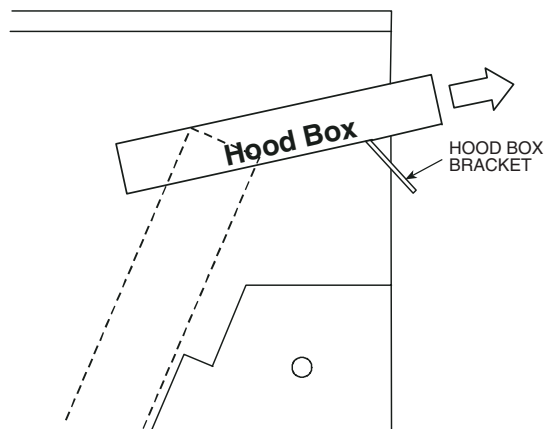


**Fig. 28 — Hood Box Removal**


**IMPORTANT:** If the power exhaust accessory is to be installed on the unit, the hood shipped with the unit will not be used and must be discarded. **Save the aluminum filter for use in the power exhaust hood assembly.**

3. The indoor coil access panel will be used as the top of the hood. Remove the screws along the sides and bottom of the indoor coil access panel. See Fig. 29.
4. Swing out indoor coil access panel and insert the hood sides under the panel (hood top). Use the screws provided to attach the hood sides to the hood top. Use screws provided to attach the hood sides to the unit. See Fig. 30.
5. Remove the shipping tape holding the economizer barometric relief damper in place.
6. Insert the hood divider between the hood sides. See Fig. 30 and 31. Secure hood divider with 2 screws on each hood side. The hood divider is also used as the bottom filter rack for the aluminum filter.
7. Open the filter clips which are located underneath the hood top. Insert the aluminum filter into the bottom filter rack (hood divider). Push the filter into position past the open filter clips. Close the filter clips to lock the filter into place. See Fig. 31.
8. Caulk the ends of the joint between the unit top panel and the hood top. See Fig. 29.
9. Replace the filter access panel.
10. Install all EconoMi\$er IV accessories. EconoMi\$er IV wiring is shown in Fig. 32. EconoMi\$er2 wiring is shown in Fig. 33.


Barometric flow capacity is shown in Fig. 34. Outdoor air leakage is shown in Fig. 35. Return air pressure drop is shown in Fig. 36.

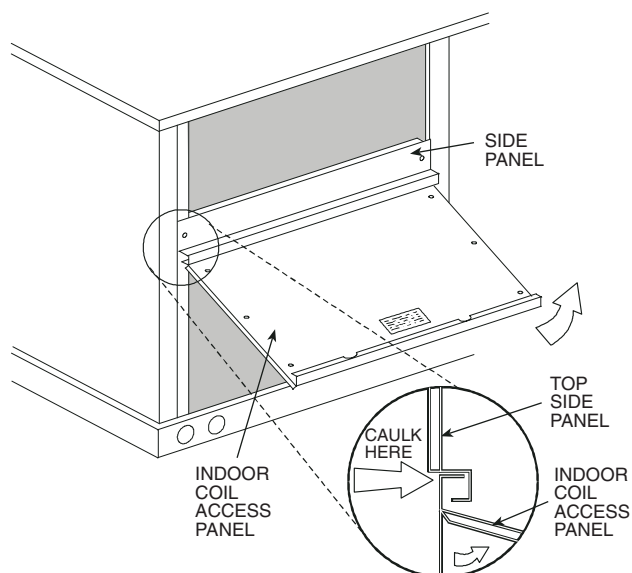


**Fig. 29 — Indoor Coil Access Panel Relocation**

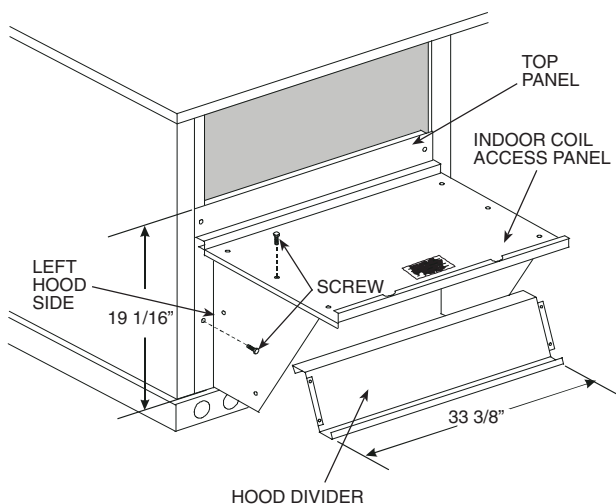


**Fig. 30 — Outdoor-Air Hood Construction**

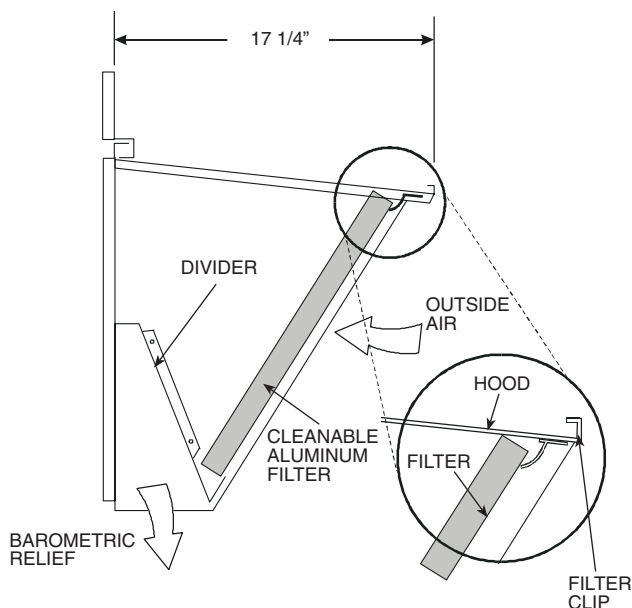

**Fig. 31 — Filter Installation**

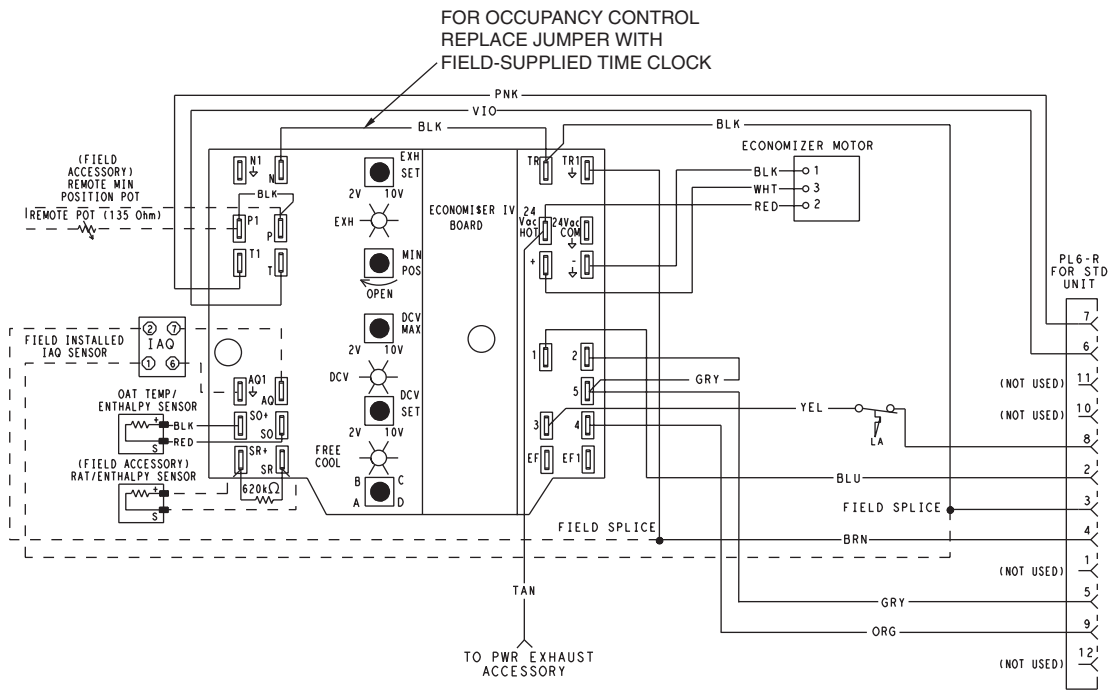

**Fig. 32 — EconoMiSer IV Wiring**

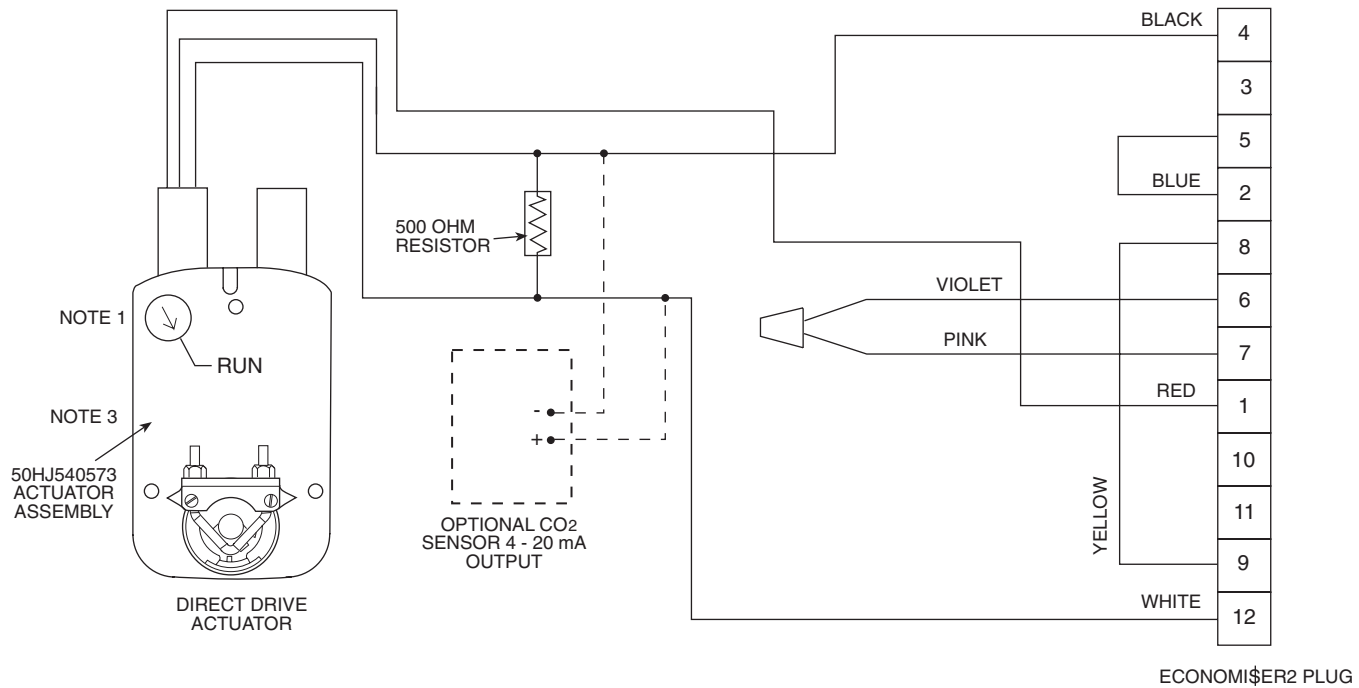


**NOTES:**


1. Switch on actuator must be in run position for economizer to operate.
2. PremierLink™ control requires that the standard 50HJ540569 outside-air sensor be replaced by either the CROASENR001A00 dry bulb sensor or HH57A077 enthalpy sensor.
3. 50HJ540573 actuator consists of the 50HJ540567 actuator and a harness with 500-ohm resistor.

**Fig. 33 — EconoMiSer2 with 4 to 20 mA Control Wiring**




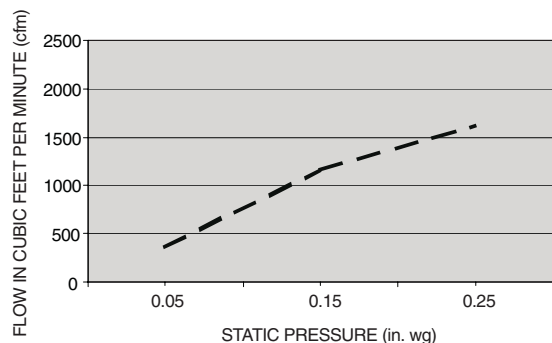

**Fig. 34 — Barometric Flow Capacity**

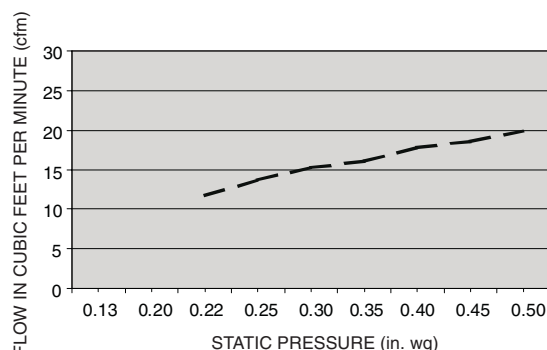

**Fig. 35 — Outdoor-Air Damper Leakage**

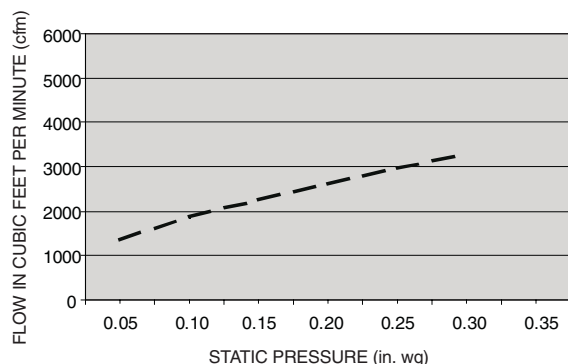

**Fig. 36 — Return-Air Pressure Drop**


#### ECONOMISER IV STANDARD SENSORS

**Outdoor Air Temperature (OAT) Sensor** — The outdoor air temperature sensor (HH57AC074) is a 10 to 20 mA device used to measure the outdoor-air temperature. The outdoor-air temperature is used to determine when the EconoMiSer IV can be used for free cooling. The sensor is factory-installed on the EconoMiSer IV in the outdoor airstream. See Fig. 25. The operating range of temperature measurement is 40 to 100 F.

**Supply Air Temperature (SAT) Sensor** — The supply air temperature sensor is a 3 K thermistor located at the inlet of the indoor fan. See Fig. 37. This sensor is factory installed. The operating range of temperature measurement is 0° to 158 F. See Table 4 for sensor temperature/resistance values.

The temperature sensor looks like an eyelet terminal with wires running to it. The sensor is located in the “crimp end” and is sealed from moisture.

**Outdoor Air Lockout Sensor** — The EconoMiSer IV is equipped with an ambient temperature lockout switch located in the outdoor air stream which is used to lockout the compressors below a 42 F ambient temperature. See Fig. 25.

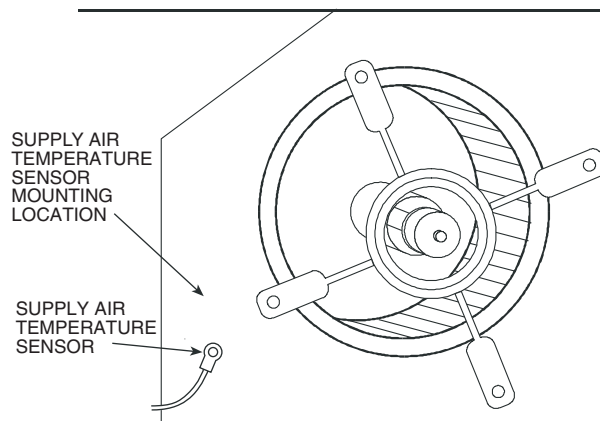

**Fig. 37 — Supply Air Sensor Location**

**Table 4 — Supply Air Sensor Temperature/Resistance Values**

TEMPERATURE (F)	RESISTANCE (ohms)
-58	200,250
-40	100,680
-22	53,010
-4	29,091
14	16,590
32	9,795
50	5,970
68	3,747
77	3,000
86	2,416
104	1,597
122	1,080
140	746
158	525
176	376
185	321
194	274
212	203
230	153
248	116
257	102
266	89
284	70
302	55

#### ECONOMISER IV CONTROL MODES

**IMPORTANT:** The optional EconoMiSer2 does not include a controller. The EconoMiSer2 is operated by a 4 to 20 mA signal from an existing field-supplied controller (such as PremierLink™ control). See Fig. 33 for wiring information.

Determine the EconoMiSer IV control mode before set up of the control. Some modes of operation may require different sensors. Refer to Table 5. The EconoMiSer IV is supplied from the factory with a supply air temperature sensor and an outdoor air temperature sensor. This allows for operation of the EconoMiSer IV with outdoor air dry bulb changeover control. Additional accessories can be added to allow for different types of changeover control and operation of the EconoMiSer IV and unit.

**Outdoor Dry Bulb Changeover** — The standard controller is shipped from the factory configured for outdoor dry bulb changeover control. The outdoor air and supply air temperature sensors are included as standard. For this control mode, the

outdoor temperature is compared to an adjustable set point selected on the control. If the outdoor-air temperature is above the set point, the EconoMi\$er IV will adjust the outside air dampers to minimum position. If the outdoor-air temperature is below the set point, the position of the outdoor air dampers will be controlled to provide free cooling using outdoor air. When in this mode, the LED next to the free cooling set point potentiometer will be on. The changeover temperature set point is controlled by the free cooling set point potentiometer located on the control. See Fig. 38. The scale on the potentiometer is A, B, C, and D. See Fig. 39 for the corresponding temperature changeover values.

**Differential Dry Bulb Control** — For differential dry bulb control the standard outdoor dry bulb sensor is used in conjunction with an additional accessory dry bulb sensor (part number CRTEMPSN002A00). The accessory sensor must be mounted in the return airstream. See Fig. 40. Wiring is provided in the EconoMi\$er IV wiring harness. See Fig. 32.

In this mode of operation, the outdoor-air temperature is compared to the return-air temperature and the lower temperature airstream is used for cooling. When using this mode of changeover control, turn the enthalpy setpoint potentiometer fully clockwise to the D setting. See Fig. 38.

Table 5 — EconoMi\$er IV Sensor Usage

APPLICATION	ECONOMISER IV WITH OUTDOOR AIR DRY BULB SENSOR		
	Accessories Required		
Outdoor Air Dry Bulb	None. The outdoor air dry bulb sensor is factory installed.		
Differential Dry Bulb	CRTEMPSN002A00*		
Single Enthalpy	HH57AC078		
Differential Enthalpy	HH57AC078 and CRENTDIF004A00*		
CO <sub>2</sub> for DCV Control using a Wall-Mounted CO <sub>2</sub> Sensor	33ZCSENCO2		
CO <sub>2</sub> for DCV Control using a Duct-Mounted CO <sub>2</sub> Sensor	33ZCSENCO2† and 33ZCASPCO2**	or	CRCBDIOX005A00††

\*CRENTDIF004A00 and CRTEMPSN002A00 accessories are used on many different base units. As such, these kits may contain parts that will not be needed for installation.  
†33ZCSENCO2 is an accessory CO<sub>2</sub> sensor.  
\*\*33ZCASPCO2 is an accessory aspirator box required for duct-mounted applications.  
††CRCBDIOX005A00 is an accessory that contains both 33ZCSENCO2 and 33ZCASPCO2 accessories.

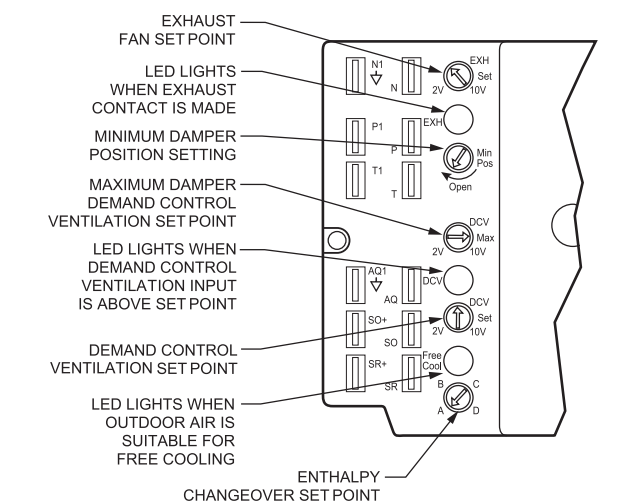


Fig. 38 — EconoMi\$er IV Controller Potentiometer and LED Locations

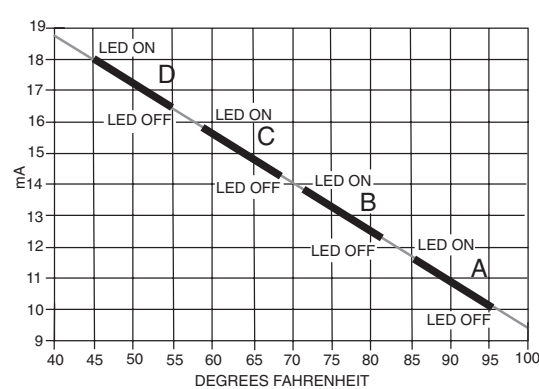


Fig. 39 — Outside Air Temperature Changeover Set Points

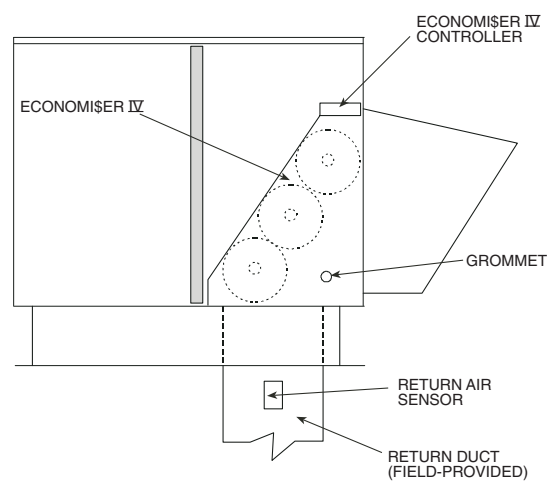


Fig. 40 — Return Air Temperature or Enthalpy Sensor Mounting Location

**Outdoor Enthalpy Changeover** — For enthalpy control, accessory enthalpy sensor (part number HH57AC078) is required. Replace the standard outdoor dry bulb temperature sensor with the accessory enthalpy sensor in the same mounting location. See Fig. 25. When the outdoor air enthalpy rises above the outdoor enthalpy changeover set point, the outdoor-air damper moves to its minimum position. The outdoor enthalpy changeover set point is set with the outdoor enthalpy set point potentiometer on the EconoMi\$er IV controller. The set points are A, B, C, and D. See Fig. 41. The factory-installed 620-ohm jumper must be in place across terminals SR and SR+ on the EconoMi\$er IV controller. See Fig. 25 and 42.

**Differential Enthalpy Control** — For differential enthalpy control, the EconoMi\$er IV controller uses two enthalpy sensors (HH57AC078 and CRENTDIF004A00), one in the outside air and one in the return air duct. The EconoMi\$er IV controller compares the outdoor air enthalpy to the return air enthalpy to determine EconoMi\$er IV use. The controller selects the lower enthalpy air (return or outdoor) for cooling. For example, when the outdoor air has a lower enthalpy than the return air, the EconoMi\$er IV opens to bring in outdoor air for free cooling.

Replace the standard outside air dry bulb temperature sensor with the accessory enthalpy sensor in the same mounting location. See Fig. 25. Mount the return air enthalpy sensor in the return air duct. See Fig. 40. Wiring is provided in the EconoMi\$er IV wiring harness. See Fig. 32. The outdoor enthalpy changeover set point is set with the outdoor enthalpy set point potentiometer on the EconoMi\$er IV controller. When


using this mode of changeover control, turn the enthalpy set-point potentiometer fully clockwise to the D setting.

**Indoor Air Quality (IAQ) Sensor Input** — The IAQ input can be used for demand control ventilation control based on the level of CO<sub>2</sub> measured in the space or return air duct.


Mount the accessory IAQ sensor according to manufacturer specifications. The IAQ sensor should be wired to the AQ and

AQ1 terminals of the controller. Adjust the DCV potentiometers to correspond to the DCV voltage output of the indoor air quality sensor at the user-determined set point. See Fig. 43.


If a separate field-supplied transformer is used to power the IAQ sensor, the sensor must not be grounded or the EconoMi\$er IV control board will be damaged.

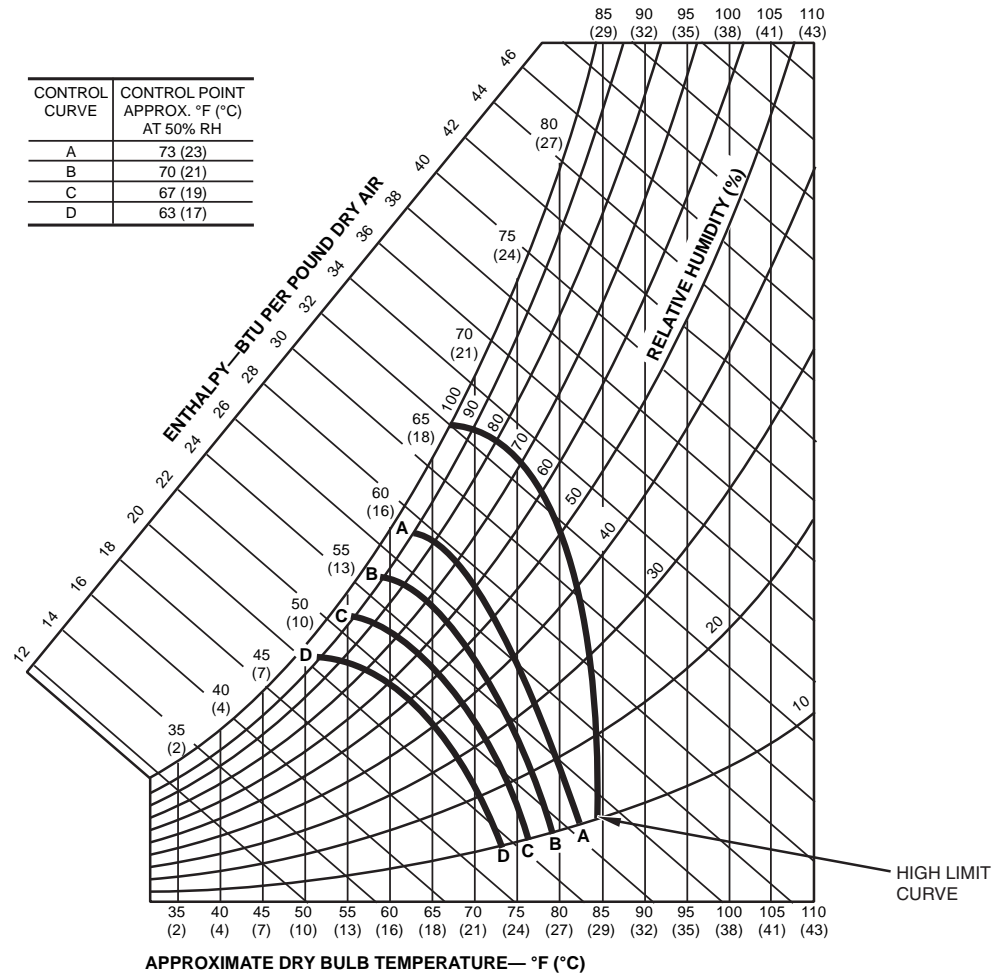

**Fig. 41 — Enthalpy Changeover Set Points**

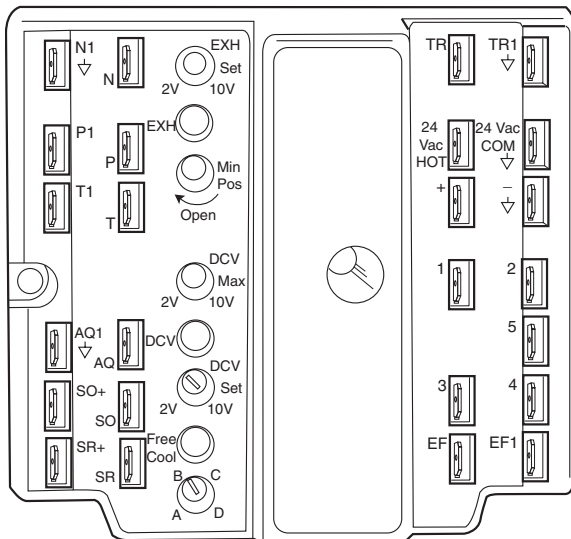

**Fig. 42 — EconoMi\$er IV Control**

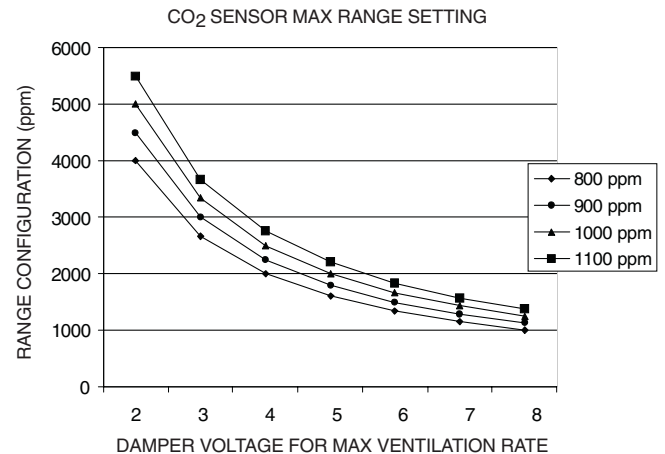

**Fig. 43 — CO<sub>2</sub> Sensor Maximum Range Setting**

**Exhaust Set Point Adjustment** — The exhaust set point will determine when the exhaust fan runs based on damper position (if accessory power exhaust is installed). The set point is modified with the Exhaust Fan Set Point (EXH SET) potentiometer. See Fig. 38. The set point represents the damper position above which the exhaust fans will be turned on. When there is a call for exhaust, the EconoMi\$er IV controller provides a  $45 \pm 15$  second delay before exhaust fan activation to allow the dampers to open. This delay allows the damper to reach the appropriate position to avoid unnecessary fan overload.

**Minimum Position Control** — There is a minimum damper position potentiometer on the EconoMi\$er IV controller. See Fig. 38. The minimum damper position maintains the minimum airflow into the building during the occupied period.

When using demand ventilation, the minimum damper position represents the minimum ventilation position for VOC (volatile organic compound) ventilation requirements. The maximum demand ventilation position is used for fully occupied ventilation.

When demand ventilation control is not being used, the minimum position potentiometer should be used to set the occupied ventilation position. The maximum demand ventilation position should be turned fully clockwise.

Adjust the minimum position potentiometer to allow the minimum amount of outdoor air, as required by local codes, to enter the building. Make minimum position adjustments with at least 10 F temperature difference between the outdoor and return-air temperatures.

To determine the minimum position setting, perform the following procedure:

1. Calculate the appropriate mixed air temperature using the following formula:

$$(T_O \times \frac{OA}{100}) + (T_R \times \frac{RA}{100}) = T_M$$

$T_O$  = Outdoor-Air Temperature

$OA$  = Percent of Outdoor Air

$T_R$  = Return-Air Temperature

$RA$  = Percent of Return Air

$T_M$  = Mixed-Air Temperature

As an example, if local codes require 10% outdoor air during occupied conditions, outdoor-air temperature is 60 F, and return-air temperature is 75 F.

$$(60 \times .10) + (75 \times .90) = 73.5 \text{ F}$$

2. Disconnect the supply air sensor from terminals T and T1.
3. Ensure that the factory-installed jumper is in place across terminals P and P1. If remote damper positioning is being used, make sure that the terminals are wired according to Fig. 32 and that the minimum position potentiometer is turned fully clockwise.
4. Connect 24 vac across terminals TR and TR1.
5. Carefully adjust the minimum position potentiometer until the measured supply air temperature matches the calculated value.
6. Reconnect the supply air sensor to terminals T and T1.

Remote control of the EconoMi\$er IV damper is desirable when requiring additional temporary ventilation. If a field-supplied remote potentiometer (Honeywell part number S963B1128) is wired to the EconoMi\$er IV controller, the minimum position of the damper can be controlled from a remote location.

To control the minimum damper position remotely, remove the factory-installed jumper on the P and P1 terminals on the EconoMi\$er IV controller. Wire the field-supplied potentiometer to the P and P1 terminals on the EconoMi\$er IV controller. See Fig. 42.

**Damper Movement** — Damper movement from full open to full closed (or vice versa) takes  $2\frac{1}{2}$  minutes.

**Thermostats** — The EconoMi\$er IV control works with conventional thermostats that have a Y1 (cool stage 1), Y2 (cool stage 2), W1 (heat stage 1), W2 (heat stage 2), and G (fan). The EconoMi\$er IV control does not support space temperature sensors. Connections are made at the thermostat terminal connection board located in the main control box.

**Occupancy Control** — The factory default configuration for the EconoMi\$er IV control is occupied mode. Occupied status is provided by the black jumper from terminal TR to terminal N. When unoccupied mode is desired, install a field-supplied time clock function in place of the jumper between TR and N. See Fig. 32. When the time clock contacts are closed, the EconoMi\$er IV control will be in occupied mode. When the time clock contacts are open (removing the 24-v signal from terminal N), the EconoMi\$er IV will be in unoccupied mode.

**Demand Controlled Ventilation (DCV)** — When using the EconoMi\$er IV for demand controlled ventilation, there are some equipment selection criteria which should be considered. When selecting the heat capacity and cool capacity of the equipment, the maximum ventilation rate must be evaluated for design conditions. The maximum damper position must be calculated to provide the desired fresh air.

Typically the maximum ventilation rate will be about 5 to 10% more than the typical cfm required per person, using normal outside air design criteria.

A proportional anticipatory strategy should be taken with the following conditions: a zone with a large area, varied occupancy, and equipment that cannot exceed the required ventilation rate at design conditions. Exceeding the required ventilation rate means the equipment can condition air at a maximum ventilation rate that is greater than the required ventilation rate for maximum occupancy. A proportional-anticipatory strategy will cause the fresh air supplied to increase as the room  $CO_2$  level increases even though the  $CO_2$  set point has not been reached. By the time the  $CO_2$  level reaches the set point, the damper will be at maximum ventilation and should maintain the set point.

In order to have the  $CO_2$  sensor control the economizer damper in this manner, first determine the damper voltage output for minimum or base ventilation. Base ventilation is the ventilation required to remove contaminants during unoccupied periods. The following equation may be used to determine the percent of outside-air entering the building for a given damper position. For best results there should be at least a 10 degree difference in outside and return-air temperatures.

$$(T_O \times \frac{OA}{100}) + (T_R \times \frac{RA}{100}) = T_M$$

$T_O$  = Outdoor-Air Temperature

$OA$  = Percent of Outdoor Air

$T_R$  = Return-Air Temperature

$RA$  = Percent of Return Air

$T_M$  = Mixed-Air Temperature

Once base ventilation has been determined, set the minimum damper position potentiometer to the correct position.

The same equation can be used to determine the occupied or maximum ventilation rate to the building. For example, an output of 3.6 volts to the actuator provides a base ventilation rate of 5% and an output of 6.7 volts provides the maximum ventilation rate of 20% (or base plus 15 cfm per person). Use Fig. 43 to determine the maximum setting of the  $CO_2$  sensor. For example, a 1100 ppm set point relates to a 15 cfm per person design. Use the 1100 ppm curve on Fig. 43 to find the point when the  $CO_2$  sensor output will be 6.7 volts. Line up the point on the graph with the left side of the chart to determine that the range configuration for the  $CO_2$  sensor should be 1800 ppm. The

EconoMi\$er IV controller will output the 6.7 volts from the CO<sub>2</sub> sensor to the actuator when the CO<sub>2</sub> concentration in the space is at 1100 ppm. The DCV set point may be left at 2 volts since the CO<sub>2</sub> sensor voltage will be ignored by the EconoMi\$er IV controller until it rises above the 3.6 volt setting of the minimum position potentiometer.

Once the fully occupied damper position has been determined, set the maximum damper demand control ventilation potentiometer to this position. Do not set to the maximum position as this can result in over-ventilation to the space and potential high-humidity levels.

**CO<sub>2</sub> Sensor Configuration** — The CO<sub>2</sub> sensor has preset standard voltage settings that can be selected anytime after the sensor is powered up. See Table 6.

Use setting 1 or 2 for Carrier equipment. See Table 6.

1. Press Clear and Mode buttons. Hold at least 5 seconds until the sensor enters the Edit mode.
2. Press Mode twice. The STDSET Menu will appear.
3. Use the Up/Down button to select the preset number. See Table 6.
4. Press Enter to lock in the selection.
5. Press Mode to exit and resume normal operation.

The custom settings of the CO<sub>2</sub> sensor can be changed anytime after the sensor is energized. Follow the steps below to change the non-standard settings:

1. Press Clear and Mode buttons. Hold at least 5 seconds until the sensor enters the Edit mode.
2. Press Mode twice. The STDSET Menu will appear.
3. Use the Up/Down button to toggle to the NONSTD menu and press Enter.
4. Use the Up/Down button to toggle through each of the nine variables, starting with Altitude, until the desired setting is reached.
5. Press Mode to move through the variables.
6. Press Enter to lock in the selection, then press Mode to continue to the next variable.

**Dehumidification of Fresh Air with DCV Control** — Information from ASHRAE indicates that the largest humidity load on any zone is the fresh air introduced. For some applications, a device such as a 62AQ energy recovery unit is added to reduce the moisture content of the fresh air being brought into the building when the enthalpy is high. In most cases, the normal

heating and cooling processes are more than adequate to remove the humidity loads for most commercial applications.

If normal rooftop heating and cooling operation is not adequate for the outdoor humidity level, an energy recovery unit and/or a dehumidification option should be considered.

**Step 9 — Adjust Evaporator-Fan Speed** — Adjust evaporator-fan speed to meet jobsite conditions.

Tables 7 and 8 show fan rpm at motor pulley settings. Tables 9 and 10 show maximum amp draw of belt-drive motor. Table 11 shows sound data. Refer to Tables 12-29 for performance data. See Table 30 for accessory static pressure drop. See Fig. 44 for the Humidi-MiZer™ system static pressure drops.

**BELT-DRIVE MOTORS** — Fan motor pulleys are factory set for speed shown in Table 1. Check pulley alignment and belt tension prior to start-up.

**NOTE:** Before adjusting fan speed, make sure the new fan speed will provide an air temperature rise range as shown in Table 1.

To change fan speed:

1. Shut off unit power supply, tag disconnect.
2. Loosen belt by loosening fan motor mounting nuts. See Fig. 45.
3. Loosen movable pulley flange setscrew (see Fig. 46).
4. Screw movable flange toward fixed flange to increase speed and away from fixed flange to decrease speed. Increasing fan speed increases load on motor. Do not exceed maximum speed specified in Table 1.
5. Set movable flange at nearest keyway of pulley hub and tighten setscrew. (See Table 1 for speed change for each full turn of pulley flange.)

To align fan and motor pulleys, loosen fan pulley setscrews and slide fan pulley along fan shaft. Make angular alignment by loosening motor from mounting.

To adjust belt tension:


1. Loosen fan motor mounting nuts.
2. Slide motor mounting plate away from fan scroll for proper belt tension ( $\frac{1}{2}$ -in. deflection with 8 to 10 lb of force) and tighten mounting nuts.
3. Adjust lock bolt and nut on mounting plate to secure motor in fixed position.

**Table 6 — CO<sub>2</sub> Sensor Standard Settings**


SETTING	EQUIPMENT	OUTPUT	VENTILATION RATE (cfm/Person)	ANALOG OUTPUT	CO <sub>2</sub> CONTROL RANGE (ppm)	OPTIONAL RELAY SETPOINT (ppm)	RELAY HYSTERESIS (ppm)
1	Interface w/Standard Building Control System	Proportional	Any	0-10V 4-20 mA	0-2000	1000	50
2		Proportional	Any	2-10V 7-20 mA	0-2000	1000	50
3		Exponential	Any	0-10V 4-20 mA	0-2000	1100	50
4	Economizer	Proportional	15	0-10V 4-20 mA	0-1100	1100	50
5		Proportional	20	0-10V 4-20 mA	0- 900	900	50
6		Exponential	15	0-10V 4-20 mA	0-1100	1100	50
7		Exponential	20	0-10V 4-20 mA	0- 900	900	50
8	Health & Safety	Proportional	—	0-10V 4-20 mA	0-9999	5000	500
9	Parking/Air Intakes/ Loading Docks	Proportional	—	0-10V 4-20 mA	0-2000	700	50

LEGEND


ppm — Parts Per Million

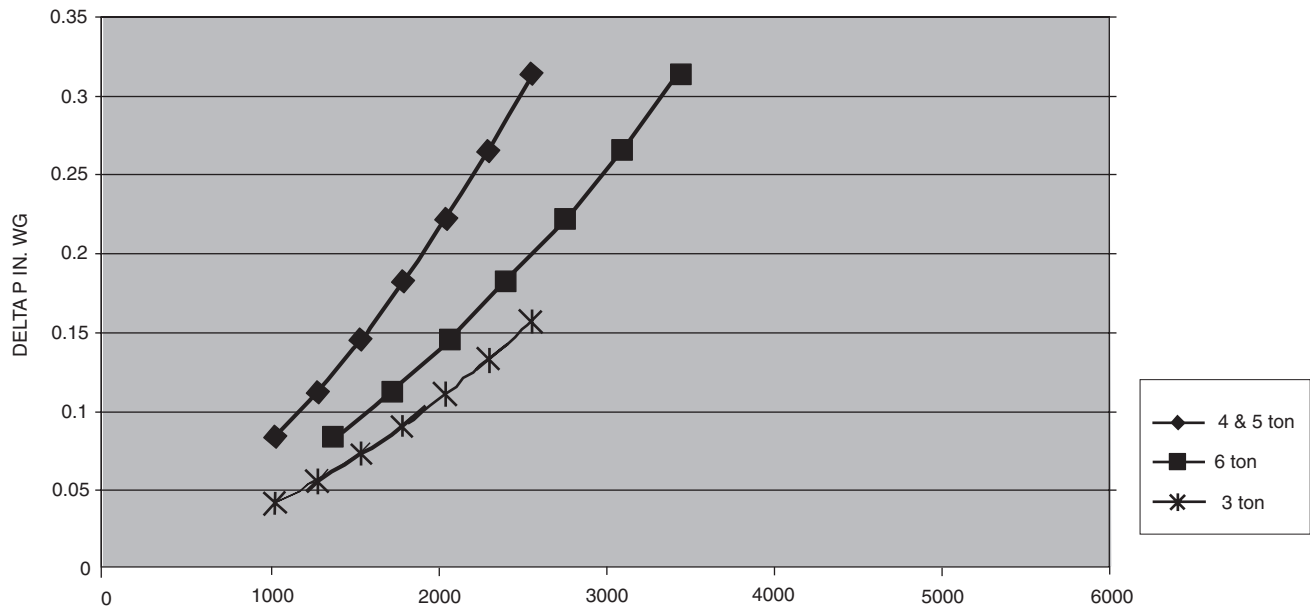

**Fig. 44 — Humidi-MiZer™ Adaptive Dehumidification System Static Pressure Drop (in. wg)**

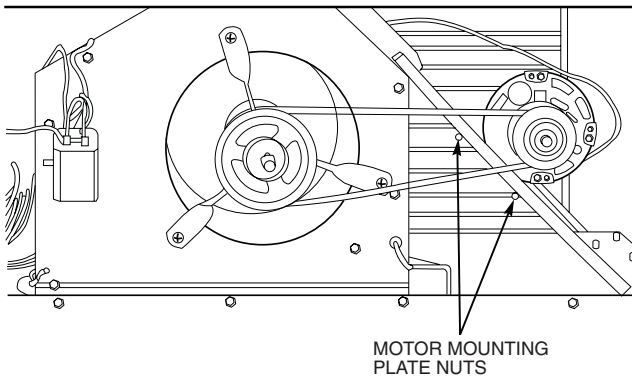

**Fig. 45 — Belt-Drive Motor Mounting**

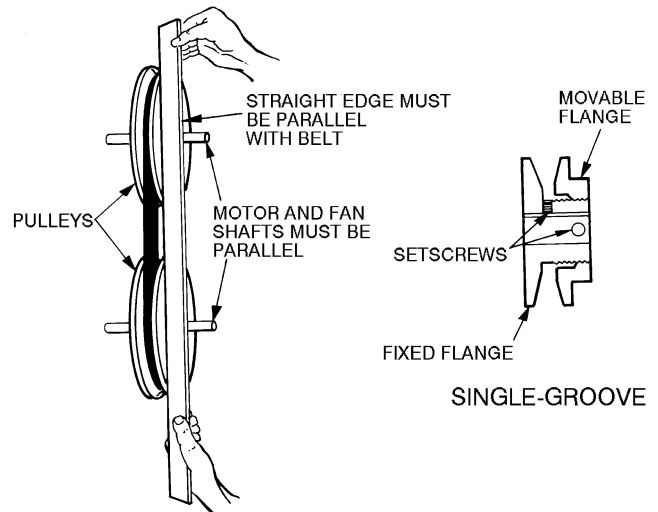

**Fig. 46 — Evaporator-Fan Pulley Adjustment**

**Table 7 — 48HJ Fan Rpm at Motor Pulley Setting With Standard Motor\***

UNIT 48HJ	MOTOR PULLEY TURNS OPEN												
	0	1/2	1	1 1/2	2	2 1/2	3	3 1/2	4	4 1/2	5	5 1/2	6
004	1044	1008	971	935	898	862	826	789	753	716	680	—	—
005	1185	1144	1102	1061	1019	978	936	895	853	812	770	—	—
006	1460	1425	1389	1354	1318	1283	1248	1212	1177	1141	1106	1070	1035
007	1585	1538	1492	1445	1399	1352	1305	1259	1212	1166	1119	—	—

\*Approximate fan rpm shown (standard motor/drive).

**Table 8 — 48HJ Fan Rpm at Motor Pulley Setting With High-Static Motor\***

UNIT 48HJ	MOTOR PULLEY TURNS OPEN												
	0	1/2	1	1 1/2	2	2 1/2	3	3 1/2	4	4 1/2	5	5 1/2	6
004	1455	1423	1392	1360	1328	1297	1265	1233	1202	1170	1138	1107	1075
005	1455	1423	1392	1360	1328	1297	1265	1233	1202	1170	1138	1107	1075
006	1685	1589	1557	1525	1493	1460	1428	1396	1364	1332	1300	—	—
007	1685	1589	1557	1525	1493	1460	1428	1396	1364	1332	1300	—	—

\*Approximate fan rpm shown (high-static motor/drive).



**Table 9 — Evaporator-Fan Motor Data — Standard Motor**

UNIT 48HJ	UNIT PHASE	MAXIMUM CONTINUOUS BHP*	MAXIMUM OPERATING WATTS*	UNIT VOLTAGE	MAXIMUM AMP DRAW
004	Single	1.20	1000	208/230	4.9
	Three	1.20	1000	208/230	4.9
				460	2.2
				575	2.2
005	Single	1.20	1000	208/230	4.9
	Three	1.20	1000	208/230	4.9
				460	2.2
				575	2.2
006	Single	1.30	1650	208/230	10.1
	Three	2.40	2120	208/230	6.7
				460	3.0
				575	3.0
007	Three	2.40	2120	208/230	6.7
				460	3.0
				575	3.0

LEGEND

Bhp — Brake Horsepower

\*Extensive motor and electrical testing on these units ensures that the full horsepower and watts range of the motors can be utilized with confidence. Using the fan motors up to the ratings shown in this table will not result in nuisance tripping or premature motor failure. Unit warranty will not be affected.

**Table 10 — Evaporator-Fan Motor Data — High-Static Motors**

UNIT 48HJ	UNIT PHASE	MAXIMUM CONTINUOUS BHP*	MAXIMUM OPERATING WATTS*	UNIT VOLTAGE	MAXIMUM AMP DRAW
004	Three	2.40	2120	208/230	6.7
				460	3.0
				575	3.0
005	Three	2.40	2120	208/230	6.7
				460	3.0
				575	3.0
006	Three	2.90	2615	208/230	8.6
				460	3.9
				575	3.9
007	Three	2.90	2615	208/230	8.6
				460	3.9
				575	3.9

LEGEND

Bhp — Brake Horsepower

\*Extensive motor and electrical testing on these units ensures that the full horsepower and watts range of the motors can be utilized with confidence. Using the fan motors up to the ratings shown in this table will not result in nuisance tripping or premature motor failure. Unit warranty will not be affected.

**Table 11 — Outdoor Sound Power (Total Unit)**

UNIT 48HJ	ARI RATING (decibels)	OCTAVE BANDS							
		63	125	250	500	1000	2000	4000	8000
004,005	76	55.9	66.0	64.0	66.2	68.4	64.5	61.7	57.3
006,007	80	59.1	68.9	68.7	71.9	74.0	68.9	65.7	59.0

LEGEND

ARI — Air Conditioning and Refrigeration Institute

**GENERAL FAN PERFORMANCE NOTES**

1. Values include losses for filters, unit casing, and wet coils. See Table 30 and Fig. 44 for accessory/FIOP static pressure information.
2. Extensive motor and electrical testing on these units ensures that the full range of the motor can be utilized with confidence. Using the fan motors up to the ratings shown will not result in nuisance tripping or premature motor failure. Unit warranty will not be affected. See Tables 9 and 10 on this page for additional information.
3. Use of a field-supplied motor may affect wire sizing. Contact your Carrier representative to verify.
4. Interpolation is permissible. Do not extrapolate.

**Table 12 — Fan Performance 48HJ004 — Vertical Discharge Units; Standard Motor (Belt Drive)\***

AIRFLOW CFM	EXTERNAL STATIC PRESSURE (in. wg)														
	0.2			0.4			0.6			0.8			1.0		
	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts
900	567	0.15	145	688	0.22	222	786	0.30	296	871	0.37	368	947	0.44	437
1000	599	0.18	177	717	0.27	265	814	0.35	349	897	0.43	430	972	0.51	509
1100	632	0.22	215	747	0.31	313	842	0.41	407	925	0.50	498	999	0.59	587
1200	666	0.26	257	778	0.37	367	871	0.47	471	952	0.57	572	1025	0.67	670
1300	701	0.31	306	810	0.43	426	901	0.54	540	981	0.65	651	<b>1053</b>	<b>0.76</b>	<b>760</b>
1400	737	0.36	361	842	0.49	491	931	0.62	616	1010	0.74	738	<b>1081</b>	<b>0.86</b>	<b>856</b>
1500	773	0.42	422	875	0.57	564	963	0.70	699	1040	0.84	831	<b>1110</b>	<b>0.96</b>	<b>960</b>

AIRFLOW CFM	EXTERNAL STATIC PRESSURE (in. wg)														
	1.2			1.4			1.6			1.8			2.0		
	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts
900	1016	0.51	505	<b>1080</b>	0.57	<b>572</b>	<b>1139</b>	0.64	<b>637</b>	<b>1195</b>	0.71	<b>702</b>	<b>1249</b>	0.77	<b>765</b>
1000	1041	0.59	587	<b>1104</b>	0.67	<b>662</b>	<b>1163</b>	0.74	<b>737</b>	<b>1219</b>	0.81	<b>811</b>	<b>1272</b>	0.89	<b>883</b>
1100	<b>1066</b>	0.68	<b>674</b>	<b>1129</b>	0.76	<b>759</b>	<b>1188</b>	0.85	<b>843</b>	<b>1243</b>	0.93	<b>925</b>	<b>1296</b>	1.01	<b>1007</b>
1200	<b>1093</b>	0.77	<b>767</b>	<b>1155</b>	0.87	<b>861</b>	<b>1213</b>	0.96	<b>955</b>	<b>1268</b>	1.05	<b>1047</b>	<b>1321</b>	1.14	<b>1137</b>
1300	<b>1119</b>	0.87	<b>866</b>	<b>1181</b>	0.98	<b>970</b>	<b>1239</b>	1.08	<b>1073</b>	<b>1294</b>	1.18	<b>1175</b>	—	—	—
1400	<b>1147</b>	0.98	<b>972</b>	<b>1208</b>	1.09	<b>1086</b>	—	—	—	—	—	—	—	—	—
1500	<b>1175</b>	1.09	<b>1086</b>	—	—	—	—	—	—	—	—	—	—	—	—

LEGEND

**Bhp** — Brake Horsepower  
**Watts** — Input Watts to Motor

NOTES:

1. **Boldface** indicates field-supplied drive is required.
2. Maximum continuous bhp is 1.20.
3. See page 27 for general fan performance notes.

\*Motor drive range: 680 to 1044 rpm. All other rpms require field-supplied drive.

**Table 13 — Fan Performance 48HJ004 — Vertical Discharge Units; High-Static Motor (Belt Drive)\***

AIRFLOW CFM	EXTERNAL STATIC PRESSURE (in. wg)														
	0.2			0.4			0.6			0.8			1.0		
	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts
900	567	0.15	145	688	0.22	222	786	0.30	296	871	0.37	368	947	0.44	437
1000	599	0.18	177	717	0.27	265	814	0.35	349	897	0.43	430	972	0.51	509
1100	632	0.22	215	747	0.31	313	842	0.41	407	925	0.50	498	999	0.59	587
1200	666	0.26	257	778	0.37	367	871	0.47	471	952	0.57	572	1025	0.67	670
1300	701	0.31	306	810	0.43	426	901	0.54	540	981	0.65	651	<b>1053</b>	<b>0.76</b>	<b>760</b>
1400	737	0.36	361	842	0.49	491	931	0.62	616	1010	0.74	738	1081	0.86	856
1500	773	0.42	422	875	0.57	564	963	0.70	699	1040	0.84	831	1110	0.96	960

AIRFLOW CFM	EXTERNAL STATIC PRESSURE (in. wg)														
	1.2			1.4			1.6			1.8			2.0		
	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts
900	<b>1016</b>	0.51	<b>505</b>	1080	0.57	572	1139	0.64	637	1195	0.71	702	1249	0.77	765
1000	<b>1041</b>	0.59	<b>587</b>	1104	0.67	662	1163	0.74	737	1219	0.81	811	1272	0.89	883
1100	<b>1066</b>	0.68	<b>674</b>	1129	0.76	759	1188	0.85	843	1243	0.93	925	1296	1.01	1007
1200	1093	0.77	767	1155	0.87	861	1213	0.96	955	1268	1.05	1047	1321	1.14	1137
1300	1119	0.87	866	1181	0.98	970	1239	1.08	1073	1294	1.18	1175	1346	1.28	1275
1400	1147	0.98	972	1208	1.09	1086	1265	1.21	1199	1320	1.32	1310	1371	1.43	1419
1500	1175	1.09	1086	1235	1.22	1209	1292	1.34	1332	1346	1.46	1452	1397	1.58	1572

LEGEND

**Bhp** — Brake Horsepower  
**Watts** — Input Watts to Motor

NOTES:

1. **Boldface** indicates field-supplied drive is required.
2. Maximum continuous bhp is 2.40.
3. See page 27 for general fan performance notes.

\*Motor drive range: 1075 to 1455 rpm. All other rpms require field-supplied drive.

**Table 14 — Fan Performance 48HJ005 — Vertical Discharge Units; Standard Motor (Belt Drive)\***

AIRFLOW CFM	EXTERNAL STATIC PRESSURE (in. wg)														
	0.2			0.4			0.6			0.8			1.0		
	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts
1200	666	0.26	257	778	0.37	367	871	0.47	471	952	0.57	572	1025	0.67	670
1300	701	0.31	306	810	0.43	426	901	0.54	540	981	0.65	651	1053	0.76	760
1400	737	0.36	361	842	0.49	491	931	0.62	616	1010	0.74	738	1081	0.86	856
1500	773	0.42	422	875	0.57	564	963	0.70	699	1040	0.84	831	1110	0.96	960
1600	810	0.49	491	909	0.65	643	994	0.79	790	1070	0.94	932	1140	1.08	1070
1700	847	0.57	567	943	0.73	730	1027	0.89	888	1101	1.05	1040	1170	1.20	1189
1800	885	0.66	652	978	0.83	826	1060	1.00	994	1133	1.16	1157	—	—	—
1900	923	0.75	745	1014	0.94	930	1093	1.11	1109	—	—	—	—	—	—
2000	962	0.85	847	1049	1.05	1043	—	—	—	—	—	—	—	—	—

AIRFLOW CFM	EXTERNAL STATIC PRESSURE (in. wg)														
	1.2			1.4			1.6			1.8			2.0		
	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts
1200	1093	0.77	767	1155	0.87	861	1213	0.96	955	1268	1.05	1047	1321	1.14	1137
1300	1119	0.87	866	1181	0.98	970	1239	1.08	1073	1294	1.18	1175	—	—	—
1400	1147	0.98	972	1208	1.09	1086	—	—	—	—	—	—	—	—	—
1500	1175	1.09	1086	—	—	—	—	—	—	—	—	—	—	—	—
1600	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
1700	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
1800	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
1900	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
2000	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—

LEGEND

**Bhp** — Brake Horsepower  
**Watts** — Input Watts to Motor

NOTES:

1. **Boldface** indicates field-supplied drive is required.
2. Maximum continuous bhp is 1.20.
3. See page 27 for general fan performance notes.

\*Motor drive range: 770 to 1185 rpm. All other rpms require field-supplied drive.

**Table 15 — Fan Performance 48HJ005 — Vertical Discharge Units; High-Static Motor (Belt Drive)\***

AIRFLOW CFM	EXTERNAL STATIC PRESSURE (in. wg)														
	0.2			0.4			0.6			0.8			1.0		
	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts
1200	666	0.26	257	778	0.37	367	871	0.47	471	952	0.57	572	1025	0.67	670
1300	701	0.31	306	810	0.43	426	901	0.54	540	981	0.65	651	1053	0.76	760
1400	737	0.36	361	842	0.49	491	931	0.62	616	1010	0.74	738	1081	0.86	856
1500	773	0.42	422	875	0.57	564	963	0.70	699	1040	0.84	831	1110	0.96	960
1600	810	0.49	491	909	0.65	643	994	0.79	790	1070	0.94	932	1140	1.08	1070
1700	847	0.57	567	943	0.73	730	1027	0.89	888	1101	1.05	1040	1170	1.20	1189
1800	885	0.66	652	978	0.83	826	1060	1.00	994	1133	1.16	1157	1200	1.32	1316
1900	923	0.75	745	1014	0.94	930	1093	1.11	1109	1165	1.29	1283	1231	1.46	1453
2000	962	0.85	847	1049	1.05	1043	1127	1.24	1233	1198	1.42	1417	1263	1.61	1598

AIRFLOW CFM	EXTERNAL STATIC PRESSURE (in. wg)														
	1.2			1.4			1.6			1.8			2.0		
	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts
1200	1093	0.77	767	1155	0.87	861	1213	0.96	955	1268	1.05	1047	1321	1.14	1137
1300	1119	0.87	866	1181	0.98	970	1239	1.08	1073	1294	1.18	1175	1346	1.28	1275
1400	1147	0.98	972	1208	1.09	1086	1265	1.21	1199	1320	1.32	1310	1371	1.43	1419
1500	1175	1.09	1086	1235	1.22	1209	1292	1.34	1332	1346	1.46	1452	1397	1.58	1572
1600	1204	1.21	1207	1263	1.35	1340	1320	1.48	1472	1373	1.61	1603	1424	1.74	1732
1700	1233	1.34	1336	1292	1.49	1480	1348	1.63	1622	1401	1.77	1762	1451	1.91	1901
1800	1262	1.48	1473	1321	1.64	1627	1376	1.79	1779	1428	1.94	1930	1479	2.09	2078
1900	1293	1.63	1620	1350	1.79	1784	1405	1.96	1946	1457	2.12	2106	1506	2.28	2265
2000	1323	1.79	1776	1380	1.96	1950	1434	2.13	2123	1486	2.31	2293	—	—	—

LEGEND

**Bhp** — Brake Horsepower  
**Watts** — Input Watts to Motor

NOTES:

1. **Boldface** indicates field-supplied drive is required.
2. Maximum continuous bhp is 2.40.
3. See page 27 for general fan performance notes.

\*Motor drive range: 1075 to 1455 rpm. All other rpms require field-supplied drive.

**Table 16 — Fan Performance 48HJ006, Single-Phase — Vertical Discharge Units;  
Standard Motor (Belt Drive)\***

AIRFLOW CFM	EXTERNAL STATIC PRESSURE (in. wg)														
	0.2			0.4			0.6			0.8			1.0		
	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts
1500	<b>848</b>	<b>0.42</b>	<b>371</b>	<b>968</b>	<b>0.55</b>	<b>486</b>	1069	0.68	600	1158	0.80	715	1238	0.94	831
1600	<b>887</b>	<b>0.49</b>	<b>433</b>	<b>1004</b>	<b>0.63</b>	<b>556</b>	1103	0.76	678	1190	0.90	800	1269	1.04	922
1700	<b>927</b>	<b>0.57</b>	<b>502</b>	1040	0.71	633	1137	0.86	763	1223	1.00	892	1302	1.15	1022
1800	<b>967</b>	<b>0.65</b>	<b>579</b>	1077	0.81	718	1172	0.96	856	1257	1.12	993	1334	1.27	1130
1900	<b>1007</b>	<b>0.75</b>	<b>663</b>	1115	0.91	811	1208	1.08	957	1291	1.24	1101	—	—	—
2000	1048	0.85	757	1153	1.03	913	1244	1.20	1066	—	—	—	—	—	—
2100	1090	0.97	859	1191	1.15	1023	—	—	—	—	—	—	—	—	—
2200	1131	1.09	970	1230	1.29	1143	—	—	—	—	—	—	—	—	—
2300	1173	1.23	1091	—	—	—	—	—	—	—	—	—	—	—	—
2400	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
2500	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—

AIRFLOW CFM	EXTERNAL STATIC PRESSURE (in. wg)														
	1.2			1.4			1.6			1.8			2.0		
	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts
1500	1312	1.07	948	1380	1.20	1067	—	—	—	—	—	—	—	—	—
1600	1342	1.18	1047	—	—	—	—	—	—	—	—	—	—	—	—
1700	1374	1.30	1153	—	—	—	—	—	—	—	—	—	—	—	—
1800	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
1900	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
2000	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
2100	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
2200	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
2300	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
2400	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
2500	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—

LEGEND

**Bhp** — Brake Horsepower  
**Watts** — Input Watts to Motor

NOTES:

1. **Boldface** indicates field-supplied drive is required.
2. Maximum continuous bhp is 1.30.
3. See page 27 for general fan performance notes.

\*Motor drive range: 1035 to 1460 rpm. All other rpms require field-supplied drive.

**Table 17 — Fan Performance 48HJ006, Three-Phase — Vertical Discharge Units;  
Standard Motor (Belt Drive)\***

AIRFLOW CFM	EXTERNAL STATIC PRESSURE (in. wg)														
	0.2			0.4			0.6			0.8			1.0		
	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts
1500	<b>848</b>	<b>0.42</b>	<b>371</b>	<b>968</b>	<b>0.55</b>	<b>486</b>	1069	0.68	600	1158	0.80	715	1238	0.94	831
1600	<b>887</b>	<b>0.49</b>	<b>433</b>	<b>1004</b>	<b>0.63</b>	<b>556</b>	1103	0.76	678	1190	0.90	800	1269	1.04	922
1700	<b>927</b>	<b>0.57</b>	<b>502</b>	1040	0.71	633	1137	0.86	763	1223	1.00	892	1302	1.15	1022
1800	<b>967</b>	<b>0.65</b>	<b>579</b>	1077	0.81	718	1172	0.96	856	1257	1.12	993	1334	1.27	1130
1900	<b>1007</b>	<b>0.75</b>	<b>663</b>	1115	0.91	811	1208	1.08	957	1291	1.24	1101	1368	1.40	1246
2000	1048	0.85	757	1153	1.03	913	1244	1.20	1066	1326	1.37	1219	1401	1.54	1371
2100	1090	0.97	859	1191	1.15	1023	1281	1.33	1185	1361	1.51	1345	1435	1.69	1505
2200	1131	1.09	970	1230	1.29	1143	1318	1.48	1313	1397	1.67	1481	<b>1470</b>	<b>1.86</b>	<b>1649</b>
2300	1173	1.23	1091	1269	1.43	1273	1355	1.63	1451	1433	1.83	1627	<b>1505</b>	<b>2.03</b>	<b>1803</b>
2400	1215	1.38	1223	1309	1.59	1413	1393	1.80	1600	<b>1470</b>	<b>2.01</b>	<b>1784</b>	<b>1540</b>	<b>2.21</b>	<b>1967</b>
2500	1258	1.54	1365	1349	1.76	1564	1431	1.98	1759	<b>1506</b>	<b>2.20</b>	<b>1951</b>	—	—	—

AIRFLOW CFM	EXTERNAL STATIC PRESSURE (in. wg)														
	1.2			1.4			1.6			1.8			2.0		
	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts
1500	1312	1.07	948	1380	1.20	1067	1445	1.34	1189	<b>1506</b>	<b>1.48</b>	<b>1312</b>	<b>1564</b>	<b>1.62</b>	<b>1437</b>
1600	1342	1.18	1047	1411	1.32	1173	<b>1474</b>	<b>1.46</b>	<b>1300</b>	<b>1535</b>	<b>1.61</b>	<b>1429</b>	<b>1593</b>	<b>1.76</b>	<b>1560</b>
1700	1374	1.30	1153	1441	1.45	1286	<b>1505</b>	<b>1.60</b>	<b>1420</b>	<b>1565</b>	<b>1.75</b>	<b>1555</b>	<b>1622</b>	<b>1.91</b>	<b>1692</b>
1800	1406	1.43	1268	<b>1473</b>	<b>1.58</b>	<b>1407</b>	<b>1535</b>	<b>1.74</b>	<b>1548</b>	<b>1595</b>	<b>1.90</b>	<b>1690</b>	<b>1652</b>	<b>2.06</b>	<b>1833</b>
1900	1438	1.57	1391	<b>1504</b>	<b>1.73</b>	<b>1537</b>	<b>1567</b>	<b>1.90</b>	<b>1685</b>	<b>1626</b>	<b>2.06</b>	<b>1833</b>	<b>1682</b>	<b>2.23</b>	<b>1983</b>
2000	<b>1471</b>	<b>1.72</b>	<b>1523</b>	<b>1536</b>	<b>1.89</b>	<b>1677</b>	<b>1598</b>	<b>2.06</b>	<b>1831</b>	<b>1657</b>	<b>2.24</b>	<b>1986</b>	—	—	—
2100	<b>1504</b>	<b>1.87</b>	<b>1665</b>	<b>1569</b>	<b>2.06</b>	<b>1825</b>	<b>1630</b>	<b>2.24</b>	<b>1986</b>	—	—	—	—	—	—
2200	<b>1538</b>	<b>2.04</b>	<b>1816</b>	<b>1602</b>	<b>2.23</b>	<b>1984</b>	—	—	—	—	—	—	—	—	—
2300	<b>1572</b>	<b>2.23</b>	<b>1978</b>	—	—	—	—	—	—	—	—	—	—	—	—
2400	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
2500	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—

LEGEND

**Bhp** — Brake Horsepower  
**Watts** — Input Watts to Motor

NOTES:

1. **Boldface** indicates field-supplied drive is required.
2. Maximum continuous bhp is 2.40.
3. See page 27 for general fan performance notes.

\*Motor drive range: 1035 to 1460 rpm. All other rpms require field-supplied drive.

**Table 18 — Fan Performance 48HJ006 — Vertical Discharge Units; High-Static Motor (Belt Drive)\***

AIRFLOW CFM	EXTERNAL STATIC PRESSURE (in. wg)														
	0.2			0.4			0.6			0.8			1.0		
	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts
1500	848	0.42	371	968	0.55	486	1069	0.68	600	1158	0.80	715	1238	0.94	831
1600	887	0.49	433	1004	0.63	556	1103	0.76	678	1190	0.90	800	1269	1.04	922
1700	927	0.57	502	1040	0.71	633	1137	0.86	763	1223	1.00	892	1302	1.15	1022
1800	967	0.65	579	1077	0.81	718	1172	0.96	856	1257	1.12	993	1334	1.27	1130
1900	1007	0.75	663	1115	0.91	811	1208	1.08	957	1291	1.24	1101	1368	1.40	1246
2000	1048	0.85	757	1153	1.03	913	1244	1.20	1066	1326	1.37	1219	1401	1.54	1371
2100	1090	0.97	859	1191	1.15	1023	1281	1.33	1185	1361	1.51	1345	1435	1.69	1505
2200	1131	1.09	970	1230	1.29	1143	1318	1.48	1313	1397	1.67	1481	1470	1.86	1649
2300	1173	1.23	1091	1269	1.43	1273	1355	1.63	1451	1433	1.83	1627	1505	2.03	1803
2400	1215	1.38	1223	1309	1.59	1413	1393	1.80	1600	1470	2.01	1784	1540	2.21	1967
2500	1258	1.54	1365	1349	1.76	1564	1431	1.98	1759	1506	2.20	1951	1576	2.41	2142

AIRFLOW CFM	EXTERNAL STATIC PRESSURE (in. wg)														
	1.2			1.4			1.6			1.8			2.0		
	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts
1500	1312	1.07	948	1380	1.20	1067	1445	1.34	1189	1506	1.48	1312	1564	1.62	1437
1600	1342	1.18	1047	1411	1.32	1173	1474	1.46	1300	1535	1.61	1429	1593	1.76	1560
1700	1374	1.30	1153	1441	1.45	1286	1505	1.60	1420	1565	1.75	1555	1622	1.91	1692
1800	1406	1.43	1268	1473	1.58	1407	1535	1.74	1548	1595	1.90	1690	1652	2.06	1833
1900	1438	1.57	1391	1504	1.73	1537	1567	1.90	1685	1626	2.06	1833	1682	2.23	1983
2000	1471	1.72	1523	1536	1.89	1677	1598	2.06	1831	1657	2.24	1986	1713	2.41	2142
2100	1504	1.87	1665	1569	2.06	1825	1630	2.24	1986	1688	2.42	2149	1744	2.60	2312
2200	1538	2.04	1816	1602	2.23	1984	1663	2.42	2152	1720	2.61	2321	1775	2.81	2491
2300	1572	2.23	1978	1635	2.42	2153	1695	2.62	2328	1753	2.82	2504	—	—	—
2400	1607	2.42	2150	1669	2.63	2332	1729	2.83	2515	—	—	—	—	—	—
2500	1642	2.63	2333	1704	2.84	2523	—	—	—	—	—	—	—	—	—

LEGEND

**Bhp** — Brake Horsepower  
**Watts** — Input Watts to Motor

NOTES:

1. **Boldface** indicates field-supplied drive is required.
2. Maximum continuous bhp is 2.90.
3. See page 27 for general fan performance notes.

\*Motor drive range: 1300 to 1685 rpm. All other rpms require field-supplied drive.

**Table 19 — Fan Performance 48HJ007 — Vertical Discharge Units; Standard Motor (Belt Drive)\***

AIRFLOW CFM	EXTERNAL STATIC PRESSURE (in. wg)														
	0.2			0.4			0.6			0.8			1.0		
	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts
1800	967	0.63	563	1075	0.80	715	1170	0.97	861	1255	1.13	1002	1333	1.28	1139
1900	1008	0.72	643	1112	0.91	805	1205	1.08	960	1289	1.25	1111	1366	1.42	1258
2000	1049	0.82	731	1151	1.02	903	1241	1.20	1068	1323	1.38	1228	1399	1.56	1384
2100	1091	0.93	827	1189	1.14	1008	1278	1.33	1183	1358	1.52	1353	1433	1.71	1519
2200	1133	1.05	933	1229	1.26	1123	1315	1.47	1308	1393	1.67	1487	1467	1.87	1662
2300	1176	1.18	1047	1268	1.40	1247	1352	1.62	1441	1429	1.84	1630	1501	2.04	1815
2400	1218	1.32	1170	1308	1.55	1380	1390	1.78	1584	1466	2.01	1782	1537	2.23	1977
2500	1261	1.47	1304	1349	1.72	1523	1429	1.96	1736	1503	2.19	1945	—	—	—
2600	1305	1.63	1448	1390	1.89	1677	1468	2.14	1900	1540	2.38	2117	—	—	—
2700	1348	1.80	1602	1431	2.07	1841	1507	2.33	2073	—	—	—	—	—	—
2800	1392	1.99	1768	1472	2.27	2016	—	—	—	—	—	—	—	—	—
2900	1435	2.19	1945	—	—	—	—	—	—	—	—	—	—	—	—
3000	1479	2.40	2135	—	—	—	—	—	—	—	—	—	—	—	—

AIRFLOW CFM	EXTERNAL STATIC PRESSURE (in. wg)														
	1.2			1.4			1.6			1.8			2.0		
	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts
1800	1406	1.43	1273	1475	1.58	1403	1540	1.72	1531	1601	1.87	1657	1660	2.00	1780
1900	1438	1.58	1401	1505	1.73	1541	1569	1.89	1678	1630	2.04	1813	1689	2.19	1945
2000	1470	1.73	1537	1537	1.90	1686	1600	2.06	1833	1660	2.23	1977	1718	2.38	2118
2100	1502	1.89	1681	1568	2.07	1840	1631	2.25	1996	—	—	—	—	—	—
2200	1535	2.06	1834	1600	2.25	2002	—	—	—	—	—	—	—	—	—
2300	1569	2.25	1996	—	—	—	—	—	—	—	—	—	—	—	—
2400	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
2500	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
2600	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
2700	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
2800	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
2900	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
3000	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—

LEGEND

**Bhp** — Brake Horsepower  
**Watts** — Input Watts to Motor

NOTES:

1. **Boldface** indicates field-supplied drive is required.
2. Maximum continuous bhp is 2.40.
3. See page 27 for general fan performance notes.

\*Motor drive range: 1119 to 1585 rpm. All other rpms require field-supplied drive.

**Table 20 — Fan Performance 48HJ007 — Vertical Discharge Units; High-Static Motor (Belt Drive)\***

AIRFLOW CFM	EXTERNAL STATIC PRESSURE (in. wg)														
	0.2			0.4			0.6			0.8			1.0		
	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts
1800	967	0.63	563	1075	0.80	715	1170	0.97	861	1255	1.13	1002	1333	1.28	1139
1900	1008	0.72	643	1112	0.91	805	1205	1.08	960	1289	1.25	1111	1366	1.42	1258
2000	1049	0.82	731	1151	1.02	903	1241	1.20	1068	1323	1.38	1228	1399	1.56	1384
2100	1091	0.93	827	1189	1.14	1008	1278	1.33	1183	1358	1.52	1353	1433	1.71	1519
2200	1133	1.05	933	1229	1.26	1123	1315	1.47	1308	1393	1.67	1487	1467	1.87	1662
2300	1176	1.18	1047	1268	1.40	1247	1352	1.62	1441	1429	1.84	1630	1501	2.04	1815
2400	1218	1.32	1170	1308	1.55	1380	1390	1.78	1584	1466	2.01	1782	1537	2.23	1977
2500	1261	1.47	1304	1349	1.72	1523	1429	1.96	1736	1503	2.19	1945	1572	2.42	2149
2600	1305	1.63	1448	1390	1.89	1677	1468	2.14	1900	1540	2.38	2117	1608	2.62	2331
2700	1348	1.80	1602	1431	2.07	1841	1507	2.33	2073	1578	2.59	2301	1645	2.84	2524
2800	1392	1.99	1768	1472	2.27	2016	1547	2.54	2258	1616	2.81	2495	—	—	—
2900	1435	2.19	1945	1514	2.48	2203	1587	2.76	2455	—	—	—	—	—	—
3000	1479	2.40	2135	1556	2.70	2402	—	—	—	—	—	—	—	—	—

AIRFLOW CFM	EXTERNAL STATIC PRESSURE (in. wg)														
	1.2			1.4			1.6			1.8			2.0		
	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts
1800	1406	1.43	1273	1475	1.58	1403	1540	1.72	1531	1601	1.87	1657	1660	2.00	1780
1900	1438	1.58	1401	1505	1.73	1541	1569	1.89	1678	1630	2.04	1813	1689	2.19	1945
2000	1470	1.73	1537	1537	1.90	1686	1600	2.06	1833	1660	2.23	1977	1718	2.38	2118
2100	1502	1.89	1681	1568	2.07	1840	1631	2.25	1996	1690	2.42	2149	1747	2.59	2300
2200	1535	2.06	1834	1600	2.25	2002	1662	2.44	2167	1721	2.62	2330	1778	2.80	2490
2300	1569	2.25	1996	1633	2.45	2174	1694	2.64	2348	1752	2.84	2520	—	—	—
2400	1603	2.44	2167	1666	2.65	2355	1727	2.86	2539	—	—	—	—	—	—
2500	1638	2.64	2349	1700	2.87	2546	—	—	—	—	—	—	—	—	—
2600	1673	2.86	2541	—	—	—	—	—	—	—	—	—	—	—	—
2700	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
2800	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
2900	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
3000	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—

LEGEND

**Bhp** — Brake Horsepower  
**Watts** — Input Watts to Motor

NOTES:

1. **Boldface** indicates field-supplied drive is required.
2. Maximum continuous bhp is 2.90.
3. See page 27 for general fan performance notes.

\*Motor drive range: 1300 to 1685 rpm. All other rpms require field-supplied drive.

**Table 21 — Fan Performance 48HJ004 — Horizontal Discharge Units; Standard Motor (Belt Drive)\***

AIRFLOW CFM	EXTERNAL STATIC PRESSURE (in. wg)														
	0.2			0.4			0.6			0.8			1.0		
	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts
900	553	0.14	134	681	0.22	221	782	0.32	316	870	0.42	417	948	0.53	526
1000	582	0.16	163	707	0.26	257	807	0.36	358	894	0.47	466	971	0.58	580
1100	612	0.20	196	734	0.30	297	833	0.41	405	919	0.52	519	995	0.64	639
1200	643	0.23	234	762	0.34	343	859	0.46	458	944	0.58	579	1020	0.71	705
1300	675	0.28	277	790	0.40	394	886	0.52	517	969	0.65	644	1044	0.78	777
1400	707	0.33	326	819	0.45	452	913	0.58	581	996	0.72	716	1070	0.86	855
1500	740	0.38	382	849	0.52	515	941	0.66	653	1023	0.80	795	1096	0.95	941

AIRFLOW CFM	EXTERNAL STATIC PRESSURE (in. wg)														
	1.2			1.4			1.6			1.8			2.0		
	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts
900	1019	0.64	640	1084	0.76	760	1146	0.89	885	1203	1.02	1016	1258	1.16	1152
1000	1042	0.70	700	1107	0.83	825	1168	0.96	956	1225	1.10	1091	—	—	—
1100	1065	0.77	765	1130	0.90	896	1190	1.04	1032	1247	1.18	1173	—	—	—
1200	1089	0.84	837	1153	0.98	974	1213	1.12	1115	—	—	—	—	—	—
1300	1113	0.92	915	1177	1.06	1058	—	—	—	—	—	—	—	—	—
1400	1138	1.01	1000	1201	1.15	1149	—	—	—	—	—	—	—	—	—
1500	1163	1.10	1092	—	—	—	—	—	—	—	—	—	—	—	—

LEGEND

**Bhp** — Brake Horsepower  
**Watts** — Input Watts to Motor

NOTES:

1. **Boldface** indicates field-supplied drive is required.
2. Maximum continuous bhp is 1.20.
3. See page 27 for general fan performance notes.

\*Motor drive range: 680 to 1044 rpm. All other rpms require field-supplied drive.



**Table 22 — Fan Performance 48HJ004 — Horizontal Discharge Units; High-Static Motor (Belt Drive)\***

AIRFLOW CFM	EXTERNAL STATIC PRESSURE (in. wg)														
	0.2			0.4			0.6			0.8			1.0		
	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts
900	553	0.14	134	681	0.22	221	782	0.32	316	870	0.42	417	948	0.53	526
1000	582	0.16	163	707	0.26	257	807	0.36	358	894	0.47	466	971	0.58	580
1100	612	0.20	196	734	0.30	297	833	0.41	405	919	0.52	519	995	0.64	639
1200	643	0.23	234	762	0.34	343	859	0.46	458	944	0.58	579	1020	0.71	705
1300	675	0.28	277	790	0.40	394	886	0.52	517	969	0.65	644	1044	0.78	777
1400	707	0.33	326	819	0.45	452	913	0.58	581	996	0.72	716	1070	0.86	855
1500	740	0.38	382	849	0.52	515	941	0.66	653	1023	0.80	795	1096	0.95	941

AIRFLOW CFM	EXTERNAL STATIC PRESSURE (in. wg)														
	1.2			1.4			1.6			1.8			2.0		
	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts
900	<b>1019</b>	<b>0.64</b>	<b>640</b>	1084	0.76	760	1146	0.89	885	1203	1.02	1016	1258	1.16	1152
1000	<b>1042</b>	<b>0.70</b>	<b>700</b>	1107	0.83	825	1168	0.96	956	1225	1.10	1091	1279	1.24	1232
1100	<b>1065</b>	<b>0.77</b>	<b>765</b>	1130	0.90	896	1190	1.04	1032	1247	1.18	1173	1301	1.33	1319
1200	1089	0.84	837	1153	0.98	974	1213	1.12	1115	1270	1.27	1262	1324	1.42	1413
1300	1113	0.92	915	1177	1.06	1058	1237	1.21	1205	1293	1.36	1358	1347	1.52	1514
1400	1138	1.01	1000	1201	1.15	1149	1261	1.31	1303	1317	1.47	1461	1370	1.63	1623
1500	1163	1.10	1092	1226	1.25	1247	1285	1.41	1407	1341	1.58	1571	1394	1.75	1740

LEGEND

**Bhp** — Brake Horsepower  
**Watts** — Input Watts to Motor

NOTES:

1. **Boldface** indicates field-supplied drive is required.
2. Maximum continuous bhp is 2.40.
3. See page 27 for general fan performance notes.

\*Motor drive range: 1075 to 1455 rpm. All other rpms require field-supplied drive.

**Table 23 — Fan Performance 48HJ005 — Horizontal Discharge Units; Standard Motor (Belt Drive)\***

AIRFLOW CFM	EXTERNAL STATIC PRESSURE (in. wg)														
	0.2			0.4			0.6			0.8			1.0		
	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts
1200	<b>643</b>	<b>0.23</b>	<b>234</b>	<b>762</b>	<b>0.34</b>	<b>343</b>	859	0.46	458	944	0.58	579	1020	0.71	705
1300	<b>675</b>	<b>0.28</b>	<b>277</b>	790	0.40	394	886	0.52	517	969	0.65	644	1044	0.78	777
1400	<b>707</b>	<b>0.33</b>	<b>326</b>	819	0.45	452	913	0.58	581	996	0.72	716	1070	0.86	855
1500	<b>740</b>	<b>0.38</b>	<b>382</b>	849	0.52	515	941	0.66	653	1023	0.80	795	1096	0.95	941
1600	773	0.45	444	879	0.59	586	970	0.73	731	1050	0.88	880	1123	1.04	1034
1700	807	0.52	513	910	0.67	663	999	0.82	817	1078	0.98	973	1150	1.14	1134
1800	841	0.59	589	942	0.75	749	1029	0.91	910	1106	1.08	1074	—	—	—
1900	875	0.68	674	974	0.85	842	1059	1.02	1012	1135	1.19	1184	—	—	—
2000	910	0.77	767	1006	0.95	944	1090	1.13	1122	—	—	—	—	—	—

AIRFLOW CFM	EXTERNAL STATIC PRESSURE (in. wg)														
	1.2			1.4			1.6			1.8			2.0		
	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts
1200	1089	0.84	837	1153	0.98	974	<b>1213</b>	<b>1.12</b>	<b>1115</b>	—	—	—	—	—	—
1300	1113	0.92	915	1177	1.06	1058	—	—	—	—	—	—	—	—	—
1400	1138	1.01	1000	<b>1201</b>	<b>1.15</b>	<b>1149</b>	—	—	—	—	—	—	—	—	—
1500	1163	1.10	1092	—	—	—	—	—	—	—	—	—	—	—	—
1600	<b>1189</b>	<b>1.20</b>	<b>1191</b>	—	—	—	—	—	—	—	—	—	—	—	—
1700	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
1800	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
1900	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
2000	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—

LEGEND

**Bhp** — Brake Horsepower  
**Watts** — Input Watts to Motor

NOTES:

1. **Boldface** indicates field-supplied drive is required.
2. Maximum continuous bhp is 1.20.
3. See page 27 for general fan performance notes.

\*Motor drive range: 770 to 1185 rpm. All other rpms require field-supplied drive.

**Table 24 — Fan Performance 48HJ005 — Horizontal Discharge Units; High-Static Motor (Belt Drive)\***

AIRFLOW CFM	EXTERNAL STATIC PRESSURE (in. wg)														
	0.2			0.4			0.6			0.8			1.0		
	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts
1200	643	0.23	234	762	0.34	343	859	0.46	458	944	0.58	579	1020	0.71	705
1300	675	0.28	277	790	0.40	394	886	0.52	517	969	0.65	644	1044	0.78	777
1400	707	0.33	326	819	0.45	452	913	0.58	581	996	0.72	716	1070	0.86	855
1500	740	0.38	382	849	0.52	515	941	0.66	653	1023	0.80	795	1096	0.95	941
1600	773	0.45	444	879	0.59	586	970	0.73	731	1050	0.88	880	1123	1.04	1034
1700	807	0.52	513	910	0.67	663	999	0.82	817	1078	0.98	973	1150	1.14	1134
1800	841	0.59	589	942	0.75	749	1029	0.91	910	1106	1.08	1074	1177	1.25	1242
1900	875	0.68	674	974	0.85	842	1059	1.02	1012	1135	1.19	1184	1205	1.37	1360
2000	910	0.77	767	1006	0.95	944	1090	1.13	1122	1165	1.31	1302	1234	1.49	1485

AIRFLOW CFM	EXTERNAL STATIC PRESSURE (in. wg)														
	1.2			1.4			1.6			1.8			2.0		
	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts
1200	1089	0.84	837	1153	0.98	974	1213	1.12	1115	1270	1.27	1262	1324	1.42	1413
1300	1113	0.92	915	1177	1.06	1058	1237	1.21	1205	1293	1.36	1358	1347	1.52	1514
1400	1138	1.01	1000	1201	1.15	1149	1261	1.31	1303	1317	1.47	1461	1370	1.63	1623
1500	1163	1.10	1092	1226	1.25	1247	1285	1.41	1407	1341	1.58	1571	1394	1.75	1740
1600	1189	1.20	1191	1252	1.36	1353	1310	1.53	1520	1365	1.70	1690	1418	1.87	1865
1700	1216	1.31	1299	1277	1.48	1468	1335	1.65	1640	1390	1.83	1817	1442	2.01	1998
1800	1242	1.42	1414	1303	1.60	1590	1361	1.78	1770	1415	1.96	1953	1467	2.15	2140
1900	1270	1.55	1538	1330	1.73	1721	1387	1.92	1908	1441	2.11	2098	1493	2.30	2292
2000	1297	1.68	1672	1357	1.87	1862	1414	2.07	2055	1467	2.26	2252	—	—	—

LEGEND

**Bhp** — Brake Horsepower  
**Watts** — Input Watts to Motor

NOTES:

1. **Boldface** indicates field-supplied drive is required.
2. Maximum continuous bhp is 2.40.
3. See page 27 for general fan performance notes.

\*Motor drive range: 1075 to 1455 rpm. All other rpms require field-supplied drive.

**Table 25 — Fan Performance 48HJ006, Single-Phase — Horizontal Discharge Units; Standard Motor (Belt Drive)\***

AIRFLOW CFM	EXTERNAL STATIC PRESSURE (in. wg)														
	0.2			0.4			0.6			0.8			1.0		
	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts
1500	800	0.39	350	904	0.49	438	999	0.60	535	1087	0.72	640	1169	0.85	753
1600	839	0.46	412	938	0.57	505	1030	0.68	605	1115	0.80	714	1195	0.93	829
1700	879	0.54	483	974	0.65	580	1062	0.77	684	1144	0.90	796	1221	1.03	914
1800	919	0.63	561	1010	0.75	663	1095	0.87	771	1174	1.00	886	1250	1.14	1008
1900	960	0.73	648	1047	0.85	754	1129	0.98	867	1206	1.11	986	1279	1.25	1111
2000	1001	0.84	744	1085	0.96	855	1163	1.09	972	1238	1.23	1095	—	—	—
2100	1043	0.96	850	1123	1.09	965	1199	1.22	1086	—	—	—	—	—	—
2200	1085	1.09	966	1162	1.22	1086	—	—	—	—	—	—	—	—	—
2300	1127	1.23	1092	—	—	—	—	—	—	—	—	—	—	—	—
2400	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
2500	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—

AIRFLOW CFM	EXTERNAL STATIC PRESSURE (in. wg)														
	1.2			1.4			1.6			1.8			2.0		
	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts
1500	1247	0.98	873	1320	1.13	1002	1390	1.28	1137	—	—	—	—	—	—
1600	1270	1.07	952	1342	1.22	1083	—	—	—	—	—	—	—	—	—
1700	1295	1.17	1040	—	—	—	—	—	—	—	—	—	—	—	—
1800	1321	1.28	1137	—	—	—	—	—	—	—	—	—	—	—	—
1900	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
2000	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
2100	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
2200	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
2300	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
2400	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
2500	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—

LEGEND

**Bhp** — Brake Horsepower  
**Watts** — Input Watts to Motor

NOTES:

1. **Boldface** indicates field-supplied drive is required.
2. Maximum continuous bhp is 1.30.
3. See page 27 for general fan performance notes.

\*Motor drive range: 1035 to 1460 rpm. All other rpms require field-supplied drive.

**Table 26 — Fan Performance 48HJ006, Three-Phase — Horizontal Discharge Units;  
Standard Motor (Belt Drive)\***

AIRFLOW CFM	EXTERNAL STATIC PRESSURE (in. wg)														
	0.2			0.4			0.6			0.8			1.0		
	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts
1500	800	0.39	350	904	0.49	438	999	0.60	535	1087	0.72	640	1169	0.85	753
1600	839	0.46	412	938	0.57	505	1030	0.68	605	1115	0.80	714	1195	0.93	829
1700	879	0.54	483	974	0.65	580	1062	0.77	684	1144	0.90	796	1221	1.03	914
1800	919	0.63	561	1010	0.75	663	1095	0.87	771	1174	1.00	886	1250	1.14	1008
1900	960	0.73	648	1047	0.85	754	1129	0.98	867	1206	1.11	986	1279	1.25	1111
2000	1001	0.84	744	1085	0.96	855	1163	1.09	972	1238	1.23	1095	1309	1.38	1224
2100	1043	0.96	850	1123	1.09	965	1199	1.22	1086	1271	1.37	1213	1340	1.52	1346
2200	1085	1.09	966	1162	1.22	1086	1235	1.36	1211	1305	1.51	1342	1372	1.67	1479
2300	1127	1.23	1092	1201	1.37	1217	1272	1.52	1347	1340	1.67	1482	1405	1.83	1623
2400	1169	1.38	1229	1241	1.53	1359	1310	1.68	1493	1375	1.84	1633	1439	2.00	1778
2500	1212	1.55	1378	1281	1.70	1513	1348	1.86	1652	1412	2.02	1796	1473	2.19	1945

AIRFLOW CFM	EXTERNAL STATIC PRESSURE (in. wg)														
	1.2			1.4			1.6			1.8			2.0		
	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts
1500	1247	0.98	873	1320	1.13	1002	1390	1.28	1137	1457	1.44	1280	1522	1.61	1430
1600	1270	1.07	952	1342	1.22	1083	1411	1.37	1221	1476	1.54	1365	1540	1.71	1517
1700	1295	1.17	1040	1365	1.32	1173	1432	1.48	1313	1497	1.64	1459	1559	1.82	1612
1800	1321	1.28	1137	1390	1.43	1273	1455	1.59	1415	1518	1.76	1563	1579	1.93	1718
1900	1348	1.40	1243	1415	1.56	1381	1479	1.72	1526	1541	1.89	1677	1601	2.06	1834
2000	1377	1.53	1359	1442	1.69	1500	1505	1.86	1648	1565	2.03	1801	1624	2.21	1961
2100	1406	1.67	1485	1470	1.83	1629	1531	2.00	1780	1591	2.18	1936	1648	2.36	2098
2200	1437	1.83	1621	1499	1.99	1769	1559	2.16	1923	1617	2.34	2082	—	—	—
2300	1468	1.99	1769	1529	2.16	1920	1587	2.34	2077	—	—	—	—	—	—
2400	1500	2.17	1928	1559	2.35	2083	—	—	—	—	—	—	—	—	—
2500	1533	2.36	2098	—	—	—	—	—	—	—	—	—	—	—	—

LEGEND

**Bhp** — Brake Horsepower  
**Watts** — Input Watts to Motor

NOTES:

1. **Boldface** indicates field-supplied drive is required.
2. Maximum continuous bhp is 2.40.
3. See page 27 for general fan performance notes.

\*Motor drive range: 1035 to 1460 rpm. All other rpms require field-supplied drive.

**Table 27 — Fan Performance 48HJ006 — Horizontal Discharge Units; High-Static Motor (Belt Drive)\***

AIRFLOW CFM	EXTERNAL STATIC PRESSURE (in. wg)														
	0.2			0.4			0.6			0.8			1.0		
	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts
1500	800	0.39	350	904	0.49	438	999	0.60	535	1087	0.72	640	1169	0.85	753
1600	839	0.46	412	938	0.57	505	1030	0.68	605	1115	0.80	714	1195	0.93	829
1700	879	0.54	483	974	0.65	580	1062	0.77	684	1144	0.90	796	1221	1.03	914
1800	919	0.63	561	1010	0.75	663	1095	0.87	771	1174	1.00	886	1250	1.14	1008
1900	960	0.73	648	1047	0.85	754	1129	0.98	867	1206	1.11	986	1279	1.25	1111
2000	1001	0.84	744	1085	0.96	855	1163	1.09	972	1238	1.23	1095	1309	1.38	1224
2100	1043	0.96	850	1123	1.09	965	1199	1.22	1086	1271	1.37	1213	1340	1.52	1346
2200	1085	1.09	966	1162	1.22	1086	1235	1.36	1211	1305	1.51	1342	1372	1.67	1479
2300	1127	1.23	1092	1201	1.37	1217	1272	1.52	1347	1340	1.67	1482	1405	1.83	1623
2400	1169	1.38	1229	1241	1.53	1359	1310	1.68	1493	1375	1.84	1633	1439	2.00	1778
2500	1212	1.55	1378	1281	1.70	1513	1348	1.86	1652	1412	2.02	1796	1473	2.19	1945

AIRFLOW CFM	EXTERNAL STATIC PRESSURE (in. wg)														
	1.2			1.4			1.6			1.8			2.0		
	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts
1500	1247	0.98	873	1320	1.13	1002	1390	1.28	1137	1457	1.44	1280	1522	1.61	1430
1600	1270	1.07	952	1342	1.22	1083	1411	1.37	1221	1476	1.54	1365	1540	1.71	1517
1700	1295	1.17	1040	1365	1.32	1173	1432	1.48	1313	1497	1.64	1459	1559	1.82	1612
1800	1321	1.28	1137	1390	1.43	1273	1455	1.59	1415	1518	1.76	1563	1579	1.93	1718
1900	1348	1.40	1243	1415	1.56	1381	1479	1.72	1526	1541	1.89	1677	1601	2.06	1834
2000	1377	1.53	1359	1442	1.69	1500	1505	1.86	1648	1565	2.03	1801	1624	2.21	1961
2100	1406	1.67	1485	1470	1.83	1629	1531	2.00	1780	1591	2.18	1936	1648	2.36	2098
2200	1437	1.83	1621	1499	1.99	1769	1559	2.16	1923	1617	2.34	2082	1673	2.53	2246
2300	1468	1.99	1769	1529	2.16	1920	1587	2.34	2077	1644	2.52	2239	1699	2.71	2406
2400	1500	2.17	1928	1559	2.35	2083	1616	2.53	2243	1672	2.71	2408	1726	2.90	2579
2500	1533	2.36	2098	1591	2.54	2257	1647	2.73	2421	—	—	—	—	—	—

LEGEND

**Bhp** — Brake Horsepower  
**Watts** — Input Watts to Motor

NOTES:

1. **Boldface** indicates field-supplied drive is required.
2. Maximum continuous bhp is 2.90.
3. See page 27 for general fan performance notes.

\*Motor drive range: 1300 to 1685 rpm. All other rpms require field-supplied drive.

**Table 28 — Fan Performance 48HJ007 — Horizontal Discharge Units; Standard Motor (Belt Drive)\***

AIRFLOW CFM	EXTERNAL STATIC PRESSURE (in. wg)														
	0.2			0.4			0.6			0.8			1.0		
	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts
1800	913	0.64	569	1010	0.80	715	1098	0.98	869	1178	1.16	1032	1252	1.35	1203
1900	952	0.73	652	1046	0.91	805	1131	1.09	965	1210	1.28	1134	1282	1.48	1311
2000	992	0.84	744	1083	1.02	903	1166	1.21	1070	1242	1.40	1245	1313	1.61	1427
2100	1032	0.95	844	1120	1.14	1010	1200	1.33	1184	1275	1.54	1365	1345	1.75	1553
2200	1073	1.07	954	1158	1.27	1127	1236	1.47	1307	1308	1.68	1495	1377	1.90	1689
2300	1114	1.21	1074	1196	1.41	1254	1272	1.62	1440	1343	1.84	1634	1409	2.07	1834
2400	1155	1.36	1204	1234	1.57	1391	1308	1.78	1584	1377	2.01	1784	1443	2.24	1990
2500	1196	1.51	1345	1273	1.73	1538	1345	1.96	1738	1412	2.19	1945	—	—	—
2600	1238	1.69	1497	1312	1.91	1697	1382	2.14	1904	1448	2.38	2117	—	—	—
2700	1280	1.87	1660	1352	2.10	1867	1420	2.34	2081	—	—	—	—	—	—
2800	1322	2.07	1835	1392	2.31	2050	—	—	—	—	—	—	—	—	—
2900	1364	2.28	2023	—	—	—	—	—	—	—	—	—	—	—	—
3000	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—

AIRFLOW CFM	EXTERNAL STATIC PRESSURE (in. wg)														
	1.2			1.4			1.6			1.8			2.0		
	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts
1800	1322	1.56	1382	1388	1.77	1568	1451	1.98	1762	1510	2.21	1962	—	—	—
1900	1351	1.68	1495	1416	1.90	1686	1477	2.12	1885	1536	2.35	2090	—	—	—
2000	1380	1.82	1617	1444	2.04	1814	1505	2.27	2017	—	—	—	—	—	—
2100	1411	1.97	1748	1473	2.20	1950	—	—	—	—	—	—	—	—	—
2200	1441	2.13	1890	1503	2.36	2097	—	—	—	—	—	—	—	—	—
2300	1473	2.30	2041	—	—	—	—	—	—	—	—	—	—	—	—
2400	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
2500	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
2600	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
2700	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
2800	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
2900	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
3000	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—

LEGEND

**Bhp** — Brake Horsepower  
**Watts** — Input Watts to Motor

NOTES:

1. **Boldface** indicates field-supplied drive is required.
2. Maximum continuous bhp is 2.40.
3. See page 27 for general fan performance notes.

\*Motor drive range: 1119 to 1585 rpm. All other rpms require field-supplied drive.

**Table 29 — Fan Performance 48HJ007 — Horizontal Discharge Units; High-Static Motor (Belt Drive)\***

AIRFLOW CFM	EXTERNAL STATIC PRESSURE (in. wg)														
	0.2			0.4			0.6			0.8			1.0		
	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts
1800	913	0.64	569	1010	0.80	715	1098	0.98	869	1178	1.16	1032	1252	1.35	1203
1900	952	0.73	652	1046	0.91	805	1131	1.09	965	1210	1.28	1134	1282	1.48	1311
2000	992	0.84	744	1083	1.02	903	1166	1.21	1070	1242	1.40	1245	1313	1.61	1427
2100	1032	0.95	844	1120	1.14	1010	1200	1.33	1184	1275	1.54	1365	1345	1.75	1553
2200	1073	1.07	954	1158	1.27	1127	1236	1.47	1307	1308	1.68	1495	1377	1.90	1689
2300	1114	1.21	1074	1196	1.41	1254	1272	1.62	1440	1343	1.84	1634	1409	2.07	1834
2400	1155	1.36	1204	1234	1.57	1391	1308	1.78	1584	1377	2.01	1784	1443	2.24	1990
2500	1196	1.51	1345	1273	1.73	1538	1345	1.96	1738	1412	2.19	1945	1477	2.43	2157
2600	1238	1.69	1497	1312	1.91	1697	1382	2.14	1904	1448	2.38	2117	1511	2.63	2335
2700	1280	1.87	1660	1352	2.10	1867	1420	2.34	2081	1484	2.59	2300	1546	2.84	2526
2800	1322	2.07	1835	1392	2.31	2050	1458	2.56	2270	1521	2.81	2496	—	—	—
2900	1364	2.28	2023	1432	2.53	2245	1496	2.78	2472	—	—	—	—	—	—
3000	1406	2.50	2224	1472	2.76	2452	—	—	—	—	—	—	—	—	—

AIRFLOW CFM	EXTERNAL STATIC PRESSURE (in. wg)														
	1.2			1.4			1.6			1.8			2.0		
	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts	Rpm	Bhp	Watts
1800	1322	1.56	1382	1388	1.77	1568	1451	1.98	1762	1510	2.21	1962	1568	2.44	2169
1900	1351	1.68	1495	1416	1.90	1686	1477	2.12	1885	1536	2.35	2090	1593	2.59	2302
2000	1380	1.82	1617	1444	2.04	1814	1505	2.27	2017	1563	2.51	2227	1619	2.75	2443
2100	1411	1.97	1748	1473	2.20	1950	1533	2.43	2159	1590	2.67	2374	—	—	—
2200	1441	2.13	1890	1503	2.36	2097	1562	2.60	2311	1618	2.85	2532	—	—	—
2300	1473	2.30	2041	1533	2.54	2254	1591	2.79	2474	—	—	—	—	—	—
2400	1505	2.48	2203	1564	2.73	2422	—	—	—	—	—	—	—	—	—
2500	1537	2.68	2376	—	—	—	—	—	—	—	—	—	—	—	—
2600	1571	2.88	2560	—	—	—	—	—	—	—	—	—	—	—	—
2700	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
2800	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
2900	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—
3000	—	—	—	—	—	—	—	—	—	—	—	—	—	—	—

LEGEND

**Bhp** — Brake Horsepower  
**Watts** — Input Watts to Motor

NOTES:

1. **Boldface** indicates field-supplied drive is required.
2. Maximum continuous bhp is 2.90.
3. See page 27 for general fan performance notes.

\*Motor drive range: 1300 to 1685 rpm. All other rpms require field-supplied drive.

**Table 30 — Accessory/FIOP EconoMi\$er IV and EconoMi\$er2 Static Pressure\* (in. wg)**

COMPONENT	CFM							
	1250	1500	1750	2000	2250	2500	2750	3000
Vertical EconoMi\$er2 and EconoMi\$er IV	0.045	0.065	0.08	0.12	0.145	0.175	0.22	0.255
Horizontal EconoMi\$er2 and EconoMi\$er IV	—	—	0.1	0.125	0.15	0.18	0.225	0.275

LEGEND

**FIOP** — Factory-Installed Option

\*The static pressure must be added to external static pressure. The sum and the evaporator entering-air cfm should be used in conjunction with the Fan Performance tables to determine indoor blower rpm and watts.

## PRE-START-UP

### **⚠ WARNING**

Failure to observe the following warnings could result in serious personal injury:

1. Follow recognized safety practices and wear protective goggles when checking or servicing refrigerant system.
2. Do not operate compressor or provide any electric power to unit unless compressor terminal cover is in place and secured.
3. Do not remove compressor terminal cover until all electrical sources are disconnected.
4. Relieve all pressure from system before touching or disturbing anything inside terminal box if refrigerant leak is suspected around compressor terminals.
5. Never attempt to repair soldered connection while refrigerant system is under pressure.
6. Do not use torch to remove any component. System contains oil and refrigerant under pressure. To remove a component, wear protective goggles and proceed as follows:
  - a. Shut off electrical power and then gas to unit.
  - b. Recover refrigerant to relieve all pressure from system using both high-pressure and low-pressure ports.
  - c. Cut component connection tubing with tubing cutter and remove component from unit.
  - d. Carefully unsweat remaining tubing stubs when necessary. Oil can ignite when exposed to torch flame.

Proceed as follows to inspect and prepare the unit for initial start-up:

1. Remove all access panels.
2. Read and follow instructions on all WARNING, CAUTION, and INFORMATION labels attached to, or shipped with, unit.
3. Make the following inspections:
  - a. Inspect for shipping and handling damages such as broken lines, loose parts, or disconnected wires, etc.
  - b. Inspect for oil at all refrigerant tubing connections and on unit base. Detecting oil generally indicates a refrigerant leak. Leak-test all refrigerant tubing connections using electronic leak detector, halide torch, or liquid-soap solution.
  - c. Inspect all field-wiring and factory-wiring connections. Be sure that connections are completed and tight. Be sure that wires are not in contact with refrigerant tubing or sharp edges.
  - d. Inspect coil fins. If damaged during shipping and handling, carefully straighten fins with a fin comb.
4. Verify the following conditions:
  - a. Make sure that condenser-fan blade are correctly positioned in fan orifice. See Condenser-Fan Adjustment section on page 43 for more details.
  - b. Make sure that air filter(s) is in place.
  - c. Make sure that condensate drain trap is filled with water to ensure proper drainage.
  - d. Make sure that all tools and miscellaneous loose parts have been removed.

## START-UP

**Unit Preparation** — Make sure that unit has been installed in accordance with installation instructions and applicable codes.

**Gas Piping** — Check gas piping for leaks.

### **⚠ WARNING**



Disconnect gas piping from unit when leak testing at pressure greater than  $\frac{1}{2}$  psig. Pressures greater than  $\frac{1}{2}$  psig will cause gas valve damage resulting in hazardous condition. If gas valve is subjected to pressure greater than  $\frac{1}{2}$  psig, it *must* be replaced before use. When pressure testing field-supplied gas piping at pressures of  $\frac{1}{2}$  psig or less, a unit connected to such piping must be isolated by manually closing the gas valve.

**Return-Air Filters** — Make sure correct filters are installed in unit (see Table 1). Do not operate unit without return-air filters.

**Outdoor-Air Inlet Screens** — Outdoor-air inlet screen must be in place before operating unit.

**Compressor Mounting** — Compressors are internally spring mounted. Do not loosen or remove compressor hold-down bolts.

**Internal Wiring** — Check all electrical connections in unit control boxes. Tighten as required.

**Refrigerant Service Ports** — Each unit system has 4 Schrader-type service ports: one on the suction line, one on the liquid line, and 2 on the compressor discharge line. Be sure that caps on the ports are tight. Two additional Schrader valves are located under the high-pressure and low-pressure switches, respectively.

**High Flow Refrigerant Valves** — Two high flow valves are located on the hot gas tube coming out of the compressor and the suction tube going into the compressor. Large black plastic caps identify these valves. These valves have O-rings inside which screw the cap onto a brass body to prevent leaks. No field access to these valves is available at this time. Ensure the plastic caps remain on the valves and are tight or the possibility of refrigerant leakage could occur.

**Compressor Rotation** — On 3-phase units with scroll compressors, it is important to be certain compressor is rotating in the proper direction. To determine whether or not compressor is rotating in the proper direction:

1. Connect service gages to suction and discharge pressure fittings.
2. Energize the compressor.
3. The suction pressure should drop and the discharge pressure should rise, as is normal on any start-up.

If the suction pressure does not drop and the discharge pressure does not rise to normal levels:

1. Note that the evaporator fan (size 006 and 007 only) is probably also rotating in the wrong direction.
2. Turn off power to the unit and install lockout tag.
3. Reverse any two of the unit power leads.
4. Reenergize to the compressor. Check pressures.

The suction and discharge pressure levels should now move to their normal start-up levels.

NOTE: When the compressor is rotating in the wrong direction, the unit will make an elevated level of noise and will not provide cooling.

**Cooling** — Set space thermostat to OFF position. To start unit, turn on main power supply. Set system selector switch at COOL position and fan switch at AUTO. position. Adjust thermostat to a setting below room temperature. Compressor starts on closure of contactor.

Check unit charge. Refer to Refrigerant Charge section on page 43.

Reset thermostat at a position above room temperature. Compressor will shut off. Evaporator fan will shut off after a 30-second delay.

**TO SHUT OFF UNIT** — Set system selector switch at OFF position. Resetting thermostat at a position above room temperature shuts unit off temporarily until space temperature exceeds thermostat setting. Units are equipped with Cycle-LOC™ protection device. Unit shuts down on any safety trip, and indicator light on thermostat comes on. Check reason for all safety trips.

Compressor restart is accomplished by manual reset at the thermostat by turning the selector switch to OFF and then to ON position.

**Main Burners** — Main burners are factory set and should require no adjustment.

**TO CHECK** ignition of main burners and heating controls, move thermostat set point above room temperature and verify that the burners light and evaporator fan is energized. Check heating effect, then lower the thermostat setting below the room temperature and verify that the burners and evaporator fan turn off.

Refer to Tables 31A and 31B for the correct orifice to use at high altitudes.

**Table 31A — Altitude Compensation\* — 48HJ004-007 Standard Units**

ELEVATION (ft)	72,000 AND 115,000 BTUH NOMINAL INPUT		150,000 BTUH NOMINAL INPUT	
	Natural Gas Orifice Size†	Liquid Propane Orifice Size†	Natural Gas Orifice Size†	Liquid Propane Orifice Size†
0-2,000	33	43	30	37
2,000	36	44	31	39
3,000	36	45	31	40
4,000	37	45	32	41
5,000	38	46	32	42
6,000	40	47	34	43
7,000	41	48	35	43
8,000	42	49	36	44
9,000	43	50	37	45
10,000	44	50	39	46
11,000	45	51	41	47
12,000	46	52	42	48
13,000	47	52	43	49
14,000	48	53	44	50

\*As the height above sea level increases, there is less oxygen per cubic foot of air. Therefore, heat input rate should be reduced at higher altitudes.

†Orifices available through your Carrier distributor.

**Table 31B — Altitude Compensation\* — 48HJ004-006 Low NOx Units**

ELEVATION (ft)	60,000 AND 90,000 BTUH NOMINAL INPUT		120,000 BTUH NOMINAL INPUT	
	Natural Gas Orifice Size†	Liquid Propane Orifice Size†	Natural Gas Orifice Size	Liquid Propane Orifice Size†
0-2,000	38	45	32	42
2,000	40	47	33	43
3,000	41	48	35	43
4,000	42	49	36	44
5,000	43	49	37	45
6,000	43	50	38	45
7,000	44	50	39	46
8,000	45	51	41	47
9,000	46	52	42	48
10,000	47	52	43	49
11,000	48	53	44	50
12,000	49	53	44	51
13,000	50	54	46	52
14,000	51	54	47	52

\*As the height above sea level increases, there is less oxygen per cubic foot of air. Therefore, the input rate should be reduced at higher altitudes.

†Orifices are available through your local Carrier distributor.

## Heating

1. Purge gas supply line of air by opening union ahead of the gas valve. If gas odor is detected, tighten union and wait 5 minutes before proceeding.
2. Turn on electrical supply and manual gas valve.
3. Set system switch selector at HEAT position and fan switch at AUTO. or ON position. Set heating temperature lever above room temperature.
4. The induced-draft motor will start.
5. After a call for heating, the main burners should light within 5 seconds. If the burner does not light, then there is a 22-second delay before another 5-second try. If the burner still does not light, the time delay is repeated. If the burner does not light within 15 minutes, there is a lock-out. To reset the control, break the 24 v power to W1.
6. The evaporator-fan motor will turn on 45 seconds after burner ignition.
7. The evaporator-fan motor will turn off in 45 seconds after the thermostat temperature is satisfied.
8. Adjust airflow to obtain a temperature rise within the range specified on the unit nameplate.

NOTE: The default value for the evaporator-fan motor on/off delay is 45 seconds. The Integrated Gas Unit Controller (IGC) modifies this value when abnormal limit switch cycles occur. Based upon unit operating conditions, the on delay can be reduced to 0 seconds and the off delay can be extended to 180 seconds. When one flash of the LED (light-emitting diode) is observed, the evaporator-fan on/off delay has been modified.

If the limit switch trips at the start of the heating cycle during the evaporator on delay, the time period of the on delay for the next cycle will be 5 seconds less than the time at which the switch tripped. (Example: If the limit switch trips at 30 seconds, the evaporator-fan on delay for the next cycle will occur at 25 seconds.) To prevent short-cycling, a 5-second reduction will only occur if a minimum of 10 minutes has elapsed since the last call for heating.

The evaporator-fan off delay can also be modified. Once the call for heating has ended, there is a 10-minute period during which the modification can occur. If the limit switch trips during this period, the evaporator-fan off delay will increase by 15 seconds. A maximum of 9 trips can occur, extending the evaporator-fan off delay to 180 seconds.

To restore the original default value, reset the power to the unit.

**TO SHUT OFF UNIT** — Set system selector switch at off position. Resetting heating selector lever below room temperature will temporarily shut unit off until space temperature falls below thermostat setting.

**Safety Relief** — A soft-solder joint at the suction service Schrader port provides pressure relief under abnormal temperature and pressure conditions.

**Ventilation (Continuous Fan)** — Set fan and system selector switches at ON and OFF positions, respectively. Evaporator fan operates continuously to provide constant air circulation. When the evaporator-fan selector switch is turned to the OFF position, there is a 30-second delay before the fan turns off.

## Operating Sequence

**COOLING, UNITS WITHOUT ECONOMIZER** — When thermostat calls for cooling, terminals G and Y1 are energized. The indoor-fan contactor (IFC) and compressor contactor are energized and indoor-fan motor, compressor, and outdoor fan start. The outdoor fan motor runs continuously while unit is cooling.

**HEATING, UNITS WITHOUT ECONOMIZER** — When the thermostat calls for heating, terminal W1 is energized. To prevent thermostat short-cycling, the unit is locked into the Heating mode for at least 1 minute when W1 is energized. The induced-draft motor is energized and the burner ignition sequence begins. The indoor (evaporator) fan motor (IFM) is energized 45 seconds after a flame is ignited. On units equipped for two stages of heat, when additional heat is needed, W2 is energized and the high-fire solenoid on the main gas valve (MGV) is energized. When the thermostat is satisfied and W1 is deenergized, the IFM stops after a 45-second time-off delay.

**COOLING, UNITS WITH ECONOMIZER IV** — When free cooling is not available, the compressors will be controlled by the zone thermostat. When free cooling is available, the outdoor-air damper is modulated by the EconoMi\$er IV control to provide a 50 to 55 F supply-air temperature into the zone. As the supply-air temperature fluctuates above 55 or below 50 F, the dampers will be modulated (open or close) to bring the supply-air temperature back within the set points.

Integrated EconoMi\$er IV operation on single-stage units requires a 2-stage thermostat (Y1 and Y2).

For EconoMi\$er IV operation, there must be a thermostat call for the fan (G). This will move the damper to its minimum position during the occupied mode.

If the increase in cooling capacity causes the supply-air temperature to drop below 45 F, then the outdoor-air damper position will be fully closed. If the supply-air temperature continues to fall, the outdoor-air damper will close. Control returns to normal once the supply-air temperature rises above 48 F.

If optional power exhaust is installed, as the outdoor-air damper opens and closes, the power exhaust fans will be energized and deenergized.

If field-installed accessory CO<sub>2</sub> sensors are connected to the EconoMi\$er IV control, a demand controlled ventilation strategy will begin to operate. As the CO<sub>2</sub> level in the zone increases above the CO<sub>2</sub> set point, the minimum position of the damper will be increased proportionally. As the CO<sub>2</sub> level decreases because of the increase in fresh air, the outdoor-air damper will

be proportionally closed. Damper position will follow the higher demand condition from DCV mode or free cooling mode.

Damper movement from full closed to full open (or vice versa) will take between 1½ and 2½ minutes.

If free cooling can be used as determined from the appropriate changeover command (switch, dry bulb, enthalpy curve, differential dry bulb, or differential enthalpy), a call for cooling (Y1 closes at the thermostat) will cause the control to modulate the dampers open to maintain the supply air temperature set point at 50 to 55 F.

As the supply air temperature drops below the set point range of 50 to 55 F, the control will modulate the outdoor-air dampers closed to maintain the proper supply-air temperature.

**HEATING, UNITS WITH ECONOMIZER IV** — When the room temperature calls for heat, the heating controls are energized as described in the Heating, Units Without Economizer section. When the thermostat is satisfied, the economizer damper moves to the minimum position.

**COOLING, UNITS WITH ECONOMIZER2, PREMIER-LINK™ CONTROL AND A THERMOSTAT** — When free cooling is not available, the compressors will be controlled by the PremierLink control in response to the Y1 and Y2 inputs from the thermostat.

The PremierLink control will use the following information to determine if free cooling is available:

- Indoor fan has been on for at least 30 seconds.
- The SPT, SAT, and OAT inputs must have valid readings.
- OAT must be less than 75 F.
- OAT must be less than SPT.
- Enthalpy must be LOW (may be jumpered if an enthalpy sensor not available).
- Economizer position is NOT forced.

Pre-cooling occurs when there is no call from the thermostat except G. Pre-cooling is defined as the economizer modulates to provide 70 F supply air.

When free cooling is available the PremierLink control will control the compressors and economizer to provide a supply-air temperature determined to meet the Y1 and Y2 calls from the thermostat using the following three routines. The three control routines are based on OAT.

The 3 routines are based on OAT where:

SASP = Supply Air Set Point

DXCTLO = Direct Expansion Cooling Lockout Set Point

PID = Proportional Integral

**Routine 1 (OAT < DXCTLO)**

- Y1 energized – economizer maintains a SASP = (SATLO1 + 3).
- Y2 energized – economizer maintains a SASP = (SATLO2 + 3).

**Routine 2 (DXCTLO < OAT < 68 F)**

- If only Y1 energized, the economizer maintains a SASP = (SATLO1 + 3).
- If SAT > SASP + 5 and economizer position > 80%, economizer will go to minimum position for 3 minutes or until SAT > 68 F.
- First stage of mechanical cooling will be energized.
- Integrator resets.
- Economizer opens again and controls to current SASP after stage one on for 90 seconds.
- With Y1 and Y2 energized Economizer maintains an SASP = SATLO2 + 3.
- If SAT > SASP + 5 and economizer position > 80%, economizer will go to minimum position for 3 minutes or until SAT > 68 F.



- If compressor one is on then second stage of mechanical cooling will be energized. Otherwise the first stage will be energized.
- Integrator resets.
- Economizer opens again and controls to SASP after stage one on for 90 seconds.

#### **Routine 3 (OAT > 68)**

- Economizer is opened 100%.
- Compressors 1 and 2 are cycled based on Y1 and Y2 using minimum on and off times and watching the supply air temperature as compared to SATLO1 and SATLO2 set points.

If optional power exhaust is installed, as the outdoor-air damper opens and closes, the power exhaust fans will be energized and deenergized.

If field-installed accessory CO<sub>2</sub> sensors are connected to the PremierLink™ control, a PID-controlled demand ventilation strategy will begin to operate. As the CO<sub>2</sub> level in the zone increases above the CO<sub>2</sub> set point, the minimum position of the damper will be increased proportionally. As the CO<sub>2</sub> level decreases because of the increase in fresh air, the outdoor-air damper will be proportionally closed.

**HEATING, UNITS WITH ECONOMIZER2, PREMIERLINK CONTROL AND A THERMOSTAT** — When the thermostat calls for heating, terminal W1 is energized. The PremierLink control will move the economizer damper to the minimum position if there is a call for G and closed if there is a call for W1 without G. In order to prevent thermostat from short cycling, the unit is locked into the heating mode for at least 10 minutes when W1 is energized. The induced-draft motor is then energized and the burner ignition sequence begins.

On units equipped for two stages of heat, when additional heat is needed, W2 is energized and the high-fire solenoid on the main gas valve (MGV) is energized. When the thermostat is satisfied and W1 is deenergized, the IFM stops after a 45-second time-off delay unless G is still maintained.

**COOLING, UNITS WITH ECONOMIZER2, PREMIERLINK CONTROL AND A ROOM SENSOR** — When free cooling is not available, the compressors will be controlled by the PremierLink controller using a PID Error reduction calculation as indicated by Fig 47.

The PremierLink controller will use the following information to determine if free cooling is available:

- Indoor fan has been on for at least 30 seconds.
- The SPT, SAT, and OAT inputs must have valid readings.
- OAT must be less than 75 F.
- OAT must be less than SPT.
- Enthalpy must be LOW (may be jumpered if an enthalpy sensor is not available).
- Economizer position is NOT forced.

When free cooling is available, the outdoor-air damper is positioned through the use of a Proportional Integral (PID) control process to provide a calculated supply-air temperature into the zone. The supply air will maintain the space temperature between the heating and cooling set points as indicated in Fig. 48.

The PremierLink control will integrate the compressors stages with the economizer based on similar logic as the three routines listed in the previous section. The SASP will float up and down based on the error reduction calculations that compare space temperature and space set point.

When outside-air temperature conditions require the economizer to close for a compressor stage-up sequence, the economizer control integrator is reset to zero after the stage-up sequence is completed. This prevents the supply-air temperature from dropping too quickly and creating a freeze condition that would make the compressor turn off prematurely.

The high space set point is used for DX (direct expansion) cooling control, while the economizer space set point is a calculated value between the heating and cooling set points. The economizer set point will always be at least one degree below the cooling set point, allowing for a smooth transition from mechanical cooling with economizer assist, back to economizer cooling as the cooling set point is achieved. The compressors may be used for initial cooling then the PremierLink controller will modulate the economizer using an error reduction calculation to hold the space temperature between the heating and cooling set points. See Fig. 48.


The controller uses the following conditions to determine economizer cooling:

- Enthalpy is Low
- SAT reading is available
- OAT reading is available
- SPT reading is available
- OAT ≤ SPT
- Economizer Position is NOT forced

If any of the above conditions are **not** met, the economizer submaster reference (ECSR) is set to maximum limit and the damper moves to minimum position. The operating sequence is complete. The ECSR is recalculated every 30 seconds.


If an optional power exhaust is installed, as the outdoor-air damper opens and closes, the power exhaust fans will be energized and deenergized.

If field-installed accessory CO<sub>2</sub> sensors are connected to the PremierLink™ control, a PID-controlled demand ventilation strategy will begin to operate. As the CO<sub>2</sub> level in the zone increases above the CO<sub>2</sub> set point, the minimum position of the damper will be increased proportionally. As the CO<sub>2</sub> level decreases because of the increase in fresh air, the outdoor-air damper will be proportionally closed.

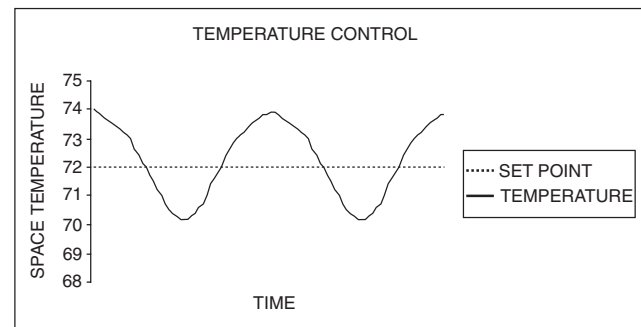

NOTE: PremierLink control performs smart staging of 2 stages of DX cooling and up to 3 stages of heat.

**Fig. 47 — DX Cooling Temperature Control Example**

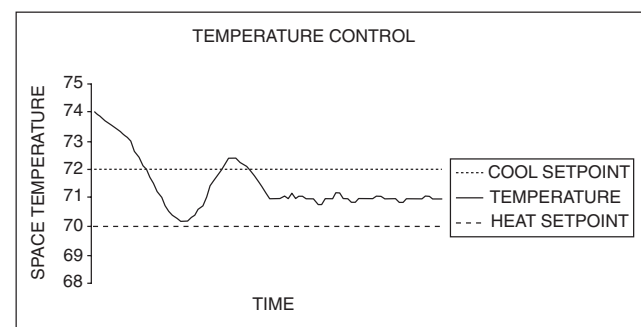

**Fig. 48 — Economizer Temperature Control Example**

**HEATING, UNIT WITH ECONOMISER2, PREMIERLINK CONTROL AND A ROOM SENSOR** — Every 40 seconds the controller will calculate the required heat stages (maximum of 3) to maintain supply-air temperature (SAT) if the following qualifying conditions are met:

- Indoor fan has been on for at least 30 seconds.
- COOL mode is not active.
- OCCUPIED, TEMP.COMPENSATED START or HEAT mode is active.
- SAT reading is available.
- Fire shutdown mode is not active.

If all of the above conditions are met, the number of heat stages is calculated; otherwise the required number of heat stages will be set to 0.

If the PremierLink controller determines that heat stages are required, the economizer damper will be moved to minimum position if occupied and closed if unoccupied.

Staging should be as follows:

If Heating PID STAGES=2

- HEAT STAGES=1 (50% capacity) will energize HS1
- HEAT STAGES=2 (100% capacity) will energize HS2

If Heating PID STAGES=3 and AUXOUT = HS3

- HEAT STAGES=1 (33% capacity) will energize HS1
- HEAT STAGES=2 (66% capacity) will energize HS2
- HEAT STAGES=3 (100% capacity) will energize HS3

In order to prevent short cycling, the unit is locked into the Heating mode for at least 10 minutes when HS1 is deenergized. When HS1 is energized the induced-draft motor is then energized and the burner ignition sequence begins. On units equipped for two stages of heat, when additional heat is needed, HS2 is energized and the high-fire solenoid on the main gas valve (MGV) is energized. When the space condition is satisfied and HS1 is deenergized the IFM stops after a 45-second time-off delay unless in the occupied mode. The fan will run continuously in the occupied mode as required by national energy and fresh air standards.

#### UNITS WITH HUMIDI-MIZER™ ADAPTIVE DEHUMIDIFICATION SYSTEM


**Normal Design Cooling Operation** — When the rooftop operates under the normal sequence of operation, the compressors will cycle to maintain indoor conditions. See Fig. 49.

The Humidi-MiZer adaptive dehumidification system includes a factory-installed Motormaster® low ambient control to keep the head and suction pressure high, allowing normal design cooling mode operation down to 0° F.


**Subcooling Mode** — When subcooling mode is initiated, this will energize (close) the liquid line solenoid valve (LLSV) forcing the hot liquid refrigerant to enter into the subcooling coil (see Fig. 50).

As the hot liquid refrigerant passes through the subcooling/reheat dehumidification coil, it is exposed to the cold supply airflow coming through the evaporator coil. The liquid is further subcooled to a temperature approaching the evaporator leaving-air temperature. The liquid then enters a thermostatic expansion valve (TXV) where the liquid drops to a lower pressure. The TXV does not have a pressure drop great enough to change the liquid to a 2-phase fluid, so the liquid then enters the Acutrol™ device at the evaporator coil.

The liquid enters the evaporator coil at a temperature lower than in standard cooling operation. This lower temperature increases the latent capacity of the rooftop unit. The refrigerant passes through the evaporator and is turned into a vapor. The air passing over the evaporator coil will become colder than during normal operation. However, as this same air passes over the subcooling coil, it will be slightly warmed, partially reheating the air.

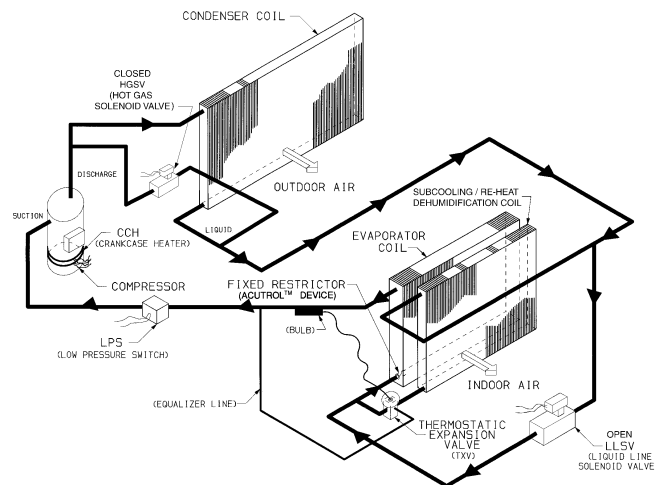

**Fig. 49 — Humidi-MiZer Normal Design Cooling Operation**

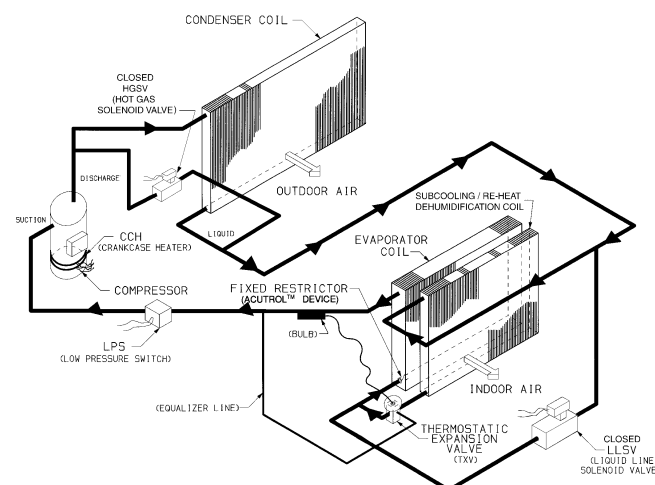

**Fig. 50 — Humidi-MiZer Subcooling Mode Operation**

Subcooling mode operates only when the outside air temperature is warmer than 40 F. A factory-installed temperature switch located in the condenser section will lock out subcooling mode when the outside temperature is cooler than 40 F.

The scroll compressors are equipped with crankcase heaters to provide protection for the compressors due to the additional refrigerant charge required by the subcooling/reheat coil.

When in subcooling mode, there is a slight decrease in system total gross capacity (5% less), a lower gross sensible capacity (20% less), and a greatly increased latent capacity (up to 40% more).


**Hot Gas Reheat Mode** — When the humidity levels in the space require humidity control, a hot gas solenoid valve (specific to hot gas reheat mode only) will open to bypass a portion of hot gas refrigerant around the condenser coil (see Fig. 51).

This hot gas will mix with liquid refrigerant leaving the condenser coil and flow to the subcooling/reheat dehumidification coil. Now the conditioned air coming off the evaporator will be cooled and dehumidified, but will be warmed to neutral conditions (72 F to 75 F) by the subcooling/reheat dehumidification coil.

The net effect of the rooftop when in hot gas reheat mode is to provide nearly all latent capacity removal from the space when sensible loads diminish (when outdoor temperature conditions are moderate). When in hot gas reheat mode, the unit will operate to provide mostly latent capacity and extremely low sensible heat ratio capability.

Similar to the subcooling mode of operation, hot gas reheat mode operates only when the outside air temperature is warmer than 40 F. Below this temperature, a factory installed outside air temperature switch will lockout this mode of operation.

See Table 32 for the Humidi-Mizer adaptive dehumidification system sequence of operation.

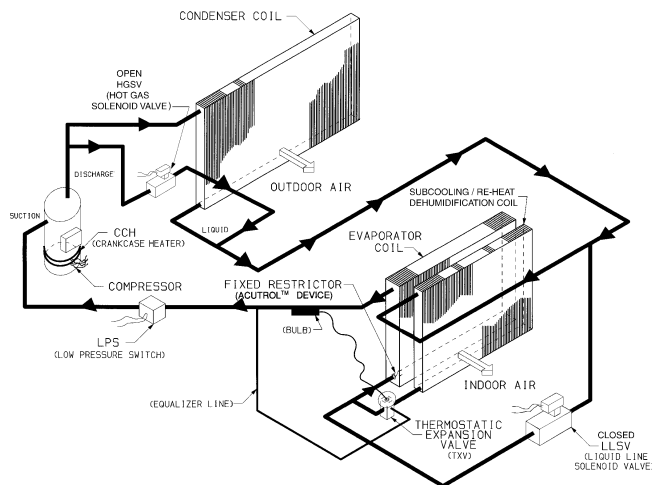

**Fig. 51 — Humidi-Mizer™ Hot Gas Reheat Mode Operation**

## SERVICE

### CAUTION

When servicing unit, shut off all electrical power to unit and install lockout tag to avoid shock hazard or injury from rotating parts.

**Cleaning** — Inspect unit interior at the beginning of heating and cooling season and as operating conditions require.

#### EVAPORATOR COIL

1. Turn unit power off, tag disconnect. Remove evaporator coil access panel.

2. If economizer or two-position damper is installed, remove economizer by disconnecting Molex plug and removing mounting screws.
3. Slide filters out of unit.
4. Clean coil using a commercial coil cleaner or dishwasher detergent in a pressurized spray canister. Wash both sides of coil and flush with clean water. For best results, back-flush toward return-air section to remove foreign material. Flush condensate pan after completion.
5. Reinstall economizer and filters.
6. Reconnect wiring.
7. Replace access panels.

**CONDENSER COIL** — Inspect coil monthly. Clean condenser coil annually, and as required by location and outdoor air conditions.

**One-Row Coil** — Wash coil with commercial coil cleaner. It is not necessary to remove top panel.

#### 2-Row Coils

Clean coil as follows:

1. Turn off unit power, tag disconnect.
2. Remove top panel screws on condenser end of unit.
3. Remove condenser coil corner post. See Fig. 52. To hold top panel open, place coil corner post between top panel and center post. See Fig. 53.
4. Remove screws securing coil to compressor plate and compressor access panel.
5. Remove fastener holding coil sections together at return end of condenser coil. Carefully separate the outer coil section 3 to 4 in. from the inner coil section. See Fig. 54.
6. Use a water hose or other suitable equipment to flush down between the 2 coil sections to remove dirt and debris. Clean the outer surfaces with a stiff brush in the normal manner.
7. Secure inner and outer coil rows together with a field-supplied fastener.
8. Reposition the outer coil section and remove the coil corner post from between the top panel and center post. Reinstall the coil corner post and replace all screws.

**CONDENSATE DRAIN** — Check and clean each year at start of cooling season. In winter, protect against freeze-up.

**FILTERS** — Clean or replace at start of each heating and cooling season, or more often if operating conditions require it. Replacement filters must be same dimensions as original filters.

**OUTDOOR-AIR INLET SCREENS** — Clean screen with steam or hot water and a mild detergent. Do not use disposable filters in place of screen.

**Table 32 — Humidi-Mizer Adaptive Dehumidification System Sequence of Operation and System Response — Single Compressor Unit (48HJ004-007)**

THERMOSTAT INPUT			ECONOMIZER FUNCTION		48HJ UNIT OPERATION		
H	Y1	Y2	OAT. < Economizer Set Point	Economizer	Comp. 1	Subcooling Mode	Hot Gas Reheat Mode
Off	—	—	Normal Operation				
On	On	On	No	Off	On	Yes	No
On	On	Off	No	Off	On	Yes	No
On	On	On	Yes	On	On	Yes	No
On	On	Off	Yes	On	On	No	Yes
On	Off	Off	No	Off	On	No	Yes

#### LEGEND

OAT — Outdoor Air Temperature

NOTE: On a thermostat call for W1, all cooling and dehumidification will be off.

## Lubrication

**COMPRESSORS** — Each compressor is charged with correct amount of oil at the factory.

**FAN MOTOR BEARINGS** — Fan motor bearings are of the permanently lubricated type. No further lubrication is required. No lubrication of condenser-fan or evaporator-fan motors is required.

**Condenser-Fan Adjustment (Fig. 55)** — Shut off unit power supply. Remove condenser-fan assembly (grille, motor, motor cover, and fan) and loosen fan hub setscrews. Adjust fan height as shown in Fig. 55. Tighten setscrews and replace condenser-fan assembly.

**EconoMi\$er IV Adjustment** — Refer to Optional EconoMi\$er IV and EconoMi\$er2 section on page 18.

**Evaporator Fan Belt Inspection** — Check condition of evaporator belt or tension during heating and cooling inspections or as conditions require. Replace belt or adjust as necessary.

**High-Pressure Switch** — The high-pressure switch contains a Schrader core depressor, and is located on the compressor hot gas line. This switch opens at 428 psig and closes at 320 psig. No adjustments are necessary.


**Loss-of-Charge Switch** — The loss-of-charge switch contains a Schrader core depressor, and is located on the compressor liquid line. This switch opens at 7 psig and closes at 22 psig. No adjustments are necessary.

**Freeze-Stat** — The freeze-stat is a bimetal temperature-sensing switch that is located on the “hair-pin” end of the evaporator coil. The switch protects the evaporator coil from freeze-up due to lack of airflow. The switch opens at 30 F and closes at 45 F. No adjustments are necessary.

**Refrigerant Charge** — Amount of refrigerant charge is listed on unit nameplate (also refer to Table 1). Refer to HVAC Servicing Procedures literature available at your local distributor and the following procedures.

Unit panels must be in place when unit is operating during charging procedure. Unit must operate a minimum of 10 minutes before checking or adjusting refrigerant charge.


An accurate superheat, thermocouple-type or thermistor-type thermometer, and a gage manifold are required when using the superheat charging method for evaluating the unit charge. *Do not use mercury or small dial-type thermometers because they are not adequate for this type of measurement.*

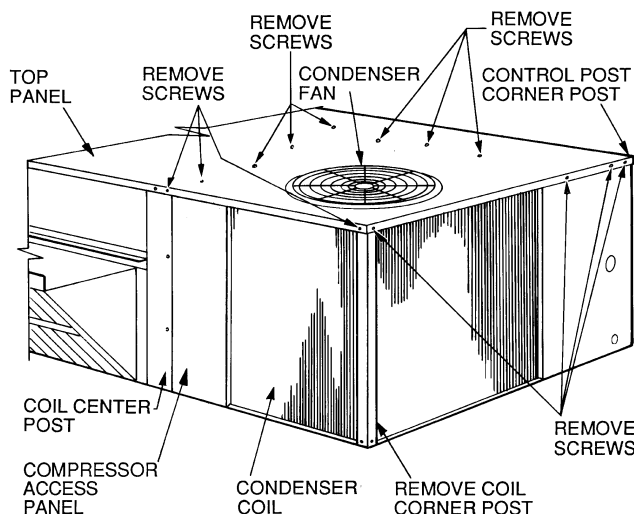


**Fig. 52 — Cleaning Condenser Coil**

**NO CHARGE** — Use standard evacuating techniques. After evacuating system to 500 microns, weigh in the specified amount of refrigerant. (Refer to Table 1 and unit information plate.)


**LOW CHARGE COOLING** — Using Cooling Charging Charts, Fig. 56-59, vary refrigerant until the conditions of the charts are met. Note the charging charts are different from type normally used. Charts are based on charging the units to the correct superheat for the various operating conditions. Accurate pressure gage and temperature sensing device are required. Connect the pressure gage to the service port on the suction line. Mount the temperature sensing device on the suction line and insulate it so that outdoor ambient temperature does not affect the reading. Indoor-air cfm must be within the normal operating range of the unit.

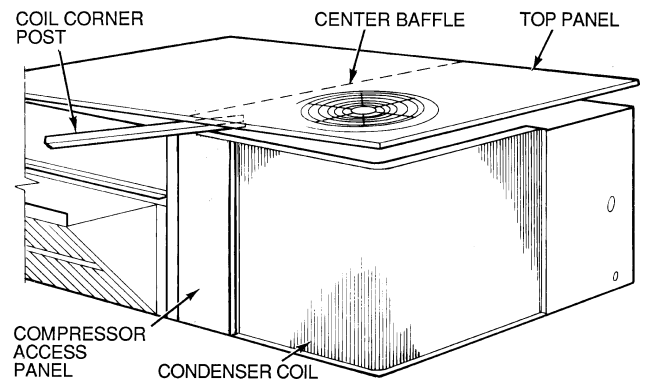

**Fig. 53 — Propping Up Top Panel**

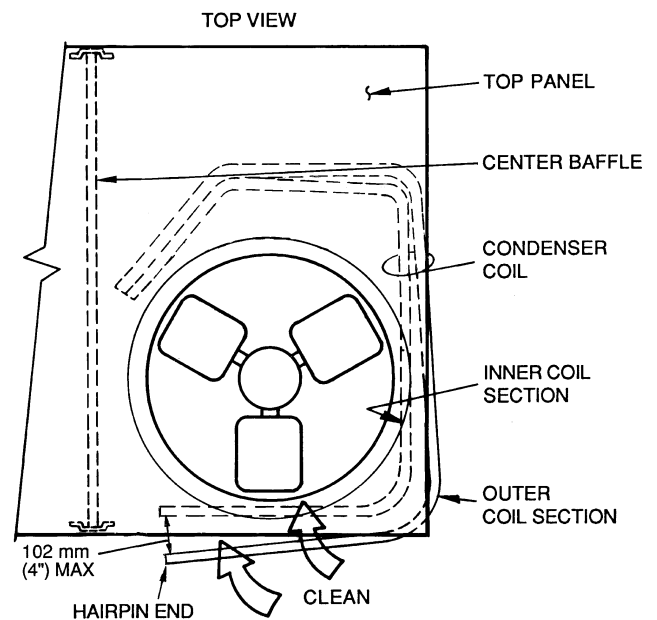

**Fig. 54 — Separating Coil Sections**

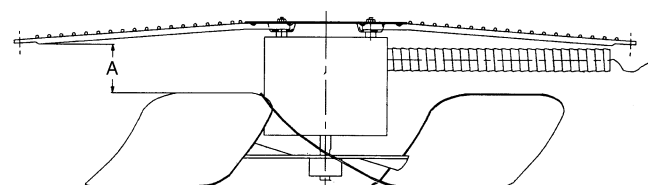

UNIT 48HJ	FAN HEIGHT — "A" (in.)
004-006 and 007 (208/230 V)	2.75
007 (460 and 575 V)	3.50

**Fig. 55 — Condenser-Fan Adjustment**


**HUMIDI-MIZER™ SYSTEM CHARGING** — The system charge for units with the Humidi-MiZer adaptive dehumidification system is greater than that of the standard unit alone. The charge for units with this option is indicated on the unit nameplate drawing. Also refer to Fig. 60-63. To charge systems using the Humidi-MiZer adaptive dehumidification system, fully evacuate, recover, and recharge the system to the nameplate specified charge level. To check or adjust refrigerant charge on systems using the Humidi-MiZer adaptive dehumidification system, charge per Fig. 60-63.

**NOTE:** When using the charging charts, it is important that only the subcooling/reheat dehumidification coil liquid line solenoid valve be energized. The subcooling/reheat dehumidification coil liquid line solenoid valve **MUST** be energized to


use the charging charts and the outdoor motor speed controller jumpered to run the fan at full speed.

The charts reference a liquid pressure (psig) and temperature at a point between the condenser coil and the subcooling/reheat dehumidification coil. A tap is provided on the unit to measure liquid pressure entering the subcooling/reheat dehumidification coil.


**IMPORTANT:** The subcooling mode charging charts (Fig. 60-63) are to be used **ONLY** with units having the Humidi-MiZer adaptive dehumidification system. **DO NOT** use standard charge (Fig. 56-59) for units with Humidi-MiZer system, and **DO NOT** use Fig. 60-63 for standard units.

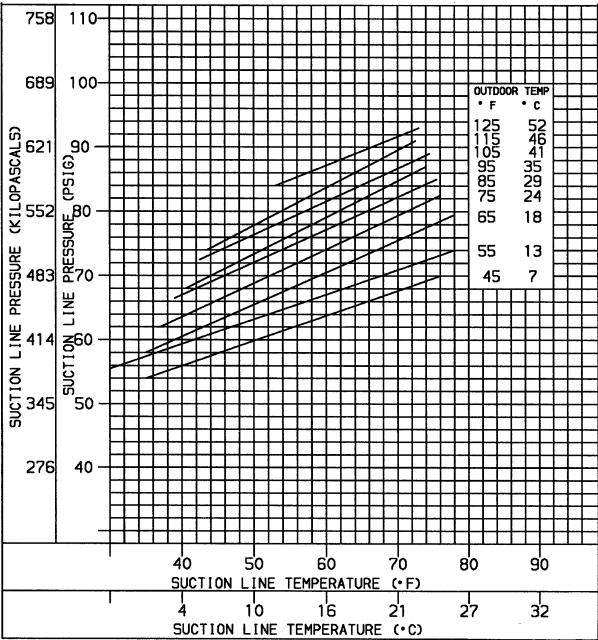


**Fig. 56 — Cooling Charging Chart, Standard 48HJ004**

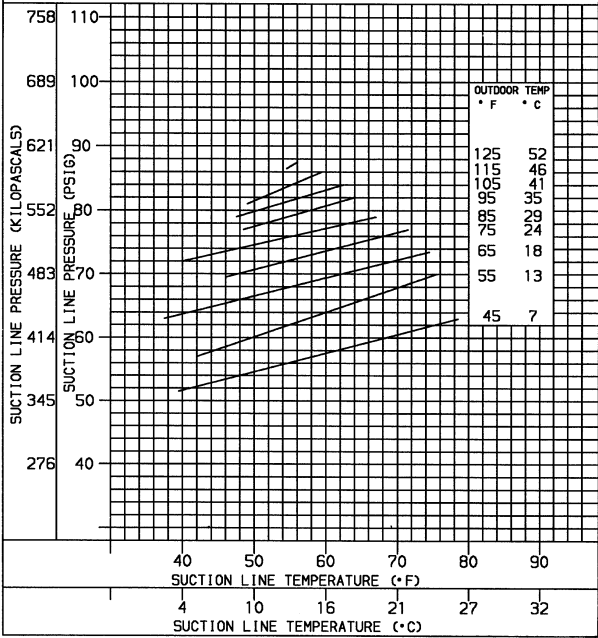

**Fig. 58 — Cooling Charging Chart, Standard 48HJ006**

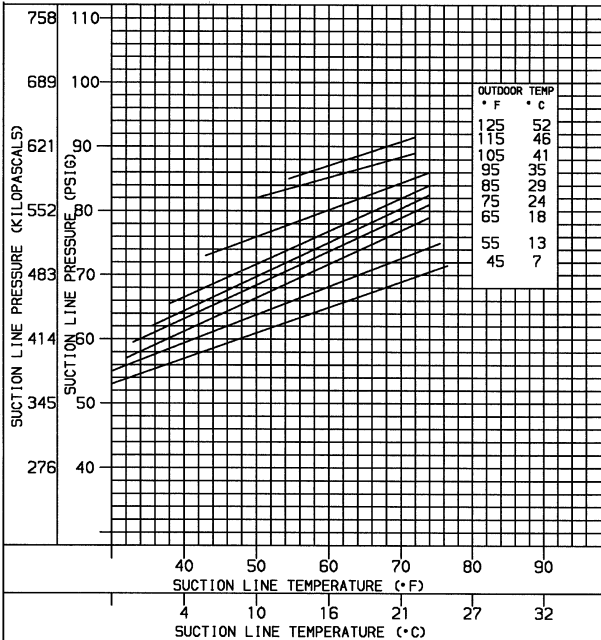

**Fig. 57 — Cooling Charging Chart, Standard 48HJ005**

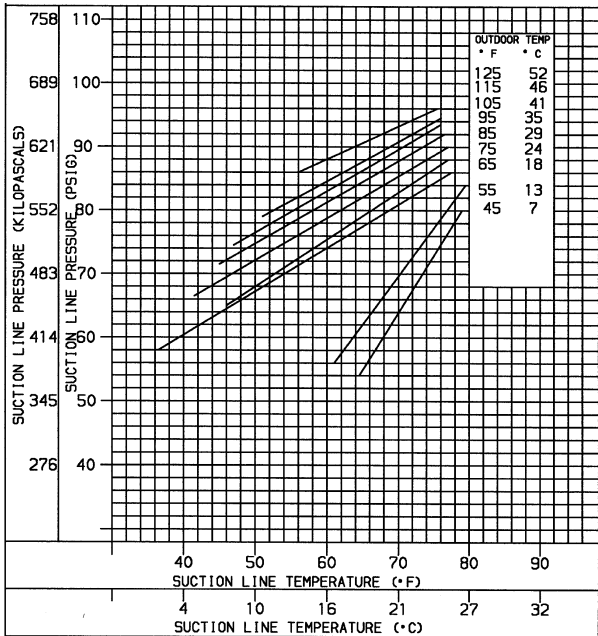


**Fig. 59 — Cooling Charging Chart, Standard 48HJ007**

TO USE COOLING CHARGING CHART, STANDARD UNIT — Take the outdoor ambient temperature and read the suction pressure gage. Refer to charts to determine what suction temperature should be. If suction temperature is high, add refrigerant. If suction temperature is low, carefully recover some of the charge. Recheck the suction pressure as charge is adjusted.

Example (Fig. 58):


Outdoor Temperature.....75 F  
Suction Pressure.....70 psig  
Suction Temperature should be.....48 F  
(Suction temperature may vary  $\pm 5^\circ$  F.)

If a charging device is used, temperature and pressure readings must be accomplished using the charging charts.

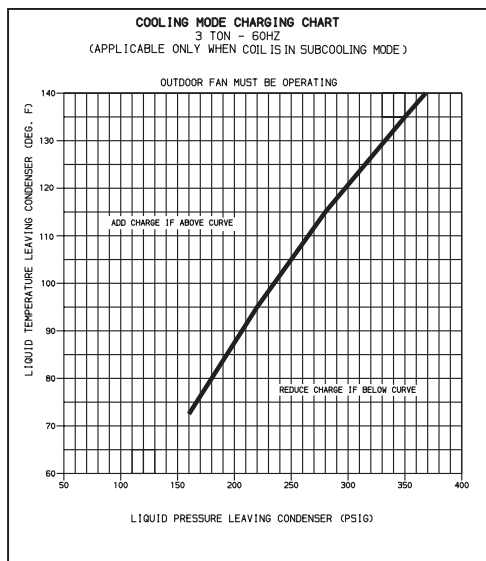

NOTE: When using the charging charts, it is important that only the subcooling/reheat dehumidification coil liquid line solenoid valve be energized. The subcooling/reheat dehumidification coil liquid line solenoid valve MUST be energized to use the charging charts and the outdoor motor speed controller jumpered to run the fan at full speed.

**Fig. 60 — Cooling Charging Chart, 48HJ004 with Optional Humidi-MiZer Adaptive Dehumidification System**

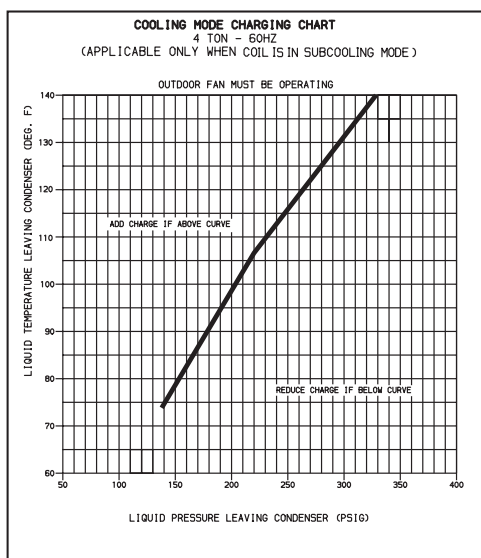

NOTE: When using the charging charts, it is important that only the subcooling/reheat dehumidification coil liquid line solenoid valve be energized. The subcooling/reheat dehumidification coil liquid line solenoid valve MUST be energized to use the charging charts and the outdoor motor speed controller jumpered to run the fan at full speed.


**Fig. 61 — Cooling Charging Chart, 48HJ005 with Optional Humidi-MiZer Adaptive Dehumidification System**

TO USE COOLING CHARGING CHARTS, UNITS WITH HUMIDI-MIZER™ ADAPTIVE DEHUMIDIFICATION SYSTEM—Refer to charts (Fig. 60-63) to determine the proper leaving condenser pressure and temperature.

Example (Fig. 60):


Leaving Condenser Pressure.....250 psig  
Leaving Condenser Temperature.....105 F

NOTE: When using the charging charts, it is important that only the subcooling/reheat dehumidification coil liquid line solenoid valve be energized. The subcooling/reheat dehumidification coil liquid line solenoid valve MUST be energized to use the charging charts and the outdoor motor speed controller jumpered to run the fan at full speed.

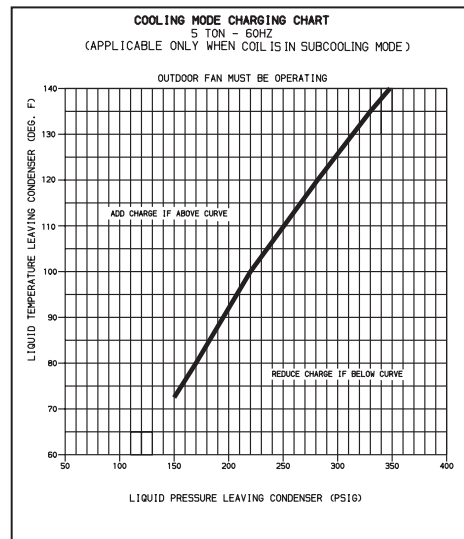

NOTE: When using the charging charts, it is important that only the subcooling/reheat dehumidification coil liquid line solenoid valve be energized. The subcooling/reheat dehumidification coil liquid line solenoid valve MUST be energized to use the charging charts and the outdoor motor speed controller jumpered to run the fan at full speed.

**Fig. 62 — Cooling Charging Chart, 48HJ006 with Optional Humidi-MiZer Adaptive Dehumidification System**

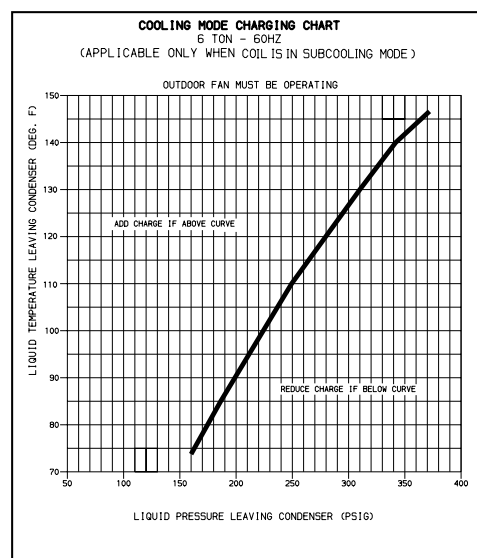

NOTE: When using the charging charts, it is important that only the subcooling/reheat dehumidification coil liquid line solenoid valve be energized. The subcooling/reheat dehumidification coil liquid line solenoid valve MUST be energized to use the charging charts and the outdoor motor speed controller jumpered to run the fan at full speed.

**Fig. 63 — Cooling Charging Chart, 48HJ007 with Optional Humidi-MiZer Adaptive Dehumidification System**



**Flue Gas Passageways** — To inspect the flue collector box and upper areas of the heat exchanger:

1. Remove the combustion blower wheel and motor assembly according to directions in Combustion-Air Blower section below.
2. Remove the 3 screws holding the blower housing to the flue cover.
3. Remove the flue cover to inspect the heat exchanger.
4. Clean all surfaces as required using a wire brush.

**Combustion-Air Blower** — Clean periodically to ensure proper airflow and heating efficiency. Inspect blower wheel every fall and periodically during heating season. For the first heating season, inspect blower wheel bimonthly to determine proper cleaning frequency.

To inspect blower wheel, remove draft hood and screen. Shine a flashlight into opening to inspect wheel. If cleaning is required, remove motor and wheel as follows:

1. Slide burner access panel out.
2. Remove the 5 screws that attach induced-draft motor assembly to the vestibule cover.
3. Slide the motor and blower wheel assembly out of the blower housing. The blower wheel can be cleaned at this point. If additional cleaning is required, continue with Steps 4 and 5.
4. To remove blower from the motor shaft, remove 2 setscrews.
5. To remove motor, remove the 4 screws that hold the motor to mounting plate. Remove the motor cooling fan by removing one setscrew. Then remove nuts that hold motor to mounting plate.
6. To reinstall, reverse the procedure outlined above.

**Limit Switch** — Remove blower access panel (Fig. 7). Limit switch is located on the fan deck.

**Burner Ignition** — Unit is equipped with a direct spark ignition 100% lockout system. Integrated Gas Unit Controller (IGC) is located in the control box (Fig. 12). A single LED on the IGC provides a visual display of operational or sequential problems when the power supply is uninterrupted. The LED can be observed through the viewport. When a break in power occurs, the IGC will be reset (resulting in a loss of fault history) and the evaporator fan on/off times delay will be reset. During servicing, refer to the label on the control box cover or Table 33 for an explanation of LED error code descriptions.

If lockout occurs, unit may be reset by interrupting power supply to unit for at least 5 seconds.

**Table 33 — LED Error Code Description\***

LED INDICATION	ERROR CODE DESCRIPTION
ON	Normal Operation
OFF	Hardware Failure
1 Flash†	Evaporator Fan On/Off Delay Modified
2 Flashes	Limit Switch Fault
3 Flashes	Flame Sense Fault
4 Flashes	4 Consecutive Limit Switch Faults
5 Flashes	Ignition Lockout Fault
6 Flashes	Induced-Draft Motor Fault
7 Flashes	Rollout Switch Fault
8 Flashes	Internal Control Fault
9 Flashes	Software Lockout

**LEGEND**

**LED** — Light-Emitting Diode

\*A 3-second pause exists between LED error code flashes. If more than one error code exists, all applicable codes will be displayed in numerical sequence.

†Indicates a code that is not an error. The unit will continue to operate when this code is displayed.

**IMPORTANT:** Refer to Troubleshooting Tables 34-38 for additional information.


**Main Burners** — At the beginning of each heating season, inspect for deterioration or blockage due to corrosion or other causes. Observe the main burner flames and adjust, if necessary.

**CAUTION**


When servicing gas train, do not hit or plug orifice spuds.

**REMOVAL AND REPLACEMENT OF GAS TRAIN**  
(See Fig. 64 and 65)

1. Shut off manual gas valve.
2. Shut off power to unit, tag disconnect.
3. Remove compressor access panel.
4. Slide out burner compartment side panel.
5. Disconnect gas piping at unit gas valve.
6. Remove wires connected to gas valve. Mark each wire.
7. Remove induced-draft motor, ignitor, and sensor wires at the Integrated Gas Unit Controller (IGC).
8. Remove the 2 screws that attach the burner rack to the vestibule plate.
9. Remove the gas valve bracket.
10. Slide the burner tray out of the unit (Fig. 65).
11. To reinstall, reverse the procedure outlined above.

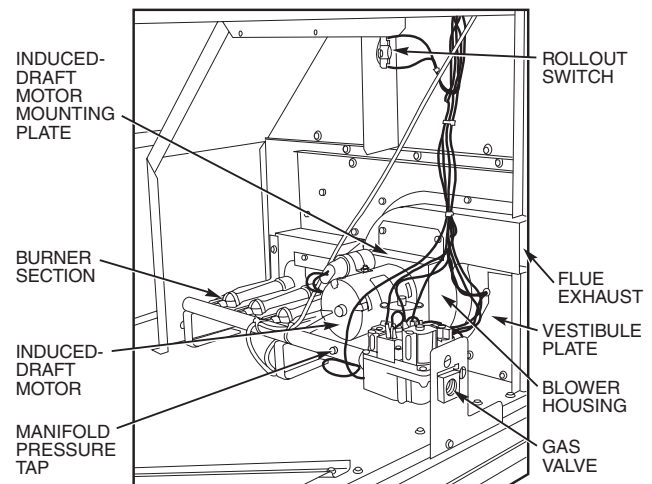

**Fig. 64 — Burner Section Details**

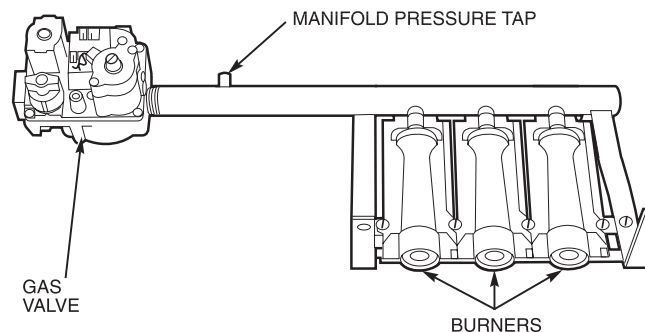


**Fig. 65 — Burner Tray Details**



## CLEANING AND ADJUSTMENT


1. Remove burner rack from unit as described above.
2. Inspect burners and, if dirty, remove burners from rack.
3. Using a soft brush, clean burners and cross-over port as required.
4. Adjust spark gap. See Fig. 66.
5. Reinstall burners on rack.
6. Reinstall burner rack as described above.

**Replacement Parts** — A complete list of replacement parts may be obtained from any Carrier distributor upon request. Refer to Fig. 67 for a typical unit wiring schematic.

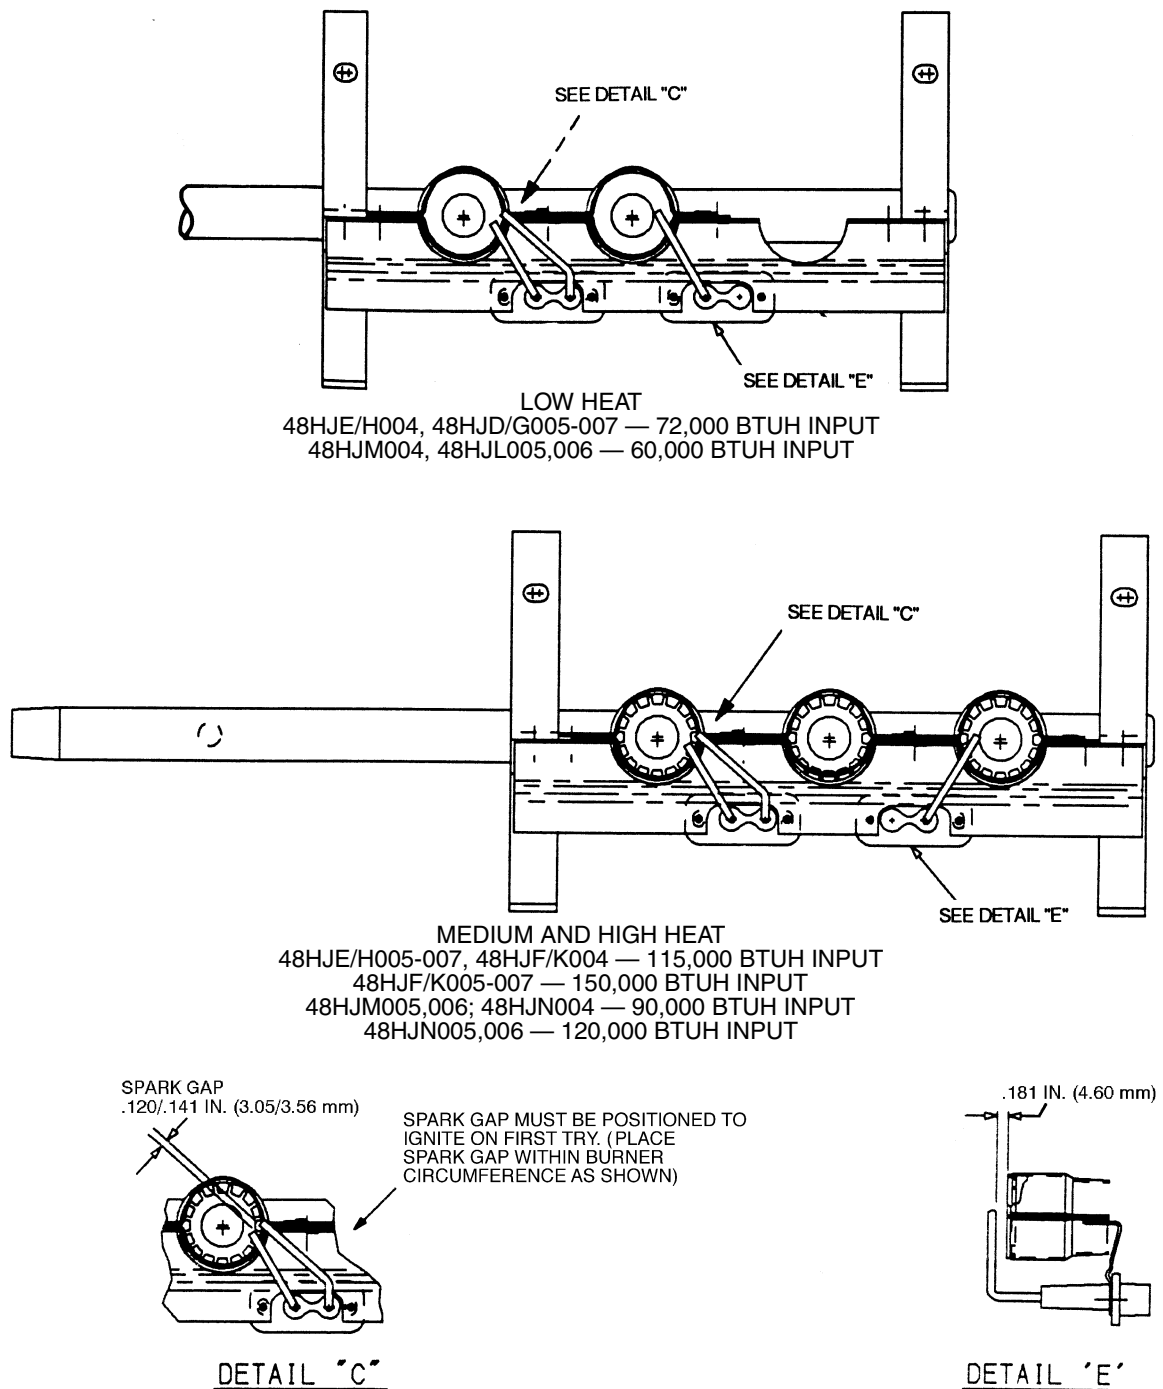

**Fig. 66 — Spark Gap Adjustment**

# SCHEMATIC 208/230-3-60

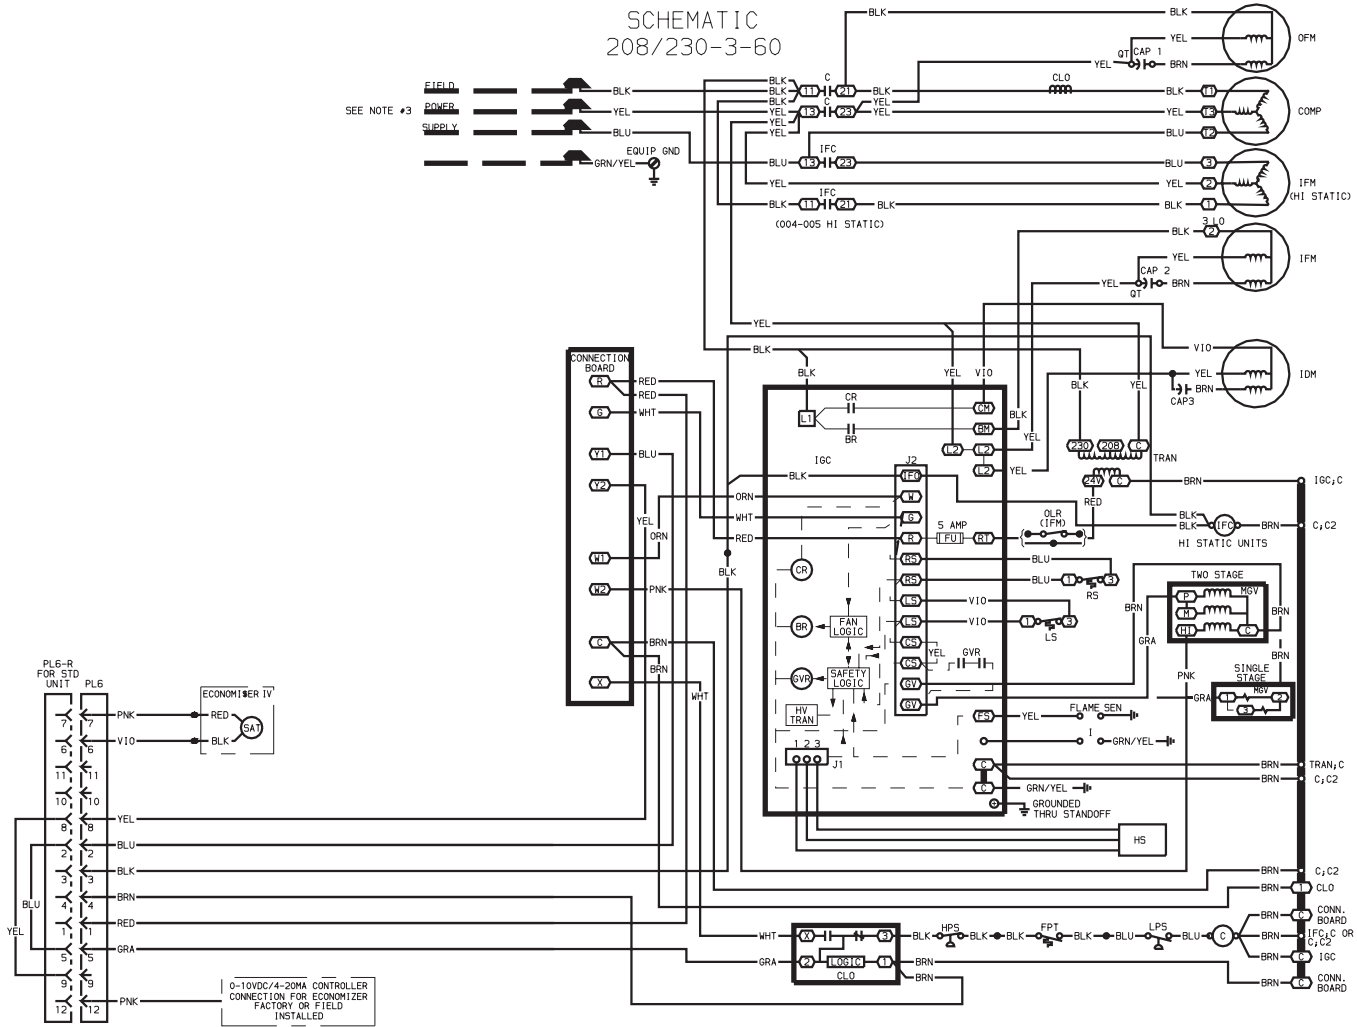

## NOTES:

1. If any of the original wire furnished must be replaced, it must be replaced with type 90 C wire or its equivalent.
2. Three phase motors are protected under primary single phasing conditions.
3. Use copper conductors only.
4. TRAN is wired for 230 v unit. If unit is to be run with 208 v power supply, disconnect BLK wire from 230 v tap (ORN) and connect to 208 v tap (RED). Insulate end of 230 v tap.

## LEGEND

**C** — Contactor, Compressor  
**CAP** — Capacitor  
**CLO** — Compressor Lockout  
**COMP** — Compressor Motor  
**EQUIP** — Equipment  
**FPT** — Freeze Up Protection Thermostat  
**FU** — Fuse  
**GND** — Ground  
**HPS** — High-Pressure Switch  
**HS** — Hall-Effect Sensor  
**I** — Ignitor  
**IDM** — Induced-Draft Motor  
**IFC** — Indoor Fan Contactor  
**IFM** — Indoor Fan Motor  
**IGC** — Integrated Gas Unit Controller  
**LPS** — Low-Pressure Switch  
**LS** — Limit Switch  
**MGV** — Main Gas Valve

**OFM** — Outdoor (Condenser) Fan Motor  
**OLR** — Overload Relay  
**P** — Plug  
**PL** — Plug Assembly  
**QT** — Quadruple Terminal  
**RS** — Rollout Switch  
**SAT** — Supply Air Temperature Sensor  
**TRAN** — Transformer  
  
 Field Splice  
 Marked Wire  
 Terminal (Marked)  
 Terminal (Unmarked)  
 Terminal Block

Splice  
 Splice (Marked)  
 Factory Wiring  
 Field Control Wiring  
 Field Power Wiring  
 Accessory or Optional Wiring  
 To indicate common potential only; not to represent wiring.

**Fig. 67 — Typical Wiring Schematic and Component Arrangement (208/230-3-60 Shown)**

## TROUBLESHOOTING

**Unit Troubleshooting** — Refer to Tables 34-38 for unit troubleshooting details.

**Table 34 — LED Error Code Service Analysis**

SYMPTOM	CAUSE	REMEDY
<b>Hardware Failure. (LED OFF)</b>	Loss of power to control module (IGC).	Check 5 amp fuse on IGC, power to unit, 24-v circuit breaker, and transformer. Units without a 24-v circuit breaker have an internal overload in the 24-v transformer. If the overload trips, allow 10 minutes for automatic reset.
<b>Fan ON/OFF Delay Modified (LED/FLASH)</b>	High limit switch opens during heat exchanger warm-up period before fan-on delay expires.  Limit switch opens within three minutes after blower-off delay timing in Heating mode.	Ensure unit is fired on rate and temperature rise is correct.  Ensure units' external static pressure is within application guidelines.
<b>Limit Switch Fault. (LED 2 Flashes)</b>	High temperature limit switch is open.	Check the operation of the indoor (evaporator) fan motor. Ensure that the supply-air temperature rise is in accordance with the range on the unit nameplate.
<b>Flame Sense Fault. (LED 3 Flashes)</b>	The IGC sensed flame that should not be present.	Reset unit. If problem persists, replace control board.
<b>4 Consecutive Limit Switch Faults. (LED 4 Flashes)</b>	Inadequate airflow to unit.	Check operation of indoor (evaporator) fan motor and that supply-air temperature rise agrees with range on unit nameplate information.
<b>Ignition Lockout. (LED 5 Flashes)</b>	Unit unsuccessfully attempted ignition for 15 minutes.	Check ignitor and flame sensor electrode spacing, gaps, etc. Ensure that flame sense and ignition wires are properly terminated. Verify that unit is obtaining proper amount of gas.
<b>Induced-Draft Motor Fault. (LED 6 Flashes)</b>	IGC does not sense that induced-draft motor is operating.	Check for proper voltage. If motor is operating, check the speed sensor plug/IGC Terminal J2 connection. Proper connection: PIN 1 — White, PIN 2 — Red, PIN 3 — Black.
<b>Rollout Switch Fault. (LED 7 Flashes)</b>	Rollout switch has opened.	Rollout switch will automatically reset, but IGC will continue to lock out unit. Check gas valve operation. Ensure that induced-draft blower wheel is properly secured to motor shaft. Reset unit at unit disconnect.
<b>Internal Control Fault. (LED 8 Flashes)</b>	Microprocessor has sensed an error in the software or hardware.	If error code is not cleared by resetting unit power, replace the IGC.
<b>Temporary Software Lockout (LED 9 Flashes)</b>	Electrical interference is impeding the IGC software.	Reset 24-v to control board or turn thermostat off and then on. Fault will automatically reset itself in one hour.

### ⚠ CAUTION

If the IGC must be replaced, be sure to ground yourself to dissipate any electrical charge that may be present before handling new control board. The IGC is sensitive to static electricity and may be damaged if the necessary precautions are not taken.

**IMPORTANT:** Refer to heating troubleshooting for additional heating section troubleshooting information.

#### LEGEND

**IGC** — Integrated Gas Unit Controller  
**LED** — Light-Emitting Diode

**Table 35 — Heating Service Analysis**

PROBLEM	CAUSE	REMEDY
<b>Burners Will Not Ignite.</b>	Misaligned spark electrodes.	Check flame ignition and sensor electrode positioning. Adjust as needed.
	No gas at main burners.	Check gas line for air purge as necessary. After purging gas line of air, allow gas to dissipate for at least 5 minutes before attempting to relight unit. Check gas valve.
	Water in gas line.	Drain water and install drip leg to trap water.
	No power to furnace.	Check power supply, fuses, wiring, and circuit breaker.
	No 24 v power supply to control circuit.	Check transformer. Transformers with internal overcurrent protection require a cool-down period before resetting. Check 24-v circuit breaker; reset if necessary.
	Miswired or loose connections.	Check all wiring and wirenut connections.
	Burned-out heat anticipator in thermostat.	Replace thermostat.
	Broken thermostat wires.	Run continuity check. Replace wires, if necessary.
<b>Inadequate Heating.</b>	Dirty air filter.	Clean or replace filter as necessary.
	Gas input to unit too low.	Check gas pressure at manifold. Clock gas meter for input. If too low, increase manifold pressure or replace with correct orifices.
	Unit undersized for application.	Replace with proper unit or add additional unit.
	Restricted airflow.	Clean filter, replace filter, or remove any restrictions.
	Blower speed too low.	Use high speed tap, increase fan speed, or install optional blower, as suitable for individual units. Adjust pulley.
	Limit switch cycles main burners.	Check rotation of blower, thermostat heat anticipator settings, and temperature rise of unit. Adjust as needed.
	Too much outdoor air.	Adjust minimum position. Check economizer operation.
<b>Poor Flame Characteristics.</b>	Incomplete combustion (lack of combustion air) results in: Aldehyde odors, CO (carbon monoxide), sooting flame, or floating flame.	Check all screws around flue outlets and burner compartment. Tighten as necessary.
		Cracked heat exchanger.
		Overfired unit — reduce input, change orifices, or adjust gas line or manifold pressure.
		Check vent for restriction. Clean as necessary.
		Check orifice to burner alignment.
<b>Burners Will Not Turn Off.</b>	Unit is locked into Heating mode for a one minute minimum.	Wait until mandatory one-minute time period has elapsed or reset power to unit.

**Table 36 — Humidi-MiZer™ Adaptive Dehumidification System Subcooling Mode Service Analysis**

PROBLEM	CAUSE	REMEDY
<b>Subcooling Mode (Liquid Reheat) Will Not Energize.</b>	No power to control transformer from evaporator-fan motor.	Check power source and evaporator-fan relay. Ensure all wire connections are tight.
	No power from control transformer to liquid line solenoid valve.	1. Fuse open; check fuse. Ensure continuity of wiring. 2. Low-pressure switch open. Cycle unit off and allow low-pressure switch to reset. Replace switch if it will not close. 3. Transformer bad; check transformer.
	Liquid line solenoid valve will not operate.	1. Solenoid coil defective; replace. 2. Solenoid valve stuck open; replace.
	Liquid line solenoid valve will not open.	Valve is stuck closed; replace valve.
<b>Low System Capacity.</b>	Low refrigerant charge or frosted evaporator coil.	1. Check charge amount. Charge per Fig. 60-63. 2. Evaporator coil frosted; check and replace low-pressure switch if necessary.
<b>Loss of Compressor Superheat Conditions with Subcooling/Reheat Dehumidification Coil Energized.</b>	Thermostatic expansion valve (TXV).	1. Check TXV bulb mounting, and secure tightly to suction line. 2. Replace TXV if stuck open or closed.

**Table 37 — Humidi-MiZer™ Adaptive Dehumidification System Hot Gas Reheat Mode Service Analysis**

PROBLEM	CAUSE	REMEDY
<b>Reheat Mode Will Not Energize.</b>	No power to control transformer from evaporator-fan motor.	Check power source and evaporator-fan relay. Ensure all wire connections are tight.
	No power from control transformer to hot gas line solenoid valve	1. Fuse open; check fuse. Ensure continuity of wiring. 2. Low-pressure switch open. Cycle unit off and allow low-pressure switch to reset. Replace switch if it will not close. 3. Transformer bad; check transformer.
	Hot gas line solenoid valve will not operate.	1. Solenoid coil defective; replace. 2. Solenoid valve stuck closed; replace.
	Low refrigerant charge or frosted evaporator coil.	1. Check charge amount. Charge per Fig. 60-63. 2. Evaporator coil frosted; check and replace low-pressure switch if necessary.
<b>Loss of Compressor Superheat Conditions with Subcooling/Reheat Dehumidification Coil Energized.</b>	Thermostatic expansion valve (TXV).	1. Check TXV bulb mounting, and secure tightly to suction line. 2. Replace TXV if stuck open or closed.
<b>Excessive Superheat.</b>	Liquid line solenoid valve will not operate.	Valve is stuck, replace valve.
	Hot gas line solenoid valve will not close.	Valve is stuck; replace valve.

**Table 38 — Cooling Service Analysis**

PROBLEM	CAUSE	REMEDY
<b>Compressor and Condenser Fan Will Not Start.</b>	Power failure.	Call power company.
	Fuse blown or circuit breaker tripped.	Replace fuse or reset circuit breaker.
	Defective thermostat, contactor, transformer, or control relay.	Replace component.
	Insufficient line voltage.	Determine cause and correct.
	Incorrect or faulty wiring.	Check wiring diagram and rewire correctly.
	Thermostat setting too high.	Lower thermostat setting below room temperature.
<b>Compressor Will Not Start But Condenser Fan Runs.</b>	Faulty wiring or loose connections in compressor circuit.	Check wiring and repair or replace.
	Compressor motor burned out, seized, or internal overload open.	Determine cause. Replace compressor.
	Defective run/start capacitor, overload, start relay.	Determine cause and replace.
	One leg of 3-phase power dead.	Replace fuse or reset circuit breaker. Determine cause.
<b>Compressor Cycles (Other Than Normally Satisfying Thermostat).</b>	Refrigerant overcharge or undercharge.	Recover refrigerant, evacuate system, and recharge to nameplate.
	Defective compressor.	Replace and determine cause.
	Insufficient line voltage.	Determine cause and correct.
	Blocked condenser.	Determine cause and correct.
	Defective run/start capacitor, overload, or start relay.	Determine cause and replace.
	Defective thermostat.	Replace thermostat.
	Faulty condenser-fan motor or capacitor.	Replace.
	Restriction in refrigerant system.	Locate restriction and remove.
<b>Compressor Operates Continuously.</b>	Dirty air filter.	Replace filter.
	Unit undersized for load.	Decrease load or increase unit size.
	Thermostat set too low.	Reset thermostat.
	Low refrigerant charge.	Locate leak, repair, and recharge.
	Leaking valves in compressor.	Replace compressor.
	Air in system.	Recover refrigerant, evacuate system, and recharge.
	Condenser coil dirty or restricted.	Clean coil or remove restriction.
<b>Excessive Head Pressure.</b>	Dirty air filter.	Replace filter.
	Dirty condenser coil.	Clean coil.
	Refrigerant overcharged.	Recover excess refrigerant.
	Air in system.	Recover refrigerant, evacuate system, and recharge.
	Condenser air restricted or air short-cycling.	Determine cause and correct.
<b>Head Pressure Too Low.</b>	Low refrigerant charge.	Check for leaks, repair, and recharge.
	Compressor valves leaking.	Replace compressor.
	Restriction in liquid tube.	Remove restriction.
<b>Excessive Suction Pressure.</b>	High heat load.	Check for source and eliminate.
	Compressor valves leaking.	Replace compressor.
	Refrigerant overcharged.	Recover excess refrigerant.
<b>Suction Pressure Too Low.</b>	Dirty air filter.	Replace filter.
	Low refrigerant charge.	Check for leaks, repair, and recharge.
	Metering device or low side restricted.	Remove source of restriction.
	Insufficient evaporator airflow.	Increase air quantity. Check filter and replace if necessary.
	Temperature too low in conditioned area.	Reset thermostat.
	Outdoor ambient below 25 F.	Install low-ambient kit.
<b>Evaporator Fan Will Not Shut Off.</b>	Time off delay not finished.	Wait for 30-second off delay.

## EconoMi\$er IV Troubleshooting — See Table 39 for EconoMi\$er IV logic.

A functional view of the EconoMi\$er is shown in Fig. 68. Typical settings, sensor ranges, and jumper positions are also shown. An EconoMi\$er IV simulator program is available from Carrier to help with EconoMi\$er IV training and troubleshooting.

**ECONOMISER IV PREPARATION** — This procedure is used to prepare the EconoMi\$er IV for troubleshooting. No troubleshooting or testing is done by performing the following procedure.

**NOTE:** This procedure requires a 9-v battery, 1.2 kilo-ohm resistor, and a 5.6 kilo-ohm resistor which are not supplied with the EconoMi\$er IV.

**IMPORTANT:** Be sure to record the positions of all potentiometers before starting troubleshooting.

1. Disconnect power at TR and TR1. All LEDs should be off. Exhaust fan contacts should be open.
2. Disconnect device at P and P1.
3. Jumper P to P1.
4. Disconnect wires at T and T1. Place 5.6 kilo-ohm resistor across T and T1.
5. Jumper TR to 1.
6. Jumper TR to N.
7. If connected, remove sensor from terminals S<sub>O</sub> and +. Connect 1.2 kilo-ohm 4074EJM checkout resistor across terminals S<sub>O</sub> and +.
8. Put 620-ohm resistor across terminals S<sub>R</sub> and +.
9. Set minimum position, DCV set point, and exhaust potentiometers fully CCW (counterclockwise).
10. Set DCV maximum position potentiometer fully CW (clockwise).
11. Set enthalpy potentiometer to D.
12. Apply power (24 vac) to terminals TR and TR1.

**DIFFERENTIAL ENTHALPY** — To check differential enthalpy:

1. Make sure EconoMi\$er IV preparation procedure has been performed.
2. Place 620-ohm resistor across S<sub>O</sub> and +.
3. Place 1.2 kilo-ohm resistor across S<sub>R</sub> and +. The Free Cool LED should be lit.
4. Remove 620-ohm resistor across S<sub>O</sub> and +. The Free Cool LED should turn off.
5. Return EconoMi\$er IV settings and wiring to normal after completing troubleshooting.

**SINGLE ENTHALPY** — To check single enthalpy:

1. Make sure EconoMi\$er IV preparation procedure has been performed.
2. Set the enthalpy potentiometer to A (fully CCW). The Free Cool LED should be lit.
3. Set the enthalpy potentiometer to D (fully CW). The Free Cool LED should turn off.
4. Return EconoMi\$er IV settings and wiring to normal after completing troubleshooting.

**DCV (DEMAND CONTROLLED VENTILATION) AND POWER EXHAUST** — To check DCV and Power Exhaust:

1. Make sure EconoMi\$er IV preparation procedure has been performed.
2. Ensure terminals AQ and AQ1 are open. The LED for both DCV and Exhaust should be off. The actuator should be fully closed.

3. Connect a 9-v battery to AQ (positive node) and AQ1 (negative node). The LED for both DCV and Exhaust should turn on. The actuator should drive to between 90 and 95% open.
4. Turn the Exhaust potentiometer CW until the Exhaust LED turns off. The LED should turn off when the potentiometer is approximately 90%. The actuator should remain in position.
5. Turn the DCV set point potentiometer CW until the DCV LED turns off. The DCV LED should turn off when the potentiometer is approximately 9-v. The actuator should drive fully closed.
6. Turn the DCV and Exhaust potentiometers CCW until the Exhaust LED turns on. The exhaust contacts will close 30 to 120 seconds after the Exhaust LED turns on.
7. Return EconoMi\$er IV settings and wiring to normal after completing troubleshooting.

**DCV MINIMUM AND MAXIMUM POSITION** — To check the DCV minimum and maximum position:

1. Make sure EconoMi\$er IV preparation procedure has been performed.
2. Connect a 9-v battery to AQ (positive node) and AQ1 (negative node). The DCV LED should turn on. The actuator should drive to between 90 and 95% open.
3. Turn the DCV Maximum Position potentiometer to mid-point. The actuator should drive to between 20 and 80% open.
4. Turn the DCV Maximum Position potentiometer to fully CCW. The actuator should drive fully closed.
5. Turn the Minimum Position potentiometer to midpoint. The actuator should drive to between 20 and 80% open.
6. Turn the Minimum Position Potentiometer fully CW. The actuator should drive fully open.
7. Remove the jumper from TR and N. The actuator should drive fully closed.
8. Return EconoMi\$er IV settings and wiring to normal after completing troubleshooting.

**SUPPLY-AIR INPUT** — To check supply-air input:

1. Make sure EconoMi\$er IV preparation procedure has been performed.
2. Set the Enthalpy potentiometer to A. The Free Cool LED turns on. The actuator should drive to between 20 and 80% open.
3. Remove the 5.6 kilo-ohm resistor and jumper T to T1. The actuator should drive fully open.
4. Remove the jumper across T and T1. The actuator should drive fully closed.
5. Return EconoMi\$er IV settings and wiring to normal after completing troubleshooting.

**ECONOMISER IV TROUBLESHOOTING COMPLETION** — This procedure is used to return the EconoMi\$er IV to operation. No troubleshooting or testing is done by performing the following procedure.

1. Disconnect power at TR and TR1.
2. Set enthalpy potentiometer to previous setting.
3. Set DCV maximum position potentiometer to previous setting.
4. Set minimum position, DCV set point, and exhaust potentiometers to previous settings.
5. Remove 620-ohm resistor from terminals S<sub>R</sub> and +.
6. Remove 1.2 kilo-ohm checkout resistor from terminals S<sub>O</sub> and +. If used, reconnect sensor from terminals S<sub>O</sub> and +.

7. Remove jumper from TR to N.
8. Remove jumper from TR to 1.
9. Remove 5.6 kilo-ohm resistor from T and T1. Reconnect wires at T and T1.

10. Remove jumper from P to P1. Reconnect device at P and P1.
11. Apply power (24 vac) to terminals TR and TR1.

**Table 39 — EconoMiSer IV Input/Output Logic**

INPUTS					OUTPUTS				
Demand Control Ventilation (DCV)	Enthalpy*		Y1	Y2	Compressor		N Terminal†		
	Outdoor	Return			Stage 1	Stage 2	Occupied	Unoccupied	
			Damper						
			Below set (DCV LED Off)	High (Free Cooling LED Off)	Low	On	On	On	On
On	Off	On				Off			
Off	Off	Off				Off			
Low (Free Cooling LED On)	High	On		On	On	Off	Modulating** (between min. position and full-open)	Modulating** (between closed and full-open)	
		On		Off	Off	Off			
		Off		Off	Off	Off			
Above set (DCV LED On)	High (Free Cooling LED Off)	Low	On	On	On	On	Modulating††† (between min. position and DCV maximum)	Modulating††† (between closed and DCV maximum)	
			On	Off	On	Off			
			Off	Off	Off	Off			
	Low (Free Cooling LED On)	High	On	On	On	Off	Modulating***	Modulating†††	
			On	Off	Off	Off			
			Off	Off	Off	Off			

\*For single enthalpy control, the module compares outdoor enthalpy to the ABCD set point.


†Power at N terminal determines Occupied/Unoccupied setting: 24 vac (Occupied), no power (Unoccupied).

\*\*Modulation is based on the supply-air sensor signal.

††Modulation is based on the DCV signal.

\*\*\*Modulation is based on the greater of DCV and supply-air sensor signals, between minimum position and either maximum position (DCV) or fully open (supply-air signal).

†††Modulation is based on the greater of DCV and supply-air sensor signals, between closed and either maximum position (DCV) or fully open (supply-air signal).

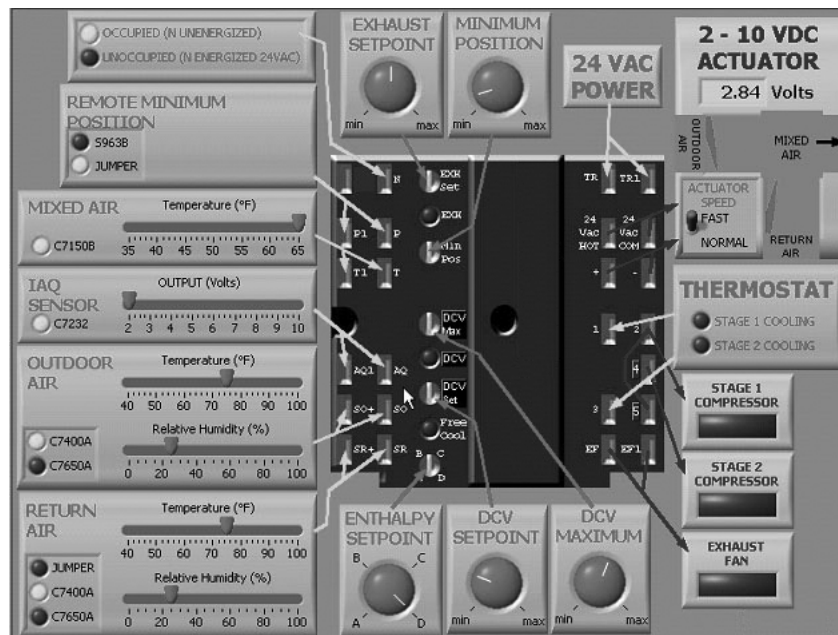

**Fig. 68 — EconoMiSer IV Functional View**



# INDEX

- Access panels 19
- Altitude compensation 38
- Barometric flow capacity 21
- Burner ignition 46
- Burner rack 46
- Burner section 46
- Burner spark gap 47
- Carrier Comfort Network 15
- Charging chart, refrigerant 44, 45
- Clearance 6
- CO<sub>2</sub> sensor
  - Configuration 25
  - Settings 23, 25
- Combustion blower wheel 46
- Compressor
  - Lubrication 43
  - Mounting 37
  - Rotation 37
- Condensate drain
  - Cleaning 42
  - Location 4
- Condenser coil 8
  - Cleaning 42
- Condenser fan 8
  - Adjustment 43
- Control circuit
  - Wiring 7
  - Wiring raceway 10
- Convenience outlet 15
- Demand control ventilation 24
  - Dehumidification 25
- Dimensions 3, 6
- Ductwork 2
- EconoMi\$er2 18
  - 4 to 20 mA control 20
  - Wiring 20
- EconoMi\$er IV 18-25
  - Control mode 21
  - Damper movement 24
  - Troubleshooting 52, 53
  - Wiring 20
- Electrical connections 5
- Electrical data 11, 12
- Enthalpy changeover set points 23
- Evaporator coil 8
  - Cleaning 42
- Evaporator fan motor
  - Lubrication 43
  - Motor data 27
  - Performance 28-36
  - Pulley adjustment 25, 26
  - Pulley setting 8, 26
  - Speed 8
- Factory-installed options
  - Convenience outlet 15
  - EconoMi\$er IV 18-25
  - EconoMi\$er2 18
  - Humidistat 13
  - Humidi-MiZer™ dehumidification system 14
  - Manual outdoor air damper 13
  - Novar controls 15
  - PremierLink™ controls 15-17
- Filter
  - Cleaning 42
  - Installation 19
  - Size 9
- Flue gas passageways 46
- Flue hood 5, 7
- Freeze protection thermostat 9, 43
- Gas connection 9
- Gas input 9
- Gas piping 5, 7, 37
- Gas pressure 1, 9
- Heat anticipator settings 7, 9
- Heat exchanger 9
- High flow valves 37
- High pressure switch 9, 43
- Horizontal units 1, 2
- Humidistat 13
- Humidi-MiZer adaptive dehumidification system 13, 26, 41, 42, 44, 45, 50
- Indoor-air quality (IAQ) sensor 15, 23
- Integrated gas controller 46
  - Error codes 46, 49
- Leak test 37
- Limit switch 46
- Liquid propane 9
- Low pressure switch 9, 43
- Main burners 38, 46
- Manual outdoor air damper 13
- Mounting
  - Compressor 37
  - Unit 4
- Natural gas 9
- Novar controls 15
- Operating limits 2
- Operating sequence 39-42
  - Cooling 39
  - EconoMi\$er IV 39
  - EconoMi\$er2 39-41
  - Heating 39
  - Humidi-MiZer adaptive dehumidification system 41, 42
- Outdoor air hood 14, 15, 19
- Outdoor air inlet screens 9, 37, 42
- Outdoor-air temperature sensor 15, 21
- Physical data 8, 9
- Power supply 5
  - Wiring 10
- PremierLink controls 15-17
- Pressure, drop
  - EconoMi\$er IV 36
  - EconoMi\$er2 36
  - Humidi-MiZer adaptive dehumidification system 26
- Pre-Start-Up 37
- Pressure switches
  - High pressure 9
  - Low pressure 9
- Refrigerant
  - Charge 8, 43
  - Type 8
- Refrigerant service ports 37
- Replacement parts 47
- Return air filter 9, 37
- Return-air temperature sensor 22
- Rigging unit 4, 5
- Roof curb
  - Assembly 1
  - Dimensions 3
  - Connector package 3
  - Leveling tolerances 4
  - Weight 8
- Safety considerations 1
- Safety relief 39
- Service 42-48
- Service ports 37
- Slab mount 2
- Start-up 37-42
- Start-up checklist CL-1
- Supply-air temperature sensor 15, 21
- Thermostat 10
- Troubleshooting 49-53
- Ventilation 39
- Weight
  - Corner 6
  - EconoMi\$er IV 6, 8
  - Unit 5, 6, 8
- Wiring
  - 4 to 20 mA control 20
  - Differential enthalpy 18
  - Humidistat 14
  - EconoMi\$er2 20
  - EconoMi\$er IV 20
  - Power connections 10
  - PremierLink control 10, 17
  - Thermostat 10
  - Unit 48



## START-UP CHECKLIST

(Remove and Store in Job File)

### I. PRELIMINARY INFORMATION

MODEL NO.: \_\_\_\_\_ SERIAL NO.: \_\_\_\_\_  
DATE: \_\_\_\_\_ TECHNICIAN: \_\_\_\_\_

### II. PRE-START-UP (insert checkmark in box as each item is completed)

- ☐ VERIFY THAT JOBSITE VOLTAGE AGREES WITH VOLTAGE LISTED ON RATING PLATE
- ☐ VERIFY THAT ALL PACKING MATERIALS HAVE BEEN REMOVED FROM UNIT
- ☐ REMOVE ALL SHIPPING HOLDDOWN BOLTS AND BRACKETS PER INSTALLATION INSTRUCTIONS
- ☐ VERIFY THAT CONDENSATE CONNECTION IS INSTALLED PER INSTALLATION INSTRUCTIONS
- ☐ CHECK ALL ELECTRICAL CONNECTIONS AND TERMINALS FOR TIGHTNESS
- ☐ CHECK GAS PIPING FOR LEAKS
- ☐ CHECK THAT RETURN (INDOOR) AIR FILTERS ARE CLEAN AND IN PLACE
- ☐ VERIFY THAT UNIT INSTALLATION IS LEVEL
- ☐ CHECK FAN WHEELS AND PROPELLER FOR LOCATION IN HOUSING/ORIFICE AND SETSCREW TIGHTNESS
- ☐ CHECK TO ENSURE THAT ELECTRICAL WIRING IS NOT IN CONTACT WITH REFRIGERANT LINES OR SHARP METAL EDGES
- ☐ CHECK PULLEY ALIGNMENT AND BELT TENSION PER INSTALLATION INSTRUCTIONS

### III. START-UP

#### ELECTRICAL

SUPPLY VOLTAGE	L1-L2	_____	L2-L3	_____	L3-L1	_____
COMPRESSOR AMPS	L1	_____	L2	_____	L3	_____
INDOOR-FAN AMPS	L1	_____	L2	_____	L3	_____

#### TEMPERATURES

OUTDOOR-AIR TEMPERATURE	_____	DB	
RETURN-AIR TEMPERATURE	_____	DB	_____ WB
COOLING SUPPLY AIR	_____	DB	
GAS HEAT SUPPLY AIR	_____	DB	

#### PRESSURES

GAS INLET PRESSURE	_____	IN. WG
GAS MANIFOLD PRESSURE	_____	IN. WG (HIGH FIRE)
REFRIGERANT SUCTION	_____	PSIG
REFRIGERANT DISCHARGE	_____	PSIG

- ☐ VERIFY REFRIGERANT CHARGE USING CHARGING TABLES
- ☐ VERIFY THAT 3-PHASE SCROLL COMPRESSOR ROTATING IN CORRECT DIRECTION

CUT ALONG DOTTED LINE

CUT ALONG DOTTED LINE